


# LUNGING PUMPKIN CARVER™

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN









**WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED: STAY CLEAR OF THE PROP WHILE OPERATING**

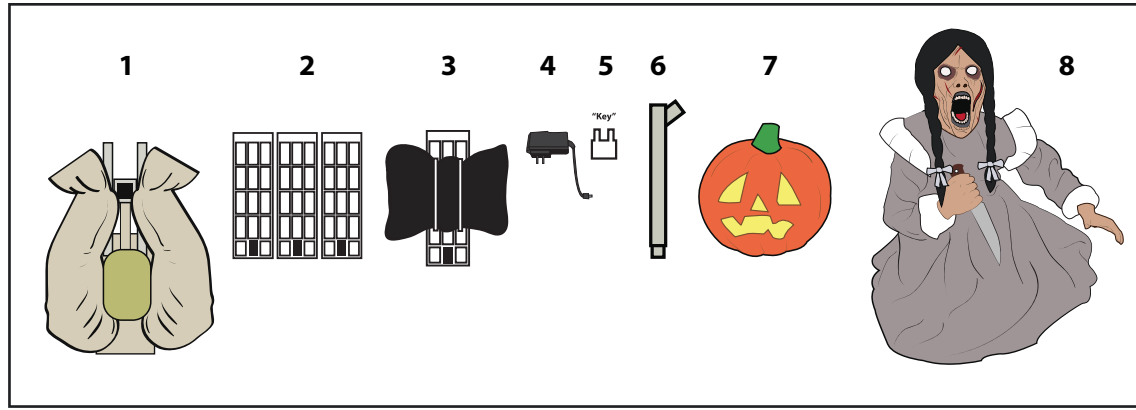

### PARTS

1. MODULE
2. FRONT AND SIDE FEET (3)
3. BACK FOOT WITH WEIGHT
4. 6V2A ADAPTER
5. FOOT REMOVAL KEY
6. POLE
7. PUMPKIN
8. BODY& HEAD

1. Snap lock FRONT FOOT AND SIDE FEET into the bottom of MODULE.(Match A to A)
2. IMPORTANT: Press to make sure each FOOT is flush with MODULE. To remove FOOT, insert FOOT REMOVAL KEY (included) into holes on bottom to release locks, twist and pull.
3. Insert BACK FOOT WITH WEIGHT into the bottom of the MODULE. (Match B to B) To avoid damage do not pick item up while BACK FOOT is attached.
4. Push in circular locking pin located beneath the dress on the BODY & HEAD. Insert pole and release locking pin when pole is firmly seated. (Match C to C)
5. Push in circular locking pin located on the module pole and insert pole connected to the BODY & HEAD. Release locking pin when Head & Body are firmly seated. (Match D to D)
6. Insert wire from MODULE into wire coming from BODY & HEAD. (Match E to E)
7. Place PUMPKIN in front of assembled BODY&HEAD, then insert the wires from MODULE into wire coming from PUMPKIN and wire underneath the dress. (Match F to F) and (Match G to G)
8. Connect 6V2A ADAPTER (included) or insert 4 AA alkaline batteries into the battery compartment located on the MODULE. Turn the switch to the ON position to operate in Sound or IR SENSOR activation mode. Make a loud sound (clap), or move in front of the item to activate. Adjust volume control knob as needed. Turn item OFF when not in use.

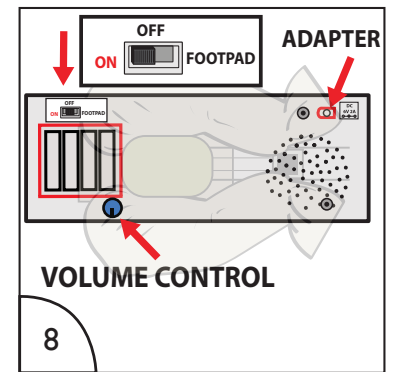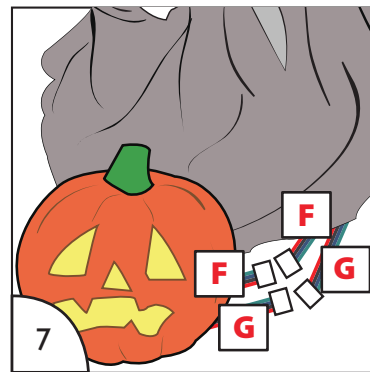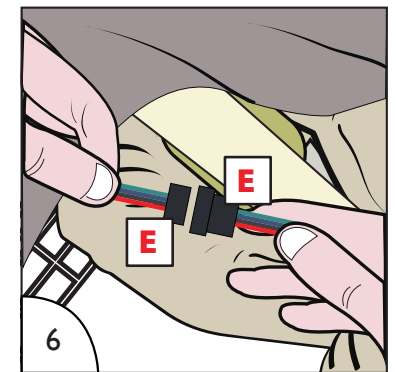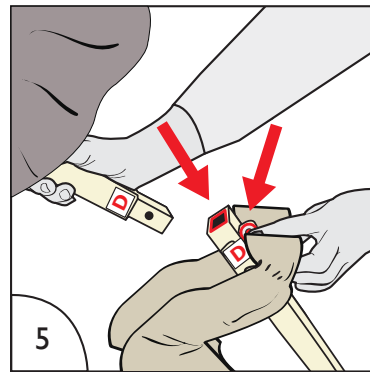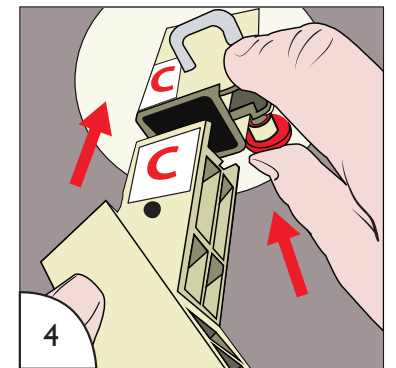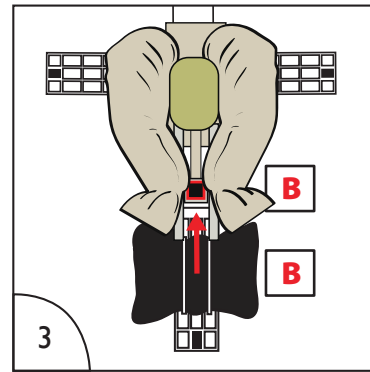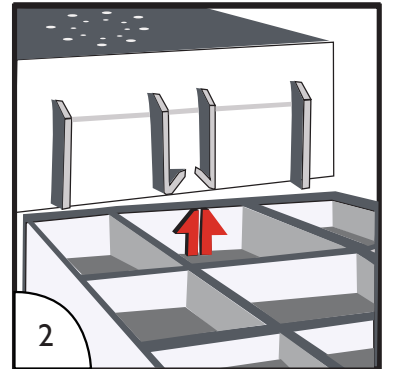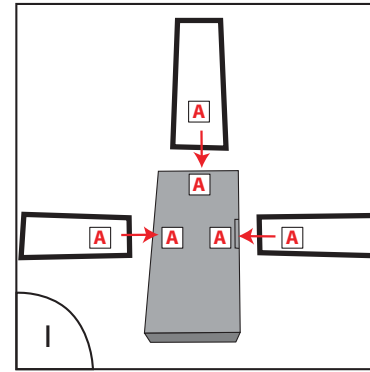


**IR SENSOR NOTE:** The sensing distance and the ambient temperature are directly related. When the ambient air temperature is cooler (farther from body temperature (98.6° F)), the sensor distance will be longer. When the ambient air temperature is warmer (closer to body temperature (98.6° F)), the sensing distance will be shorter.

9. Position dress around MODULE. Attach dress to FEET with hook and loop fasteners. Position the hands and arms to match illustration and position pumpkin out in front of the assembled BODY with enough distance for the item to activate optimally.

### OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Plug speaker cord into the jack labeled SPEAKER JACK located on top of the MODULE.
2. Use volume knob on external speaker to control volume levels.

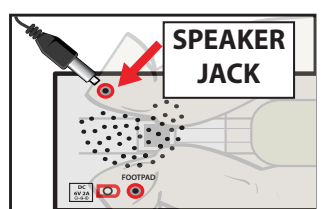


### OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Connect the footpad cable into the jack labeled FOOTPAD located on the top of the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

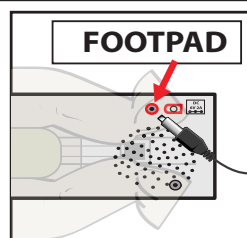

\* Footpads, adapters and all other accessories are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

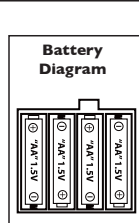


### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

**WARNING**  
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.  
STAY CLEAR OF ITEM WHILE OPERATING.  
DO NOT PLACE ITEM ON UNEVEN GROUND.  
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.  
\*\* FOR INDOOR USE ONLY\*\*

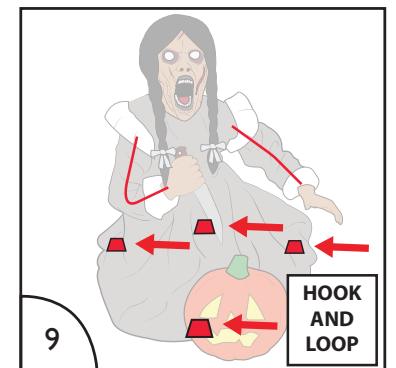

visit us at [tekkydesign.com](http://tekkydesign.com)  
Requires 6V 2A ADAPTER (included) or 4 AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

LUNGING PUMPKIN CARVER™ is a trademark of Tekky.  
Copyright © 2021 Tekky.  
All Rights Reserved.  
MADE IN CHINA



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.

### SMART PHONE SCAN SETUP VIDEO

