

HAUNTED LIVING™

HAUNTED LIVING and logo design are trademarks
or registered trademarks of LF, LLC. All rights reserved.

ITEM #5267932
MODEL #51112


12-FT ANIMATED SCARECROW




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at partsplus@lowes.com.

AS23143

PACKAGE CONTENTS

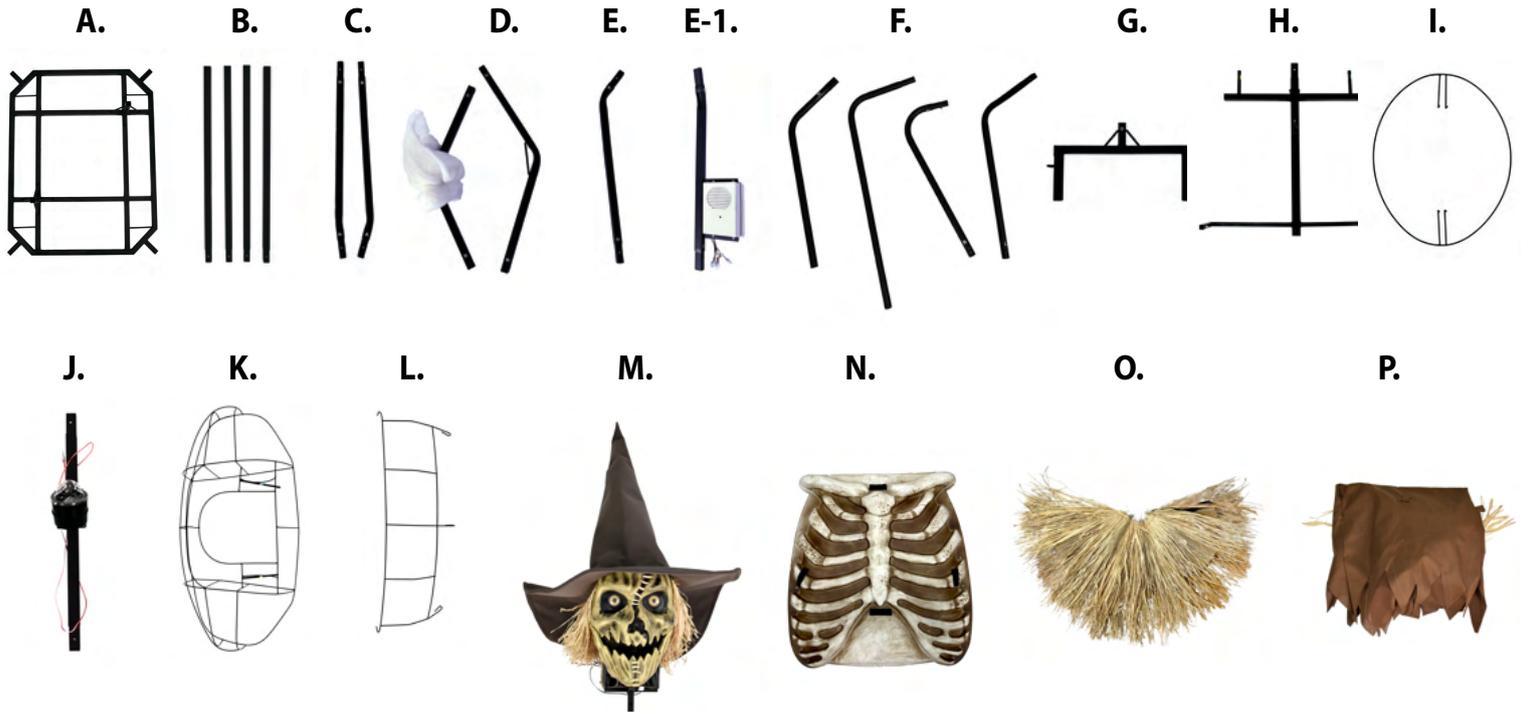

PART	DESCRIPTION	QUANTITY
A	Metal base	1
B	Metal base supports	4
C	Lower leg poles	2
D	Middle leg poles	2
E	Upper right leg pole	1
E-1	Upper leg pole with control box	1
F	Arm poles	4
G	Waist frame	1
H	Spine and shoulder frame	1
I	Waist bracket	1
J	Frame post and LED	1
K	Wire shoulder frame	1
L	Wire back frame	1
M	Head	1
N	Rib cage	1
O	Straw collar	1
P	Shirt	1
Q	Pants	1
R	Scythe handles and blade	4
S	Tether line and carabiners	3
T	5.9V 2A adapter	1
U	Wire shoulder frame zip ties	3
V	Ground stakes	7
W	Clevis and cotter pin	1

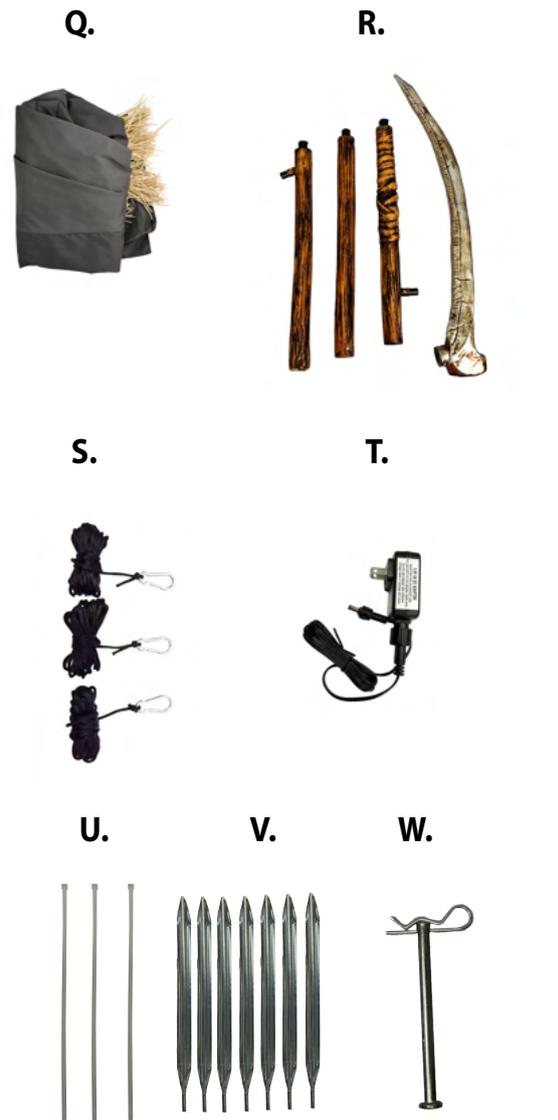

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- **Warning Risk of injury to persons. Read and understand instruction manual before use.**
- Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
- Do not turn item on until you have completely finished assembly.
- Stay clear of item while operating.
- Do not place item on uneven ground.
- Do not place weight on item while in operation.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


No tools required for assembly.

Recommend 2 person setup.


Estimated Assembly Time: 25 minutes

ASSEMBLY INSTRUCTIONS


1. Insert and snap lock the lower left leg pole into the metal base. (Match A to A)

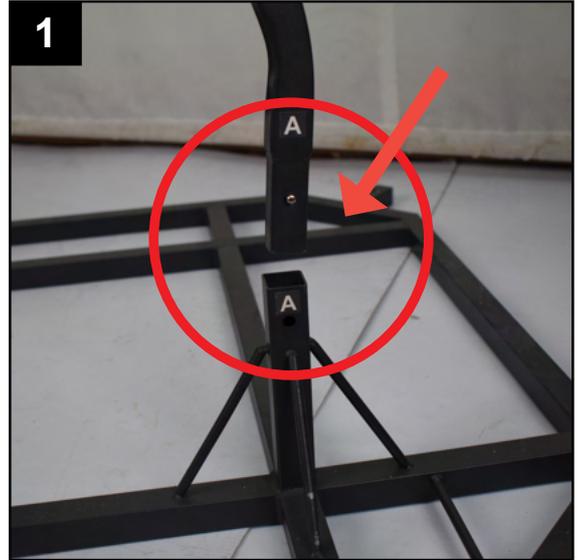

2. Insert and snap lock the lower right leg pole into the metal base. (Match A1 to A1)

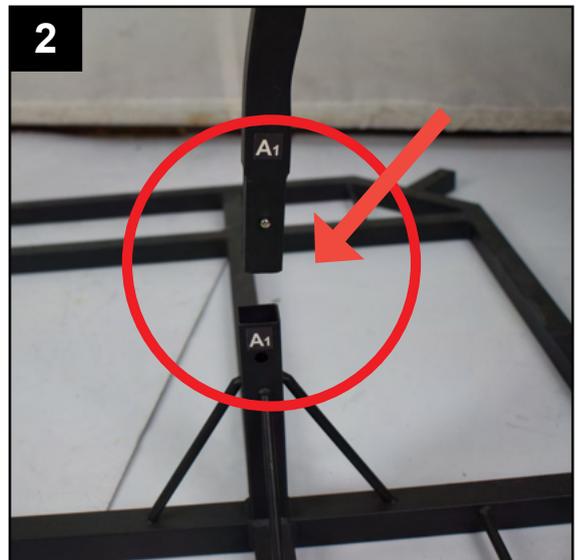


3. Insert and snap lock the middle leg pole into the lower left leg pole. (Match B to B)

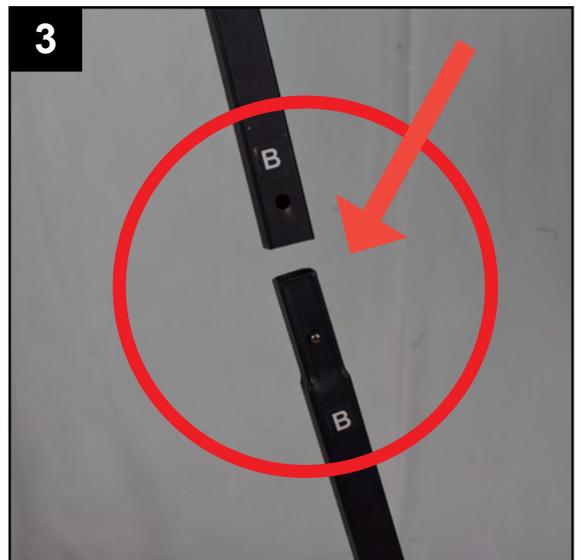

ASSEMBLY INSTRUCTIONS


4. Insert and snap lock the middle leg pole into the lower right leg pole. (Match B1 to B1)

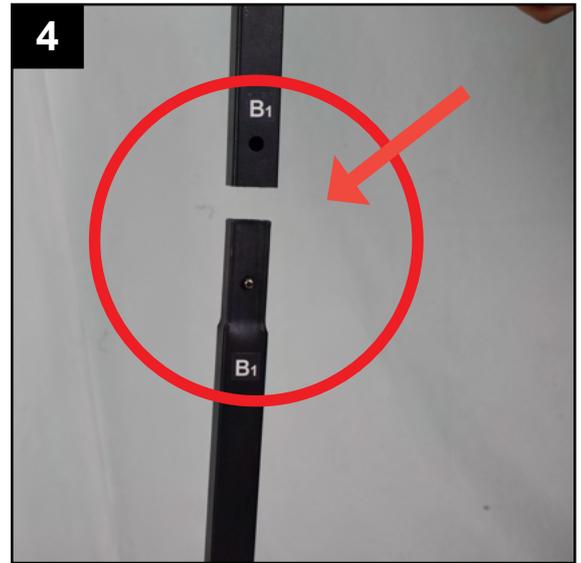

5. Place the pants with the FRONT label facing forward over the assembled metal base and middle leg poles.




6. Insert and snap lock the upper leg pole with control box into the middle leg pole. (Match C to C)

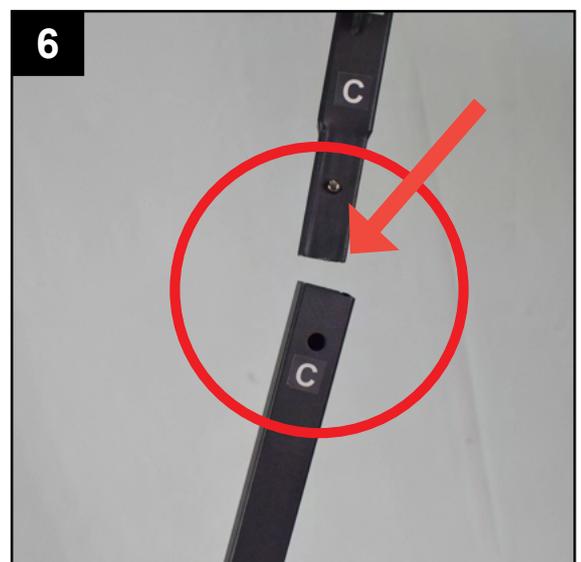

ASSEMBLY INSTRUCTIONS


7. Insert and snap lock the upper right leg pole into the middle leg pole.

(Match C1 to C1)

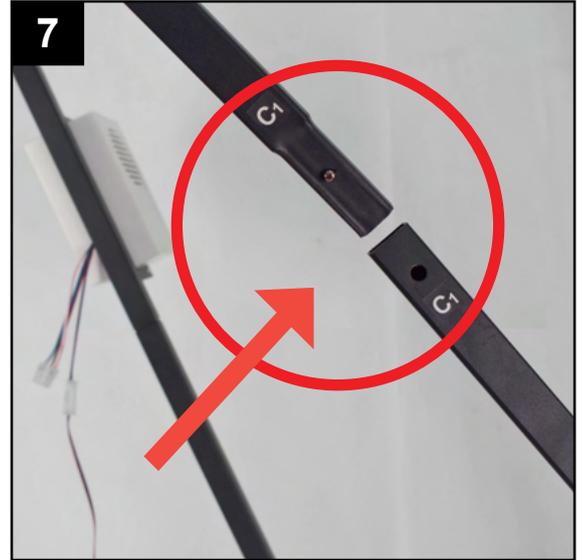


8. Attach the waist frame to the upper leg poles.

(Match D to D) and (Match D1 to D1)

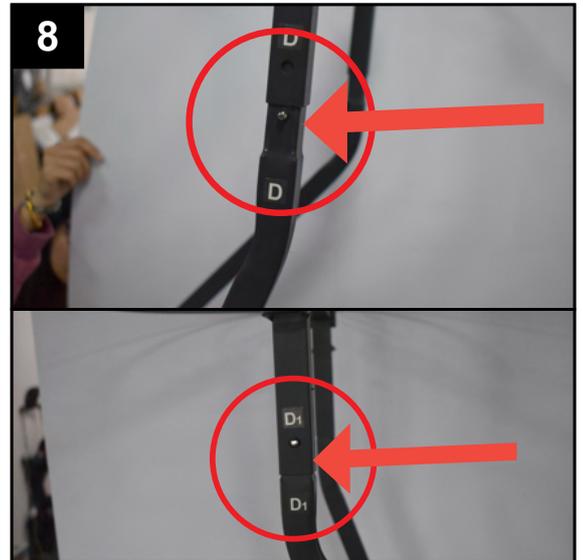


9. Attach the tether lines (qty 2) and carabiners to the waist frame.

Tip the assembled base, legs, and waist frame against the shipping box to continue assembly.

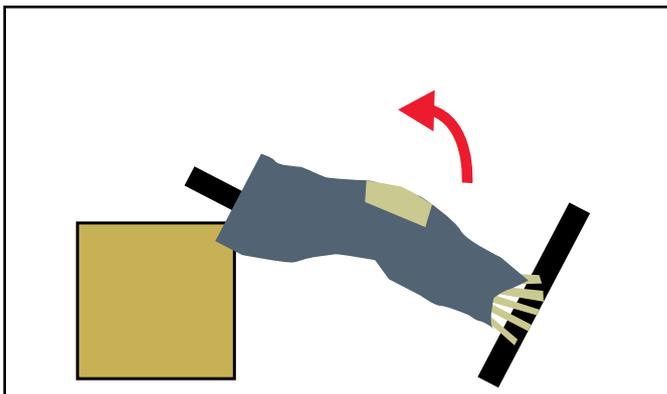


ASSEMBLY INSTRUCTIONS

10. Insert the four posts on the waist bracket into the waist frame.

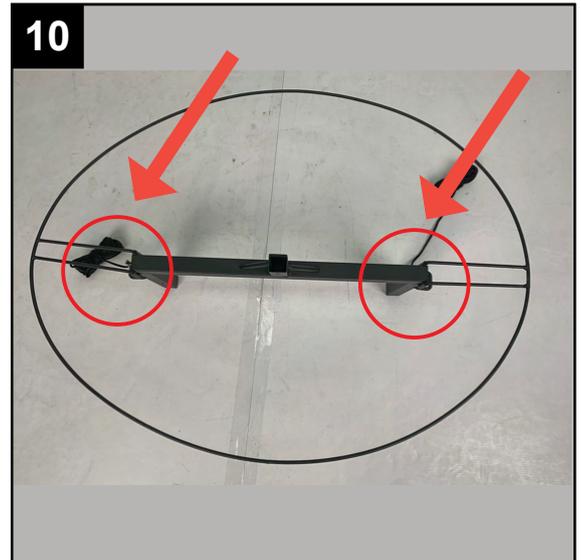


11. Insert and snap lock the frame post and LED into the waist frame.

(Match E to E)

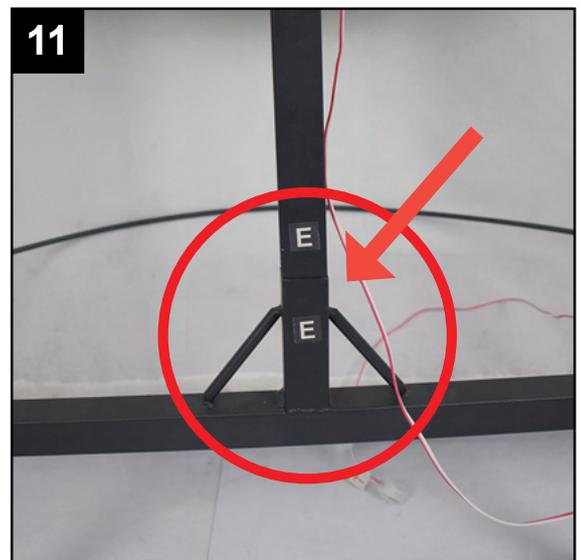

12. Insert and snap lock the spine and shoulder frame into frame post and LED.


(Match F to F)

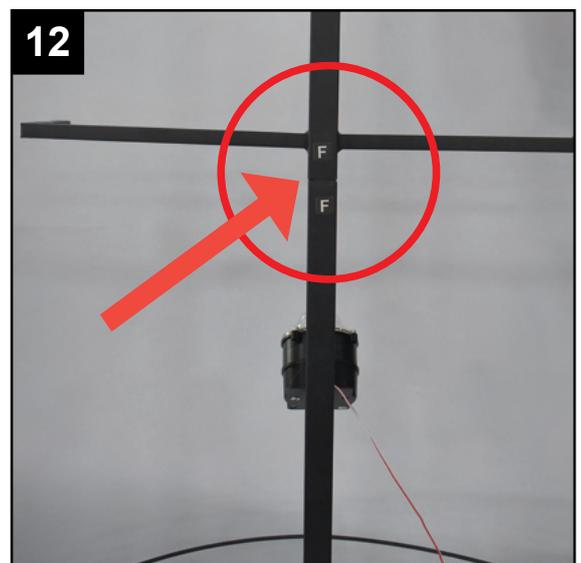

ASSEMBLY INSTRUCTIONS


13. Insert and snap lock all three posts of the rib cage to the spine and shoulder frame.

(Match G to G) (Match H to H) and (Match I to I)

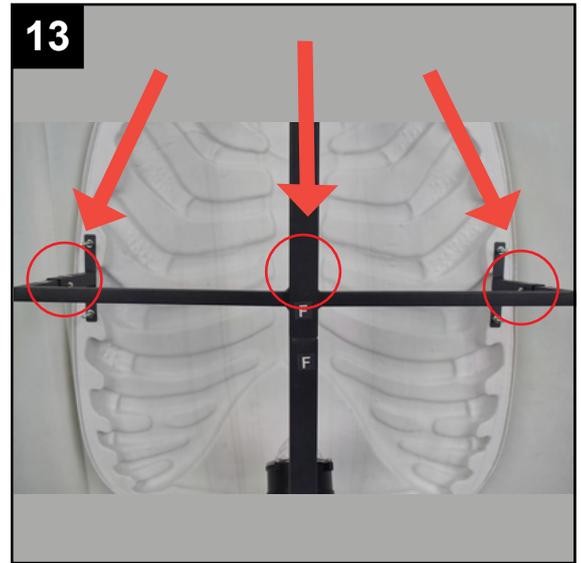

14. Insert the wire shoulder frame into the spine and shoulder frame.


(Match red to red) and (Match blue to blue)

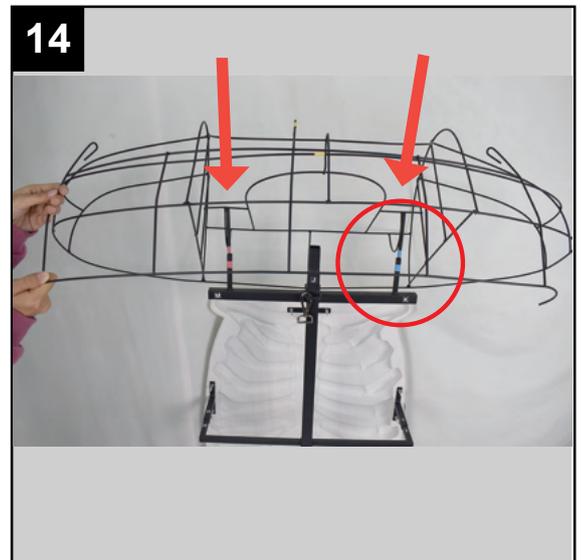

15. Hook the wire back frame to the wire shoulder frame.


(Match yellow to yellow)

Secure with three supplied zip ties.

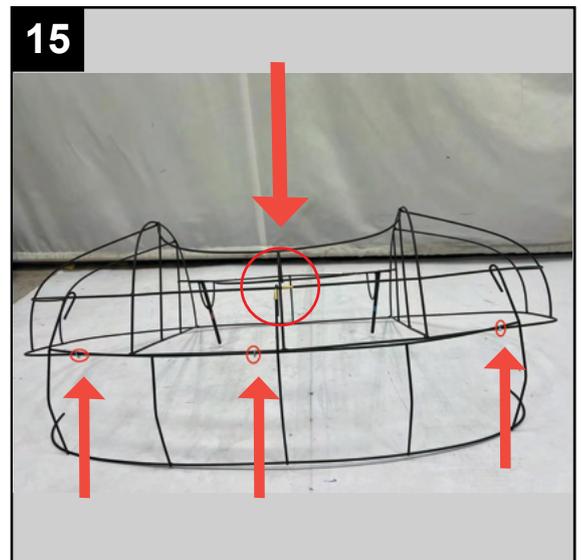


ASSEMBLY INSTRUCTIONS


16. Attach the tether line and carabiner to the spine and shoulder frame.

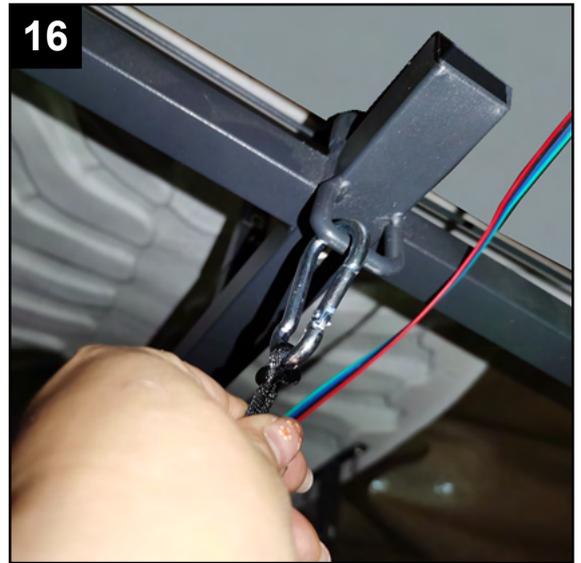

17. Slide the shirt over the assembled wire shoulder frame and rib cage.

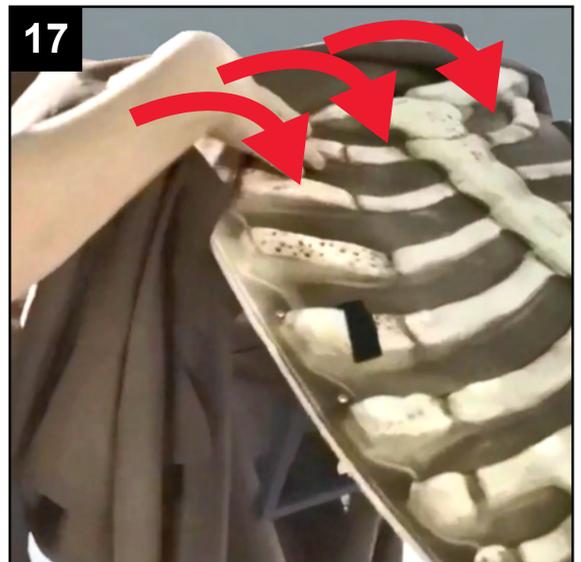


18. Attach the hook and loop fasteners on the shirt to the hook and loop fasteners on the top, bottom and sides of the rib cage.

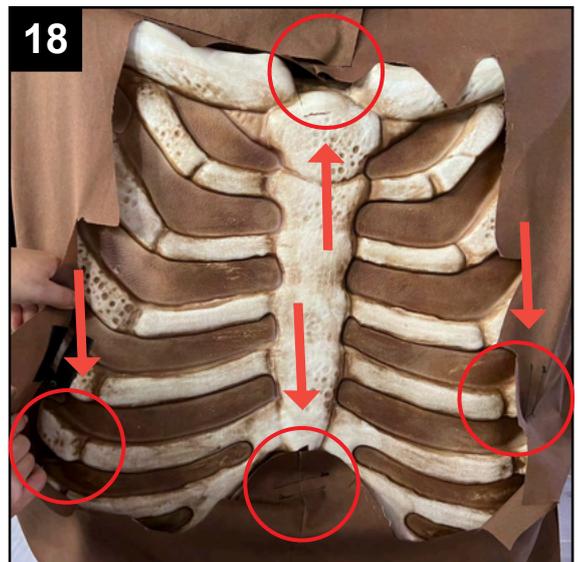

ASSEMBLY INSTRUCTIONS

19. Insert and snap lock the head to the spine and shoulder frame.

(Match J to J)

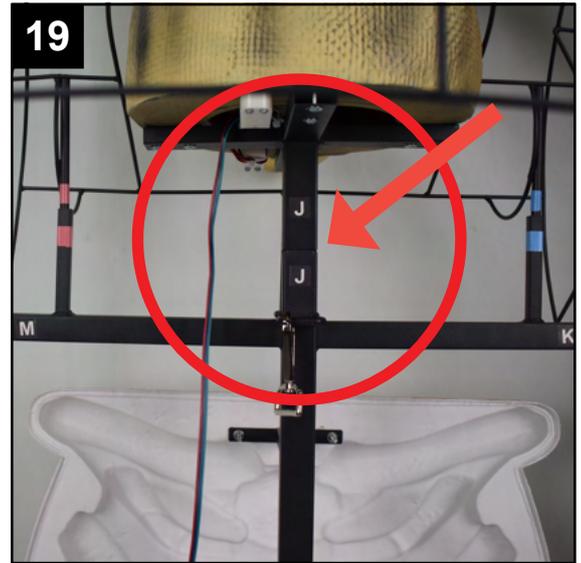


20. Snap lock lower right arm pole to upper right arm pole.

(Match L to L)



21. Snap lock lower left arm pole to upper left arm pole.

(Match N to N)

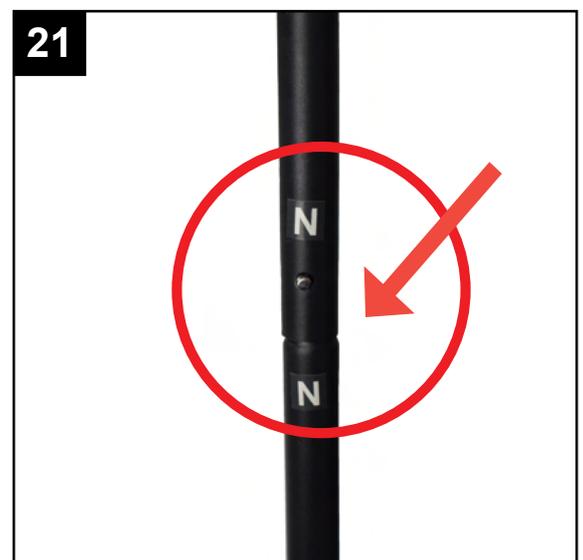


ASSEMBLY INSTRUCTIONS

22. Slide the assembled left arm up the sleeve.

Snap lock the left arm to the spine and shoulder frame.


(Match M to M)

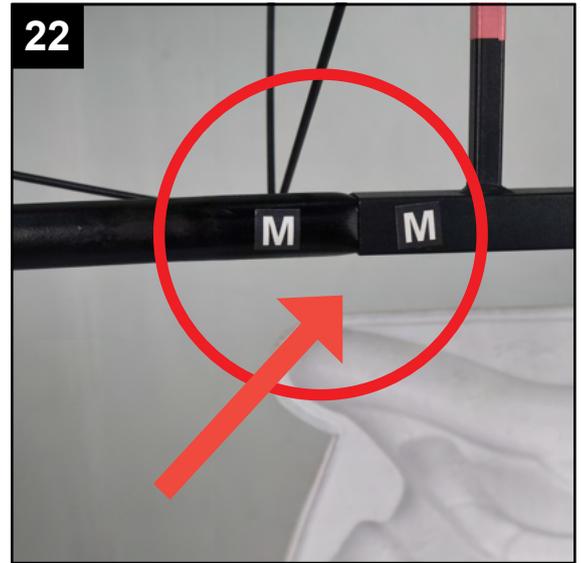

23. Slide the assembled right arm up the sleeve.

Snap lock the right arm to the spine and shoulder frame.

(Match K to K)

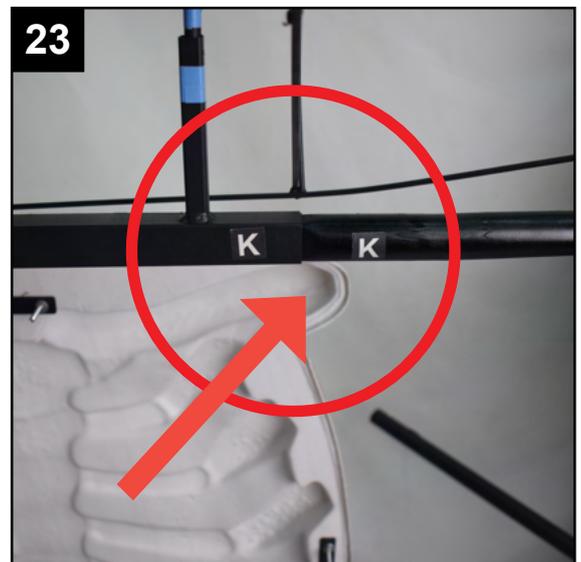

24. Attach straw collar around the neck and below the head. Attach the hook and loop fastener to secure the straw collar in place.




ASSEMBLY INSTRUCTIONS

25. Connect the wire from Human sensor to the wire to the control box. (Connect T to T)

Connect the wire from the frame post and LED to the control box. (Connect U to U)

Connect the wire from the head to the wire to the control box. (Connect V to V)

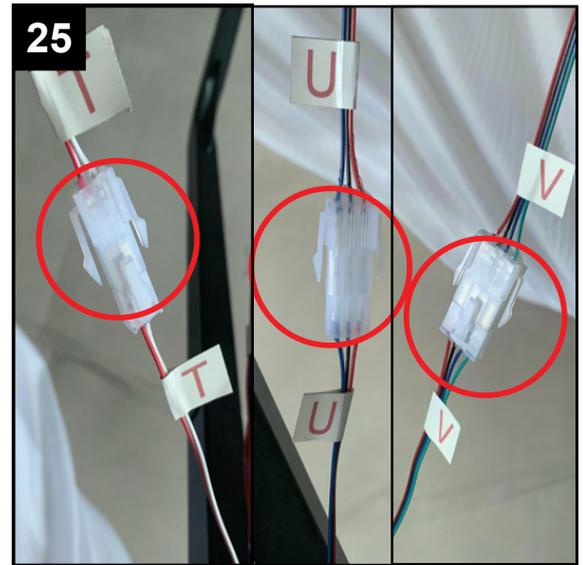

26. Pull the pants up and attach the hook and loop fastener around the waist frame.

Attach the hook and loop from the pants to the shirt.

Finish clothing assembly by attaching the rope hook and loop fastener to the shirt.



27. Connect the middle scythe pole to the upper scythe pole. Twist to lock.

(Match P to P)





ASSEMBLY INSTRUCTIONS

28. Connect the lower pole to the middle scythe pole.
Twist to lock. (Match O to O)



29. Connect the blade to the upper scythe pole.
(Match Q to Q)

Secure the scythe blade by inserting the clevis pin through the hole in the blade. Slide the cotter pin through the hole in the clevis pin to secure and complete the blade assembly.

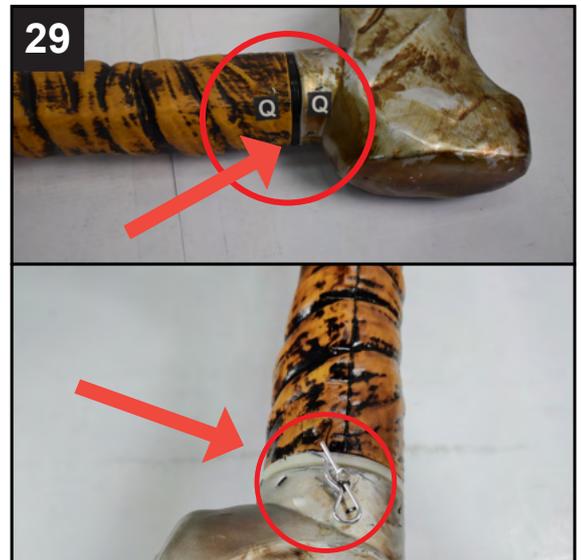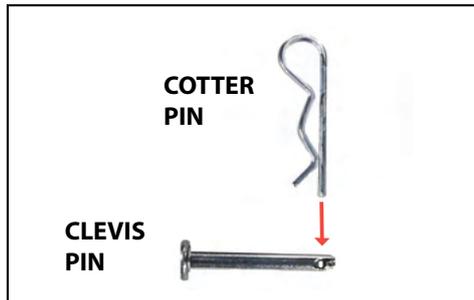

30. Snap lock the scythe pole to the left arm.
(Match R to R)

Secure the hook and loop on the sleeve to the scythe pole.




ASSEMBLY INSTRUCTIONS

31. Snap lock the scythe pole to the right arm.
(Match S to S)

Secure the hook and loop on the sleeve to the scythe pole



32. Recommended 2 people Stand the Scarecrow upright.
Insert all four base supports into the metal base.
(Match W to W)

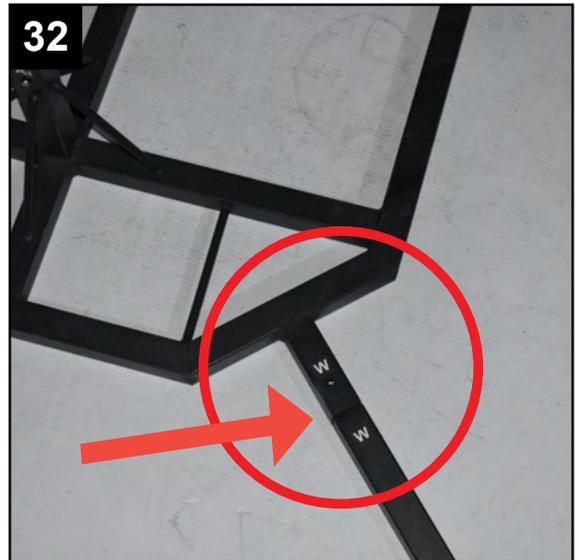

33. Insert the 5.9V 2A adapter into the control box.
Insert fully and twist until snug (do not over tighten)

Access the control box through flap located on the back of the left leg.


NOTE: Assemble plug end of adapter by inserting cord and sliding collar forward. Turn collar clock-wise to secure.



ASSEMBLY INSTRUCTIONS

33. Pull the 3 tether lines out and secure the ground stakes by inserting them into the ground.

Finish the ground stake setup by securing the metal frame with inserting four additional ground stakes in all four corners of the frame as shown.

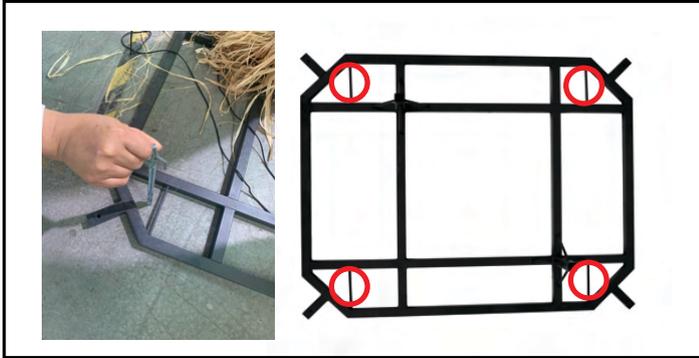

OPERATING INSTRUCTIONS

34. Move the switch to the ON position. Move in front of the item or make a loud sound (clap) to activate the item. Move the switch to the HUMAN ONLY position to activate the item with motion only.

Turn the item to the OFF (DEMO) position when not in use.



OPTIONAL DEMO SET UP

FOOTPAD/PUSH BUTTON IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad/push button into the jack labeled DEMO on the CONTROL BOX.
2. Place the switch in the DEMO position to enable DEMO activation.
3. Step on the FOOTPAD or press push button to activate the scary sequence!

* Footpads and push buttons are sold separately and can be purchased at www.tekkyaccessories.com



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- IN INCLEMENT WEATHER BRING ITEM INDOORS.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	<ul style="list-style-type: none">• 5.9V 2A adapter is not plugged in.• Switch on control box is not in the ON position.• Human sensor on pants may be blocked.	<ul style="list-style-type: none">• Check 5.9V 2A adapter is plugged in and securely inserted into the control box.• Move switch to ON position.• Move any obstructions away from the pants.
You only hear item sound but no item activation.	<ul style="list-style-type: none">• Control box wires are not connected	<ul style="list-style-type: none">• Check that wires labeled T, U, V, are securely connected.
Item has no sound while operating.	<ul style="list-style-type: none">• Volume knob is turned all the way down.	<ul style="list-style-type: none">• Adjust volume knob to desired volume.

FCC REGULATION

FCC STATEMENT

FCC RULES: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.