

GOBLIN THIEF™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME 15 MINUTES.

1. STAND
2. LEG POLES
3. BODY AND HEAD
4. BURLAP BAG AND FRAME
5. BURLAP BAG POSTS
6. CENTER POST AND CONTROL BOX
7. SKULL AND HAND
8. LEFT FOOT
9. RIGHT FOOT
10. 6V 2A ADAPTER
11. PANTS
12. WAIST BRACKET

PARTS

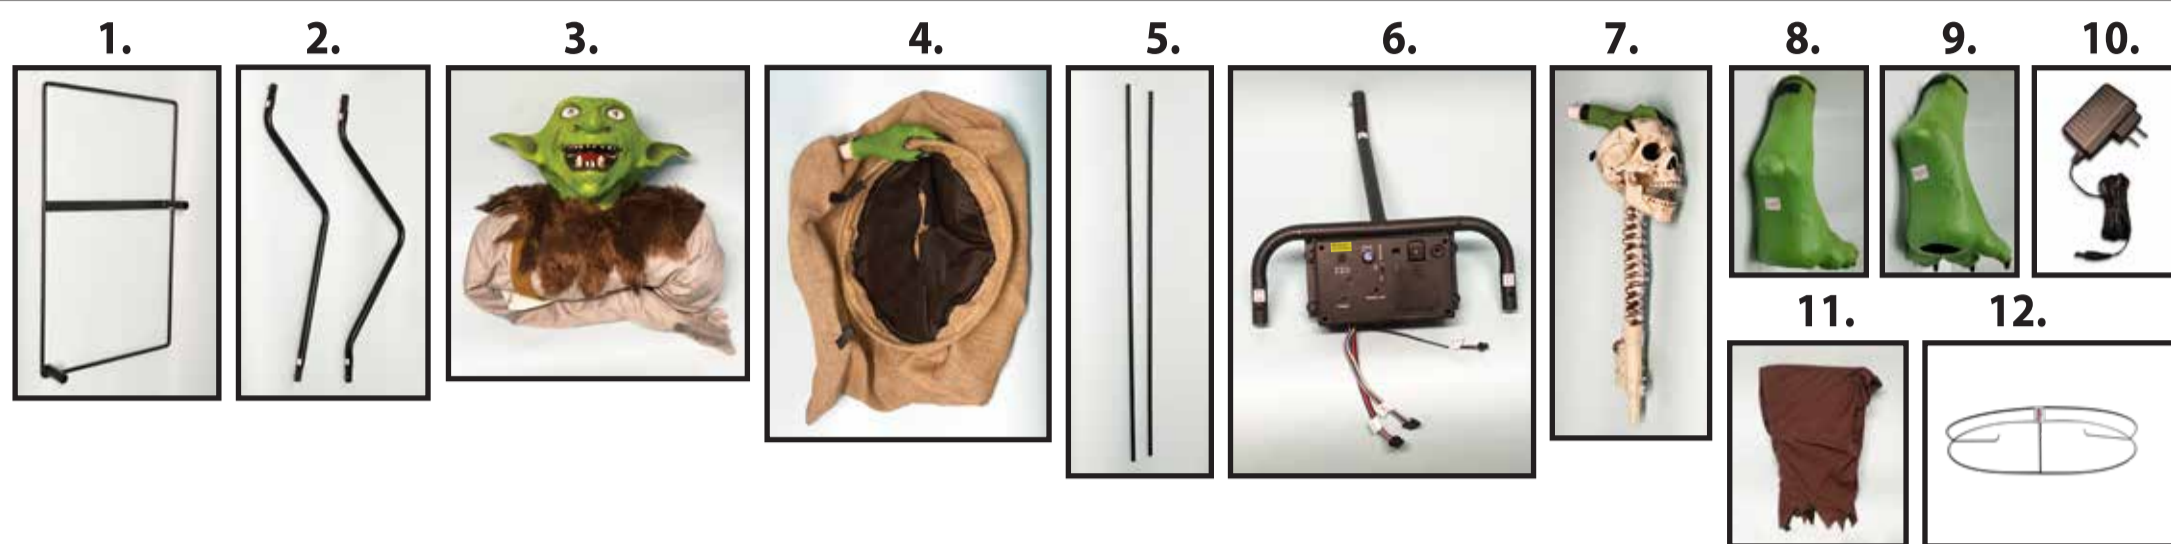


ASSEMBLY




1. Slide the LEFT FOOT over the left LEG POLE labeled A. Snap lock the LEG POLE to the STAND.

MATCH A TO A

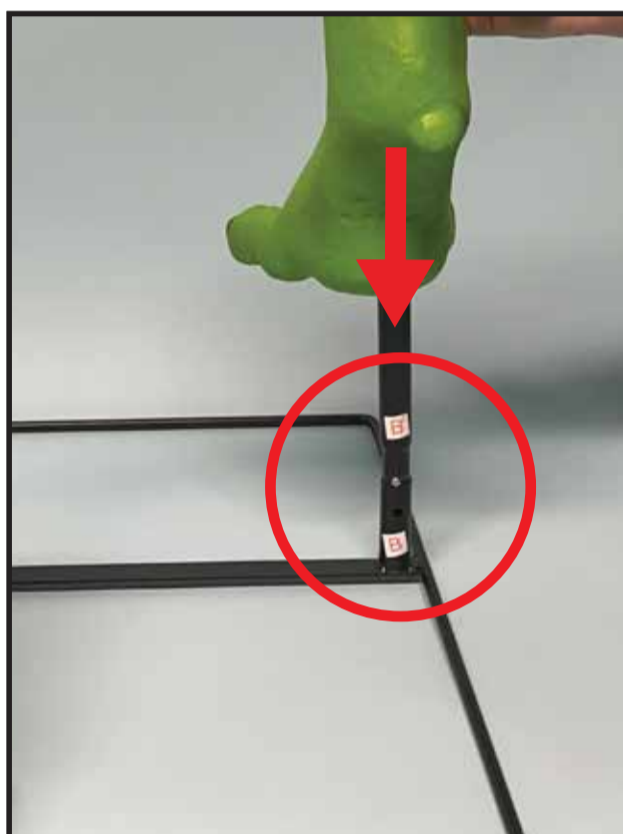

2. Slide the RIGHT FOOT over the right LEG POLE labeled B. Snap lock the LEG POLE to the STAND.


MATCH B TO B

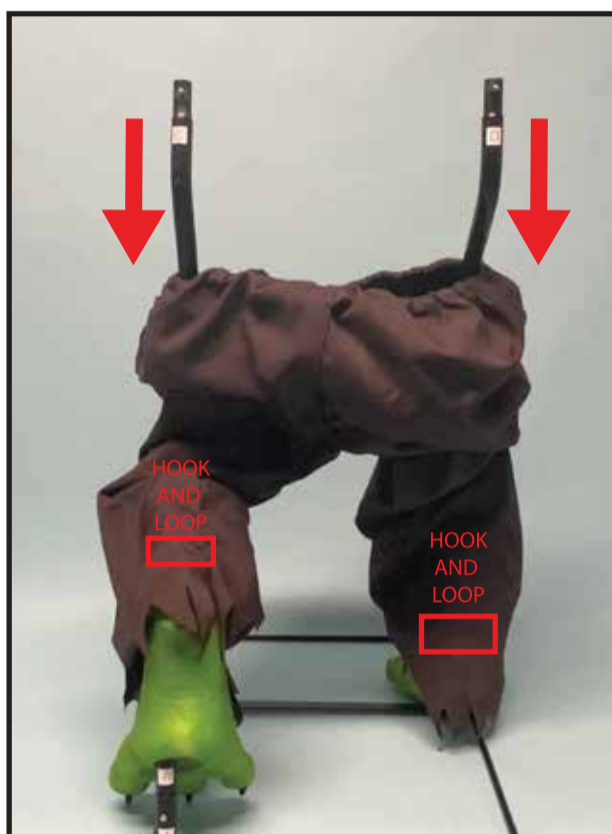

3. Slide the PANTS over both of the LEG POLES. The hook and loop should be facing the back of the item.




4. Attach the pants to the back of both legs with hook and loop fastener.

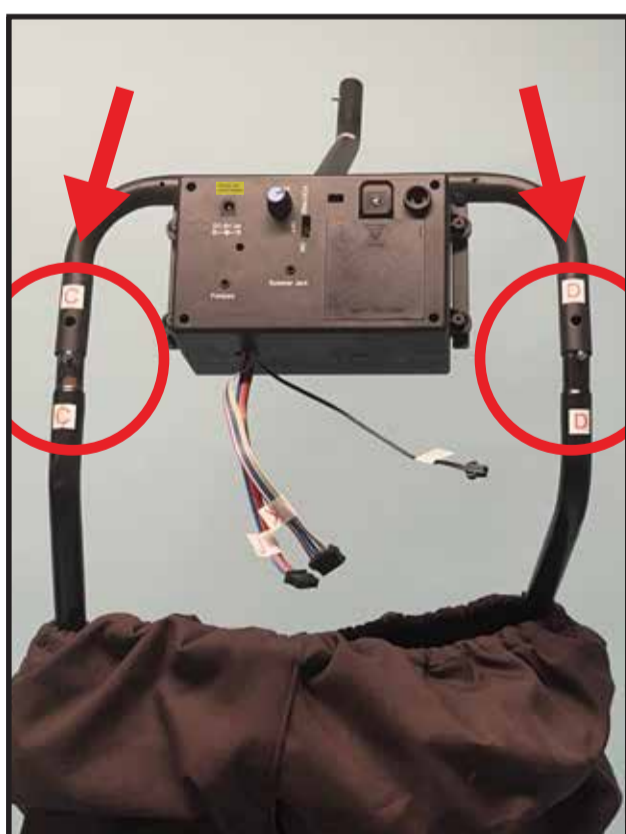

5. Snap lock the CENTER POST AND CONTROL BOX to the LEGS.

MATCH C TO C

MATCH D TO D

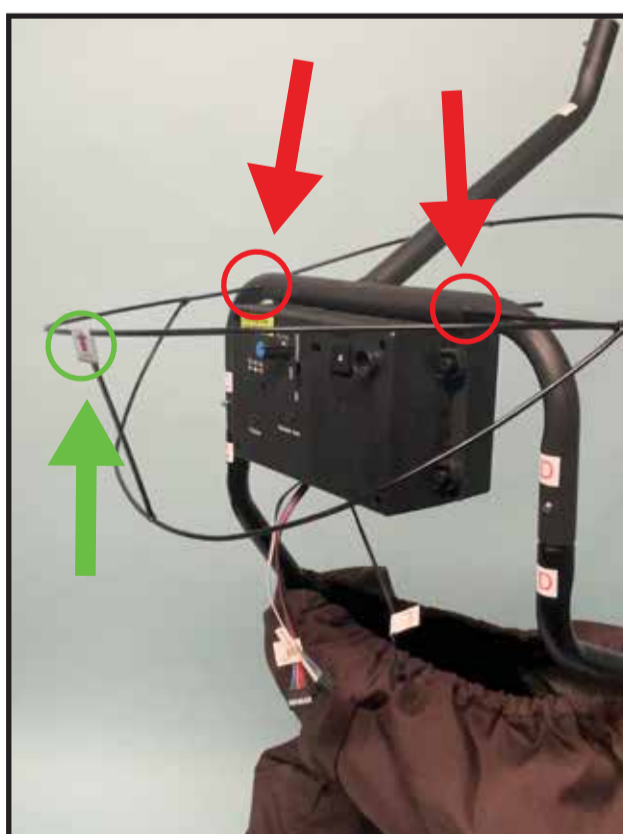




6. Insert the WAIST BRACKET posts into the CENTER POST AND CONTROL BOX with the arrow sticker in UP position.



7. Raise the fabric on the BODY AND HEAD. Locate the post under the shoulders. Snap lock the BODY AND HEAD onto the CENTER POLE AND CONTROL BOX. Match E to E



8. Secure the hook and loop strip located under the fabric backing around the edge of the WAIST BRACKET.

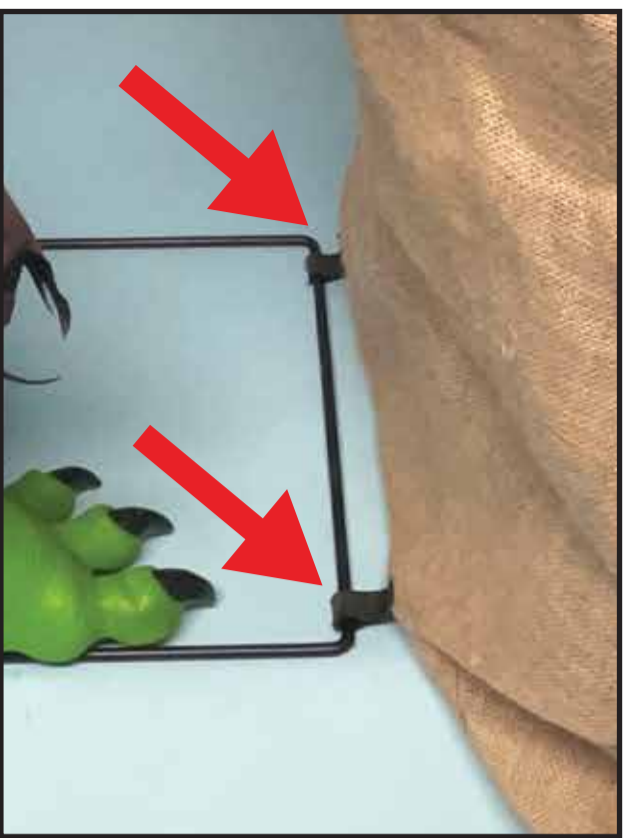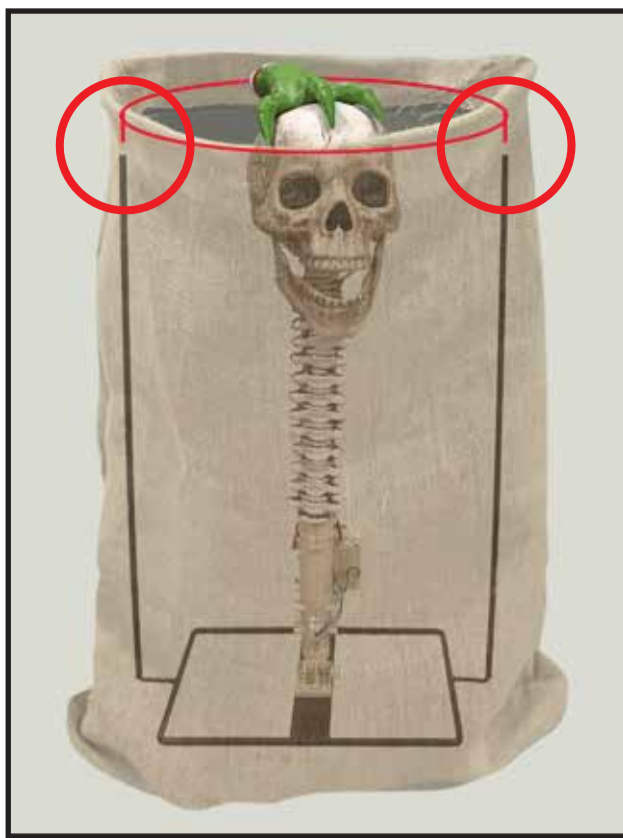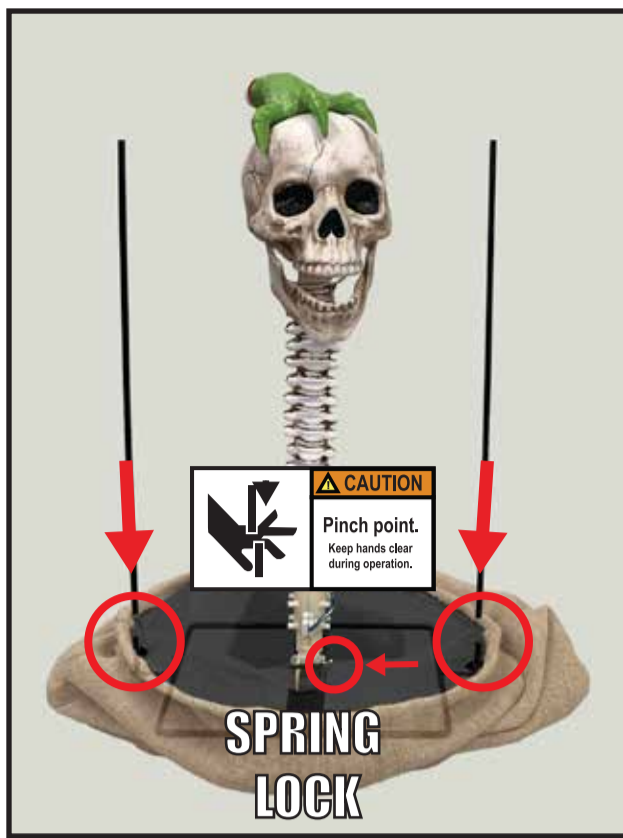

9. Secure the hook and loop strip located under the fabric backing around the FRONT edge of the WAIST BRACKET.

10. Untie the burlap bag packing strap and discard. Insert the BURLAP BAG POSTS and push SPRING LOCK to insert the SKULL AND HAND into the BURLAP BAG AND FRAME.

11. Locate the posts on the upper part of the burlap bag and secure the BURLAP BAG AND FRAME to the BURLAP BAG POSTS.



12. Attach both hook and loop fasteners located on the BURLAP BAG AND FRAME to the METAL STAND.



13. Snap lock the left arm on the BODY AND HEAD to the left hand on the BURLAP BAG AND FRAME. Secure hook and loop on shirt and wrist.
Match F to F

14. Snap lock the right arm on the BODY AND HEAD to the SKULL AND HAND.
Match G to G

15. Connect the wire from the CONTROL BOX to the wire on the SKULL AND HAND. Push wire up the sleeve and secure hook and loop fastener.
Match H to H

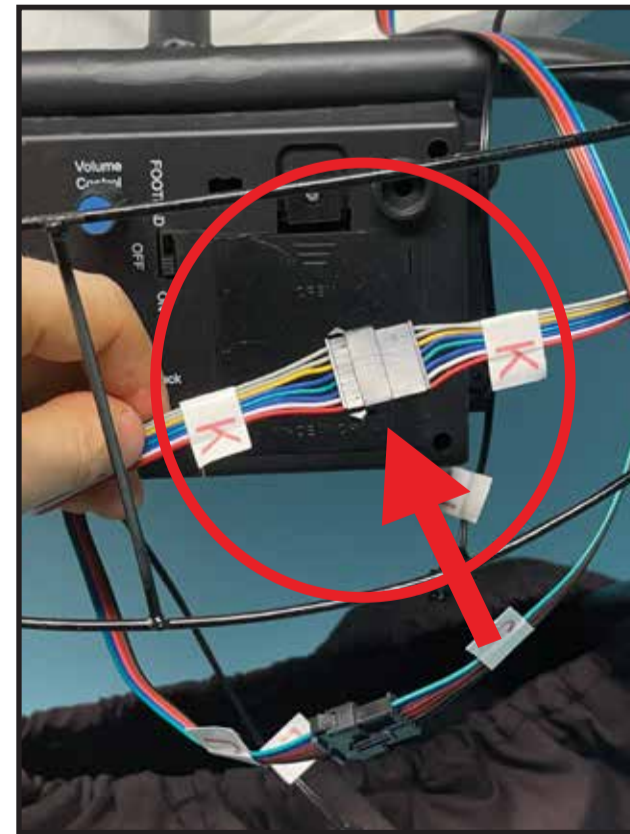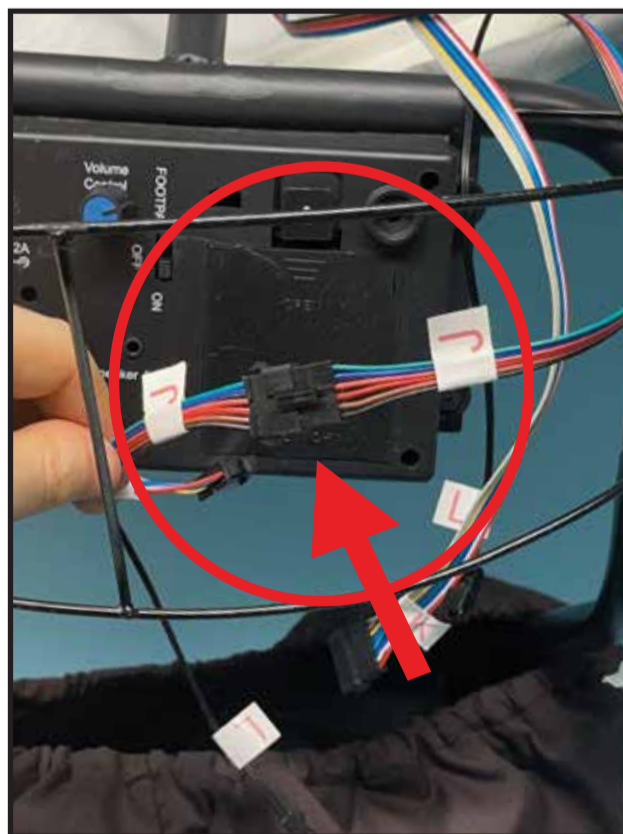


16. Connect the wire from the CONTROL BOX to the wire on the BODY AND HEAD.
Match J to J

17. Connect the wire from the CONTROL BOX to the wire on the BODY AND HEAD.
Match K to K



18. Connect the wire from the CONTROL BOX to the wire on the BODY AND HEAD.

Match L to L

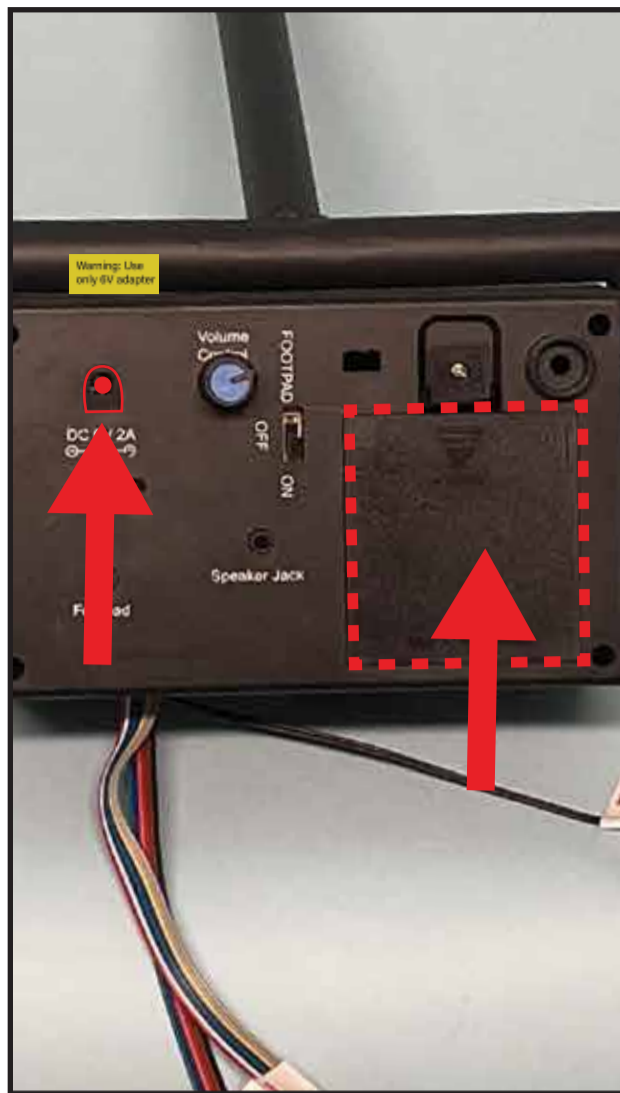

19. Insert 4 AA batteries (not included) or 6V2A adapter (included) into the control box. Move the switch to the on position. Make a loud sound (clap) or move in front of the item to activate. Turn the item off when not in use. Remove 6V2A adapter when using batteries.



19. Pull the pants up over the WAIST BRACKET to complete the setup. Open panel on back of pants for CONTROL BOX access.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads are sold separately and can be purchased at www.tekkyaccessories.com



OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Plug speaker cord into the jack labeled SPEAKER JACK located on the MODULE.
2. Use volume knob on external speaker to control volume levels.



TROUBLESHOOTING

PROBLEM	SOLUTION
Item will not activate/Motion sensor does not work	Ensure motion sensor is located on the front of the ITEM is not blocked by fabric or any other obstructions. To test the motion sensor, shine a flashlight in the motion sensor tube.
Item will not activate	Ensure all wires are connected securely and matched with the correct labels.
Sound is distorted or faint	If using batteries, replace with fresh batteries.
No Sound.	Ensure the volume knob is NOT turned all the way down.
Still experiencing a problem?	Please call 1-855-HD-HOLIDAY or go to tekkydesign.com for further assistance.

Battery Diagram

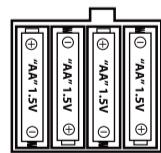

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.
RECOMMENDED FOR SHELTERED OUTDOOR USE.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.. Home Depot, 2455 Paces Ferry Road, Atlanta, GA 30339 1-855-HD-HOLIDAY HOMEACCENTSHOLIDAY.COM



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, or any parts missing, please go to tekkydesign.com for assistance or call 1-855-HD-HOLIDAY



22TK60334
Goblin Thief (60334)
1007 414 700
UPC: 6-69703-60334-7



visit us at tekkydesign.com
Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

GOBLIN THIEF™ is a trademark of Tekky.
Copyright © 2022 Tekky.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN

SETUP VIDEO

