

CROUCHING ZOMBIE CHILD™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME SEVEN MINUTES.

PARTS


1. HEAD AND BODY
2. CENTER POLE WITH CONTROL BOX
3. METAL STAND
4. SHOES
5. 6V 2A ADAPTER

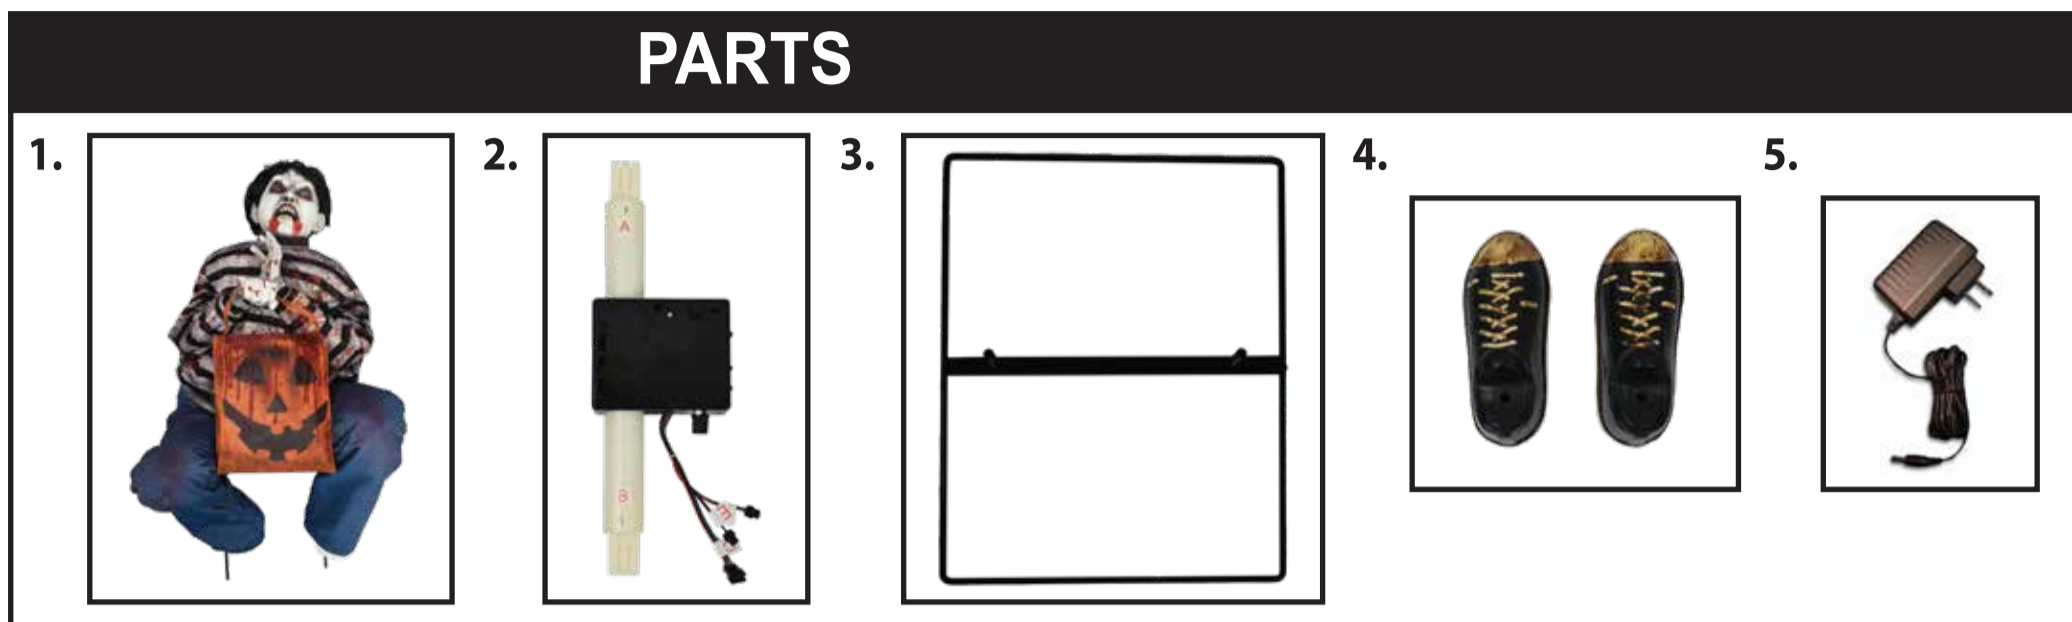


ASSEMBLY




1. Open the hook and loop fasteners on the back of the HEAD AND BODY. Insert the CENTER POLE AND CONTROL BOX with A facing up and the CONTROL BOX to the right.

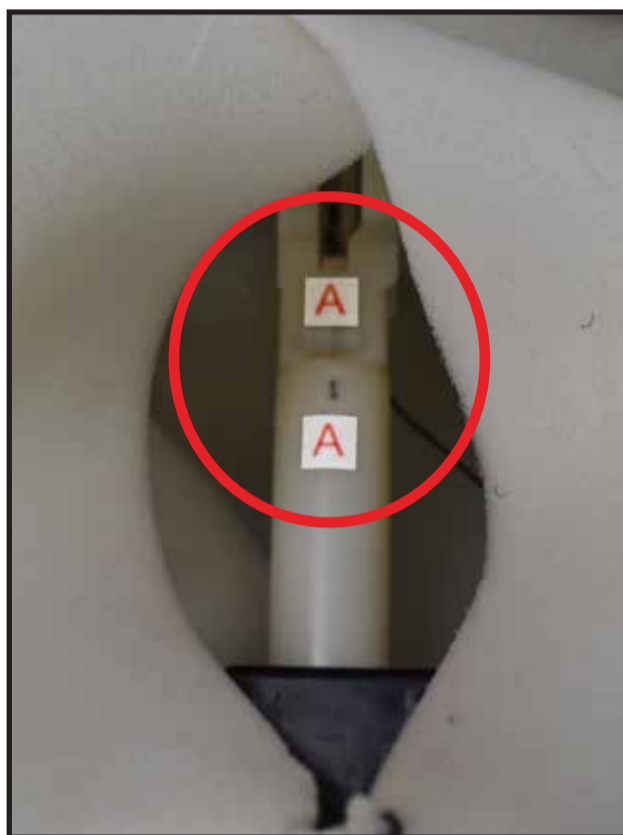


2. Snap lock the CENTER POLE AND CONTROL BOX to the HEAD AND BODY at the neck.
MATCH A TO A

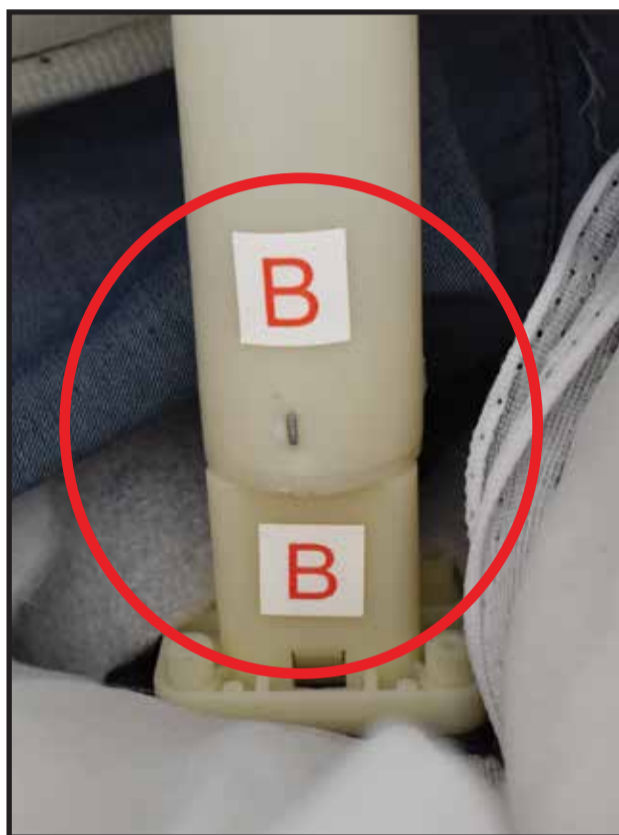


3. Snap lock the CENTER POLE AND CONTROL BOX to the HEAD AND BODY at the waist.
MATCH B TO B

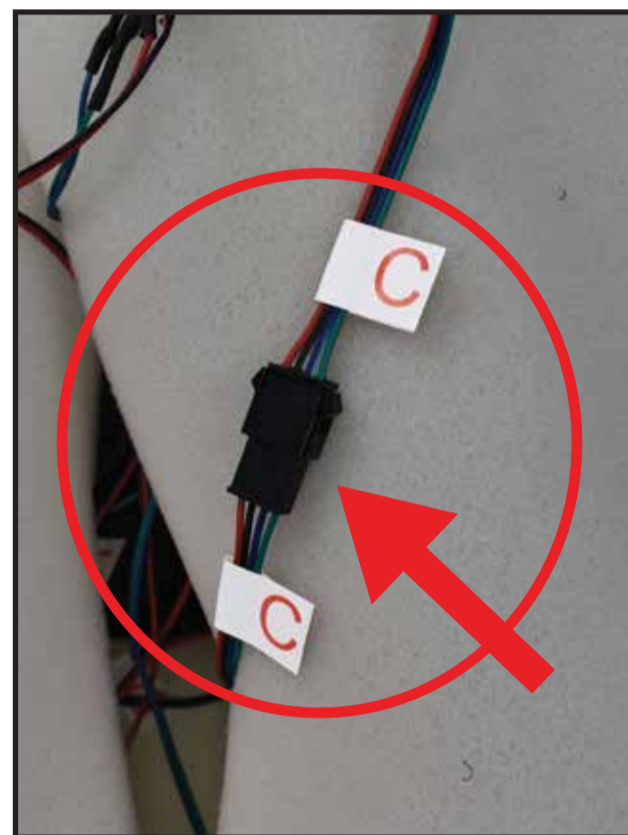


4. Connect the wire bundle from the CONTROL BOX to the wire bundle from the HEAD AND BODY.
MATCH C TO C

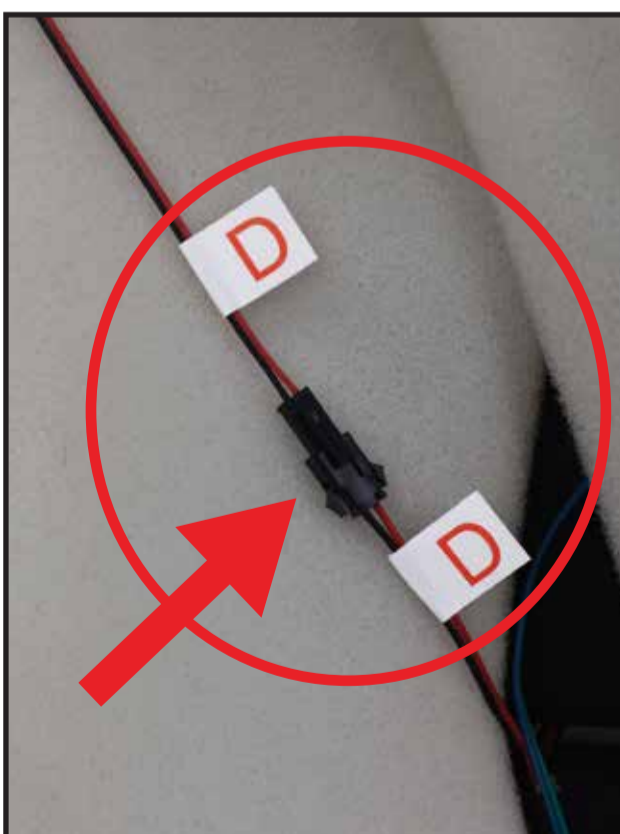

5. Connect the wire bundle from the CONTROL BOX to the wire bundle from the HEAD AND BODY.
MATCH D TO D

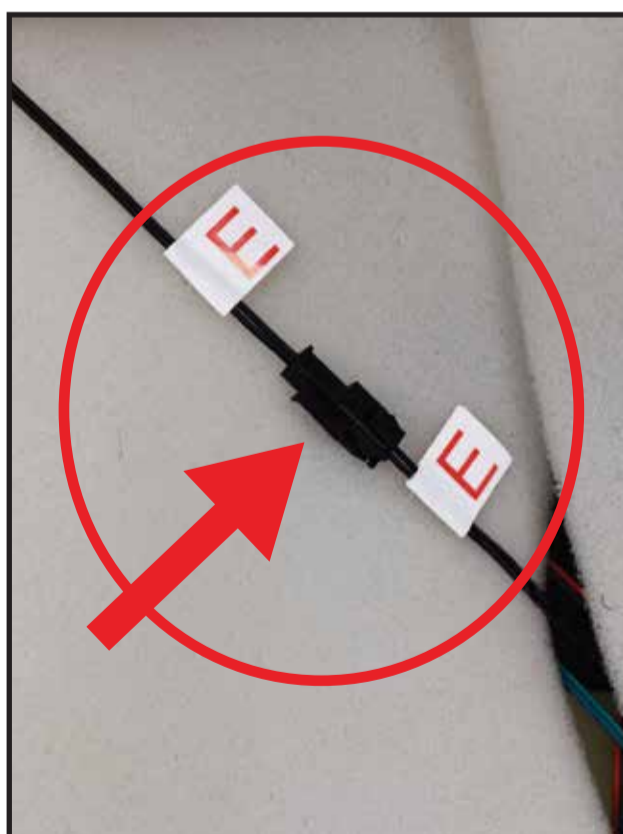

6. Connect the wire bundle from the CONTROL BOX to the wire bundle from the MOTION SENSOR.
MATCH E TO E

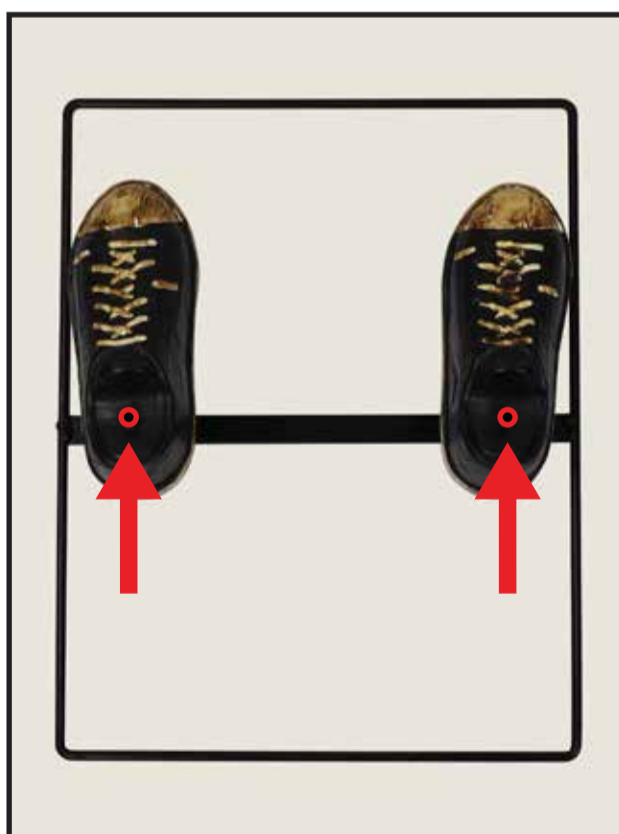

7. Place the SHOES onto the two posts located in the center of the METAL STAND.



8. Place the assembled HEAD AND BODY onto the two posts located in the center of the METAL STAND.



10. Insert 4 AA batteries (not included) or 6V 2A adapter (included) into the CONTROL BOX.

Move the switch to the ON position. Make a loud sound (clap) or move in front of the item to activate.

Turn the item off when not in use.

Remove 6V 2A adapter when using batteries.



MOTION SENSOR

9. Make sure the foam is rolled back down, then close the hook and loop fasteners on the shirt.

11. Pose both arms as seen in the photo. The motion sensor is located in the FRONT of the bag. Point the motion sensor towards direction of activation to complete setup.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!
* Footpads are sold separately and can be purchased at www.tekkyaccessories.com

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.



BATTERY DIAGRAM

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

STAY CLEAR OF ITEM WHILE OPERATING.

DO NOT PLACE ITEM ON UNEVEN GROUND.

DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

SMART PHONE SCAN

SETUP VIDEO