

BOTTOM OF

MISTING UV PUMPKINTM

WATER

FIG. 3

Fill

WATER

**BOTTLE** 

with

clean

water.

SWITCH

MICRO-

SWITCH

FIG. 1

BATTERY

COMPARTMENT

FIG. 2

Turn

handle

counter-

clockwise

to access

WATER

**BOTTLE** 

## MISTING HALLOWEEN PROP EERIE MIX OF LIGHTS & MIST!

Please read instructions carefully before use Retain for future reference.

#### SETTING UP YOUR MISTING UV PUMPKIN™:

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- 1. Use a small screwdriver to remove the (2) screws that release the battery compartment located on bottom of the MISTING UV PUMPKIN™. Pull to slide battery compartment out for access to batteries. See Fig. 1
- 2. Remove screw on battery compartment and insert (3) brand new "AA" alkaline batteries into the battery compartment. Replace screw and re-insert battery compartment into the bottom of MISTING UV PUMPKINTM. Replace (2) screws that secure battery compartment to bottom of item.
- 3. Twist water bottle (seated on bottom of MISTING UV PUMPKIN™) COUNTER-CLOCKWISE to remove. See Fig. 2
- Fill water bottle with clean, cool, room temperature water only. (Do not use oil/essential oil/fragrance/perfume.) See Fig. 3
- Replace water bottle, twisting bottle in a CLOCKWISE direction. NOTE: Make sure not to over-tighten the bottle.

!\ WARNING:

Cancer and Reproductive Harm www.P65Warnings.ca.gov

WARNING: CHOKING HAZARD small parts. This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

# tekkydesign.com

#### BATTERY INSTRUCTIONS:

- · Contains (3) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- · Battery installation and removal should be performed by an adult.
- · Batteries are harmful if swallowed, Keep away from young children
- · Remove batteries when not in use
- · Use only batteries recommended in
- used batteries. · Do not mix alkaline,
- carbon-zinc, nickelcadmium, rechargeable or different types of
- · Be mindful to insert batteries with the correct polarity (+/-)
- Remove all exhausted batteries
- Rechargeable batteries are only to be charged under adult supervision.

# BATTERIES REQUIRED

Batteries included for "try me" demo purposes only.



- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- · The supply terminals are not to be short-circuited
- · Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.

- **6.** Place power switch, located on bottom of item, to the "ON" position to operate the item in MOTION ACTIVATION mode. Wave hand in front of MISTING UV PUMPKIN™ to activate the scary sequence.
- 7. Or place switch to "CONSTANT" to operate the item in continuous play mode.
- 8. Place the MICRO SWITCH, located on bottom of item, to the "OFF" position to turn sound off.

NOTE: First fill of tank could take up to 2 minutes of use to start misting effect.

## FOR BEST RESULTS:

- . Keep "function" switch in the "OFF" position when not in use.
- · Place unit on place mat or towel if operating on a wood or easily damaged surface.
- . Unit will stop misting when water level becomes too low.

### WATER CAPACITY: 48 ml (1.62 fl oz)

INDOOR USE. Surface washable only. All new materials: plastic, metal. Keep away from open flame.

## ⚠ WARNING:

DO NOT USE OIL/ESSENTIAL OIL/FRAGRANCE/PERFUME.

MISTING UV PUMPKIN™ is a trademark of Tekky. Copyright © 2025 Tekky, All Rights Reserved. Manufactured for and distrubuted by: Tekky, Orland Park, IL 60467 USA MADE IN CHINA

7.87 IN (20 CM)





(Batteries included for demo purposes only.)



Scan code for easy setup video



