

Please read instructions carefully before use.
Retain for future reference.

OPERATING INSTRUCTIONS:

- KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.
- 1. Carefully remove and discard "TRY ME" wire and packaging.
- 2. Use a small Phillips/crosshead screwdriver to open the item's battery compartment located on bottom of FLAMING METALLIC PUMPKIN™.
- 3. Place 3 brand new "AA" alkaline batteries into the battery compartment and replace battery compartment cover.
- 4. Place power switch, located on bottom of item, to the "TIMER" position to operate the item in "TIMER" mode. FLAMING METALLIC PUMPKIN™ operates continuously for six hours. Operation pauses after six hours of continuous play and will automatically resume continuous opration 18 hours later. NOTE: Keep switch in the "OFF" position when not in use.

Includes: (1) FLAMING METALLIC PUMPKIN™ decoration.
INDOOR USE. Display on level surface. All new materials: plastic.
Surface washable only. Keep away from open flame.

Item # 60425. FLAMING METALLIC PUMPKIN™ is a trademark of Tekky.
Copyright © 2025 Tekky. All Rights Reserved.
Manufactured for and distrubuted by: Tekky, Orland Park, IL 60467 USA
MADE IN CHINA

WARNING: Cancer and Reproductive Harm www.P65Warnings.ca.gov

warning: CHOKING HAZARD - small parts. This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

tekkydesign.com

BATTERY INSTRUCTIONS:

- Contains (3) AA
 1.5-volt alkaline
 batteries. Batteries
 are not rechargeable.
- Battery installation and removal should be performed by an adult.
- Batteries are harmful if swallowed. Keep away from young children
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickelcadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.

3AA

BATTERIES REQUIRED

Batteries included for "try me" demo purposes only.



- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.





(Adapter not included, sold separately.)



(Batteries included for demo purposes only.)

