

HALLOWEEN LED FINGER LIGHT™

4.25 in. (10.8 cm)



3 LR44

Batteries Included
(for demo purposes only)

For Indoor Use Only.


AGES 15+

**ON/
OFF**

SWITCH
ON BACK
OF ITEM



The Batteries supplied with this product are for demonstration purposes and may have a shorter life than expected.

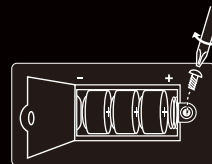

**BATTERY
TYPE 3 X
1.5V LR44
REQUIRED
(included)**

HOW TO REPLACE BATTERIES:

1. Remove small locking screw and battery cover.
2. Remove used batteries.
3. Insert new batteries, ensuring "+" positive are placed as markings shown.
4. Replace the battery cover and screw.

BATTERY INSTRUCTIONS AND CAUTIONS

- Battery installation and removal should be performed by an adult.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- Do NOT dispose of batteries in fire, they may leak or explode.

⚠ WARNING!
CHOKING HAZARD — small parts. This item is not a toy. For decoration only. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years of age and younger.

⚠ WARNING!
KEEP AWAY FROM FIRE

LED FINGER LIGHT™ SKELETON is a trademark of Tekky. Copyright © 2022 Tekky. All rights reserved.

TekkyDesign.com

Distributed by: Big Lots Stores, Inc.
P.O. Box 28523; Columbus, OH 43228-0523
V# 1009472 **MADE IN CHINA** ITEM# 61049

202205F