




Scan code
for easy
setup video


5-FT 10-IN TALL! SOUND/MOTION/FOOTPAD* ACTIVATED HALLOWEEN PROP REALISTIC FLICKERING FLAME EFFECT EERIE LED LIGHTS AND SPOOKY SOUNDS

SETTING UP YOUR SPIDER LAMP POST™


PARTS (4)

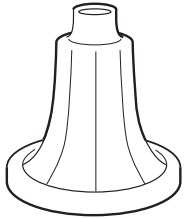

BASE

 


**(2)
POLES**

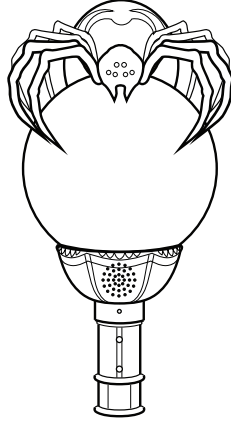


LAMP


1. USE A SMALL #2 PHILLIPS SCREWDRIVER TO OPEN BATTERY COMPARTMENT LOCATED ON BACK OF LAMP TO ACCESS BATTERY TRAY. CAREFULLY REMOVE BATTERY TRAY AND DO NOT FORCEFULLY REMOVE TRAY AS IT IS CONNECTED TO LAMP WITH TETHERS. PULL RIBBON TO OPEN COVER FOR BATTERY ACCESS. INSERT 4 AA ALKALINE BATTERIES (NOT INCLUDED) INTO THE COMPARTMENT AND REPLACE COVER AND TRAY.

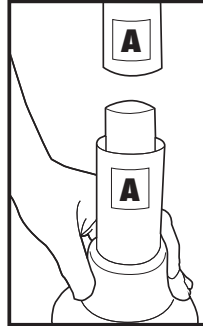

2. INSERT POLE INTO BASE, MATCHING "A" TO "A". TWIST TO LOCK.

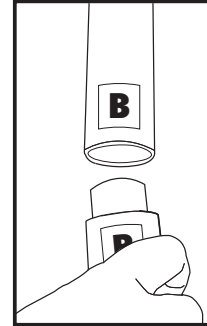

3. INSERT POLE INTO POLE, MATCHING "B" TO "B". TWIST TO LOCK.

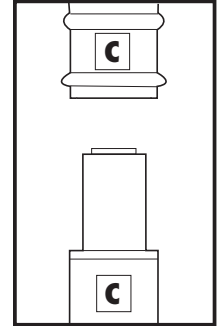

4. INSERT LAMP INTO POLE, MATCHING "C" TO "C". TWIST TO LOCK.

SPIDER LAMP POST™

INCLUDES (1) SPIDER LAMP POST™ DECORATION.
ASSEMBLY REQUIRED. DISPLAY ON LEVEL SURFACE.

**ALL NEW MATERIALS: PLASTIC.
SURFACE WASHABLE ONLY.**

INDOOR/SHELTERED OUTDOOR USE.

TAKE ITEM INDOORS DURING INCLEMENT WEATHER.

ACTUAL ITEM MAY VARY FROM THE PHOTOGRAPHS
AND/OR ILLUSTRATIONS ON PACKAGE.

ITEM #96929.

SPIDER LAMP POST™ IS A TRADEMARK OF TEKKY®.
COPYRIGHT © 2026 TEKKY. ALL RIGHTS RESERVED.

5. PLACE POWER SWITCH ON BACK OF LAMP TO THE "ON" POSITION TO OPERATE IN SOUND AND MOTION ACTIVATION MODE. MAKE A LOUD SOUND (CLAP) OR MOVE IN FRONT OF THE SPIDER LAMP POST™ TO ACTIVATE THE SCARY SEQUENCE!

6. OR PLACE THE POWER SWITCH TO "CONTINUOUS" FOR NON-STOP OPERATION OF ITEM.

NOTE: KEEP POWER SWITCH IN THE "OFF" POSITION WHEN NOT IN USE.

TO ACTIVATE LAMP WITH FOOTPAD*

(*FOOTPAD NOT INCLUDED—CAN BE PURCHASED ONLINE AT TEKKYCREATIONS.COM)

Connect cable from footpad to the jack labeled "FOOTPAD" located on back of LAMP. Place power switch on LAMP to the "OFF/FOOTPAD" position to enable footpad activation. Step on footpad to activate item. Keep switch in the "OFF" position when not in use.

WARNING

CHOKING HAZARD - small parts.
This item is not a toy. For decoration only.
This product is intended for use by persons
15 years of age and older. Not intended for
use by children 14 years of age and younger.

This is a seasonal item intended for
occasional use, not for long-term or
constant use. This item is not intended to
be used outdoors for long periods of time
without upkeep and maintenance to
prevent wear and damage. Taking the item
down when not in use, using proper care,
and removing the item from use during
cold/severe weather will extend the life of
your animatronic greatly.

BATTERY COMPARTMENT



**2-WAY
SOUND SWITCH**
WITH SOUND
NO SOUND

FOOTPAD JACK



**6V 2A DC
ADAPTER JACK**
(ADAPTER
NOT INCLUDED)

**3-WAY
POWER SWITCH**
ON
OFF / FOOTPAD
CONTINUOUS

SPEAKER

MOTION SENSOR


SOUND SENSOR

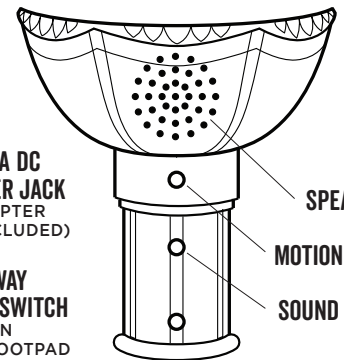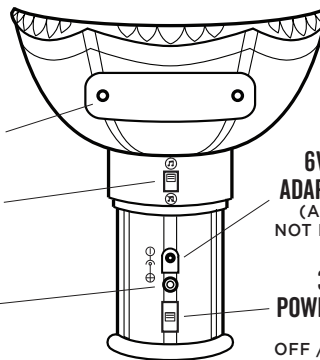

4AA

**BATTERIES
REQUIRED
(NOT INCLUDED)**

AGES 15+
5.84 FT
(178 CM)

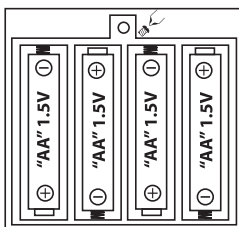

BATTERY CAUTIONS

- Requires (4) AA 1.5-volt alkaline batteries. Batteries are not rechargeable.
- Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed.
- Keep away from young children.
- Remove batteries when not in use.
- Use only batteries recommended in the instructions.
- Do not mix new and used batteries.
- Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
- Be mindful to insert batteries with the correct polarity (+/-) as indicated.
- Remove all exhausted batteries.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the item before being charged.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Always dispose of exhausted batteries properly.
- DO NOT dispose of batteries in fire, they may leak or explode.