

ANIMATED DROP DOWN SCARECROW™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.


ESTIMATED ASSEMBLY TIME SEVEN MINUTES.

PARTS

- PARTS:**
1. HEAD & BODY
 2. BASE FRONT
 3. BASE BACK
 4. LOWER POLE
 5. CENTER POLE WITH MODULE AND CONTROL BOX
 6. LARGE HORIZONTAL SUPPORT POLE
 7. SMALL HORIZONTAL SUPPORT POLE
 8. CLEVIS AND COTTER PINS (4)
 9. RIGHT ARM POLE
 10. LEFT ARM POLE
 11. LEFT HAND
 12. RIGHT HAND
 13. 6V 2A ADAPTER
 14. SANDBAGS (2)

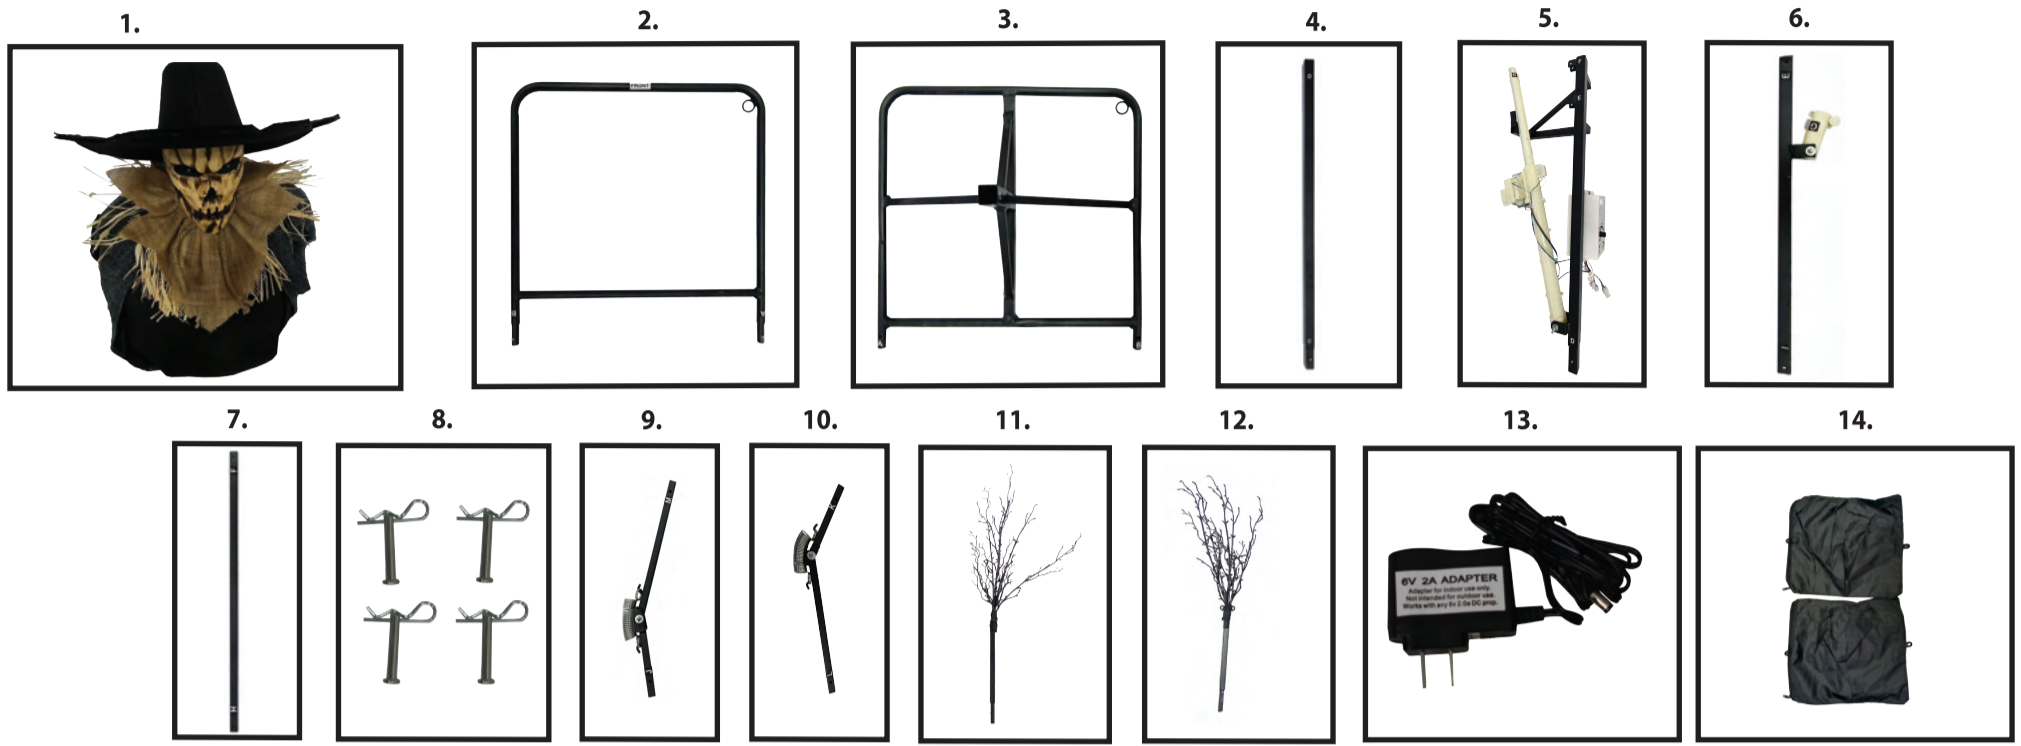


ASSEMBLY

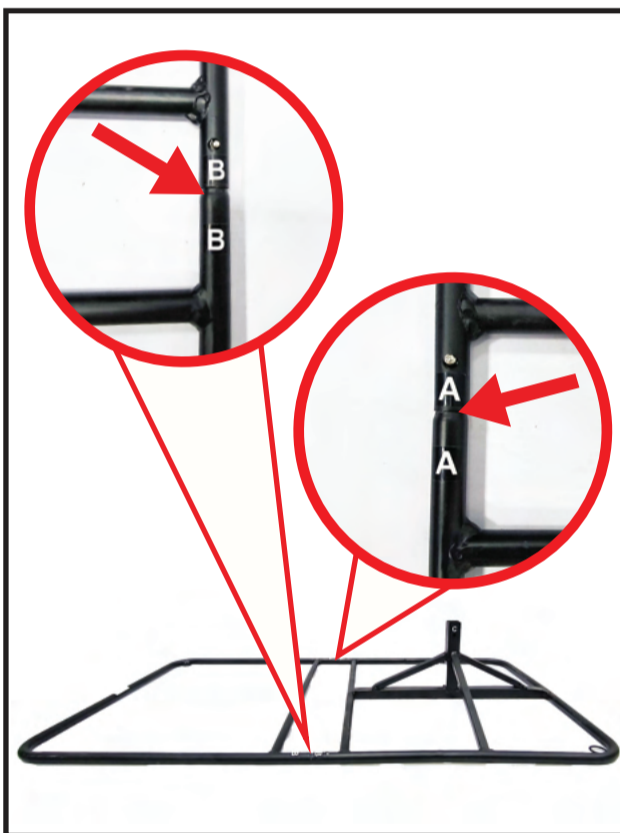


1. Snap lock the BASE FRONT with BASE BACK.

Match A to A and Match B to B

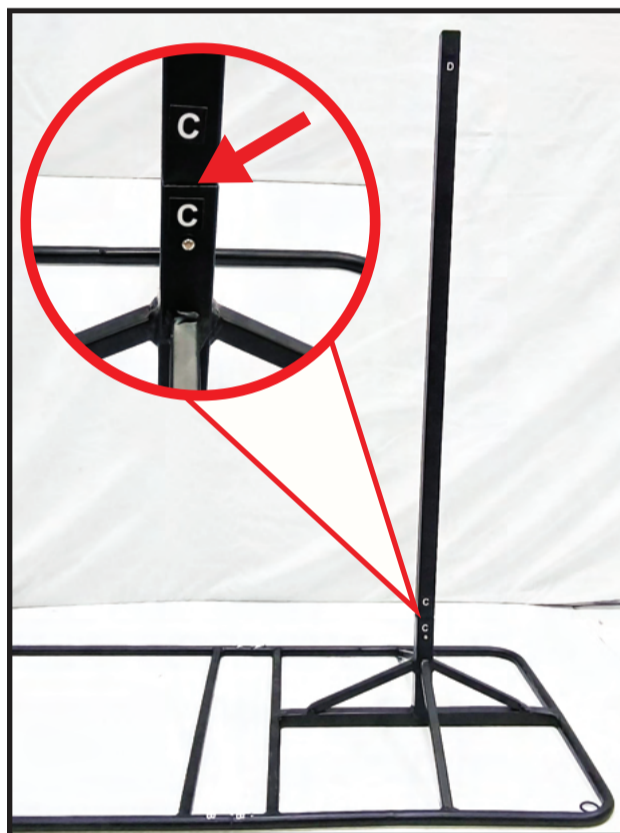

2. Snap lock the LOWER POLE into the completed BASE.

Match C to C

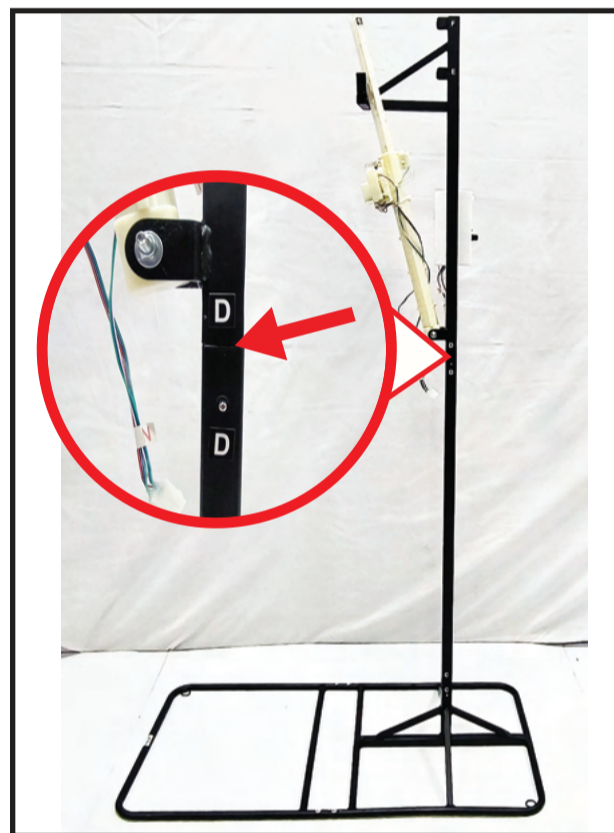


3. Snap lock the CENTER POLE WITH MODULE AND CONTROL BOX to the LOWER POLE.

Match D to D




4. Secure the LARGE HORIZONTAL SUPPORT POLE to the CENTER POLE WITH MODULE AND CONTROL BOX with the CLEVIS AND COTTER PIN.

MATCH E TO E

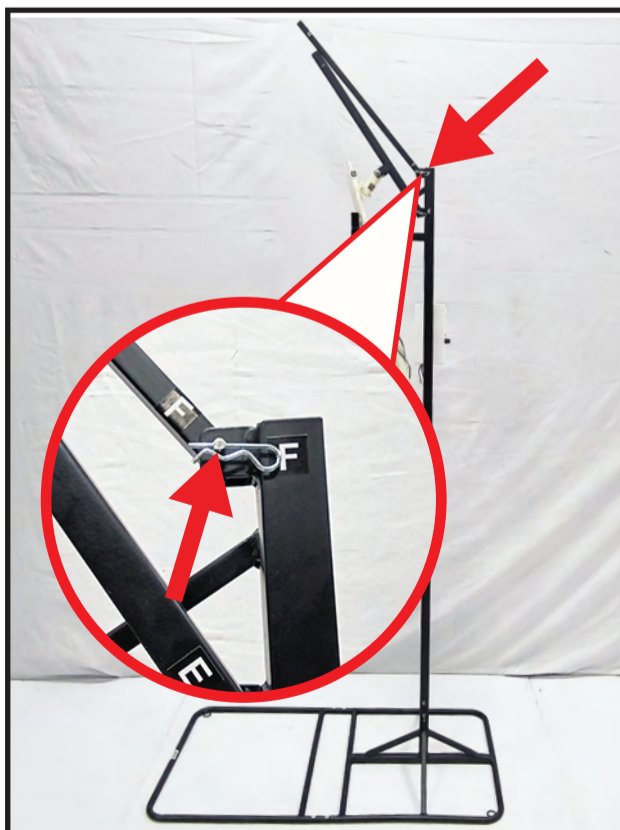


5. Secure the SMALL HORIZONTAL SUPPORT POLE to the CENTER POLE WITH MODULE AND CONTROL BOX using the small CLEVIS AND COTTER PIN.

MATCH F TO F

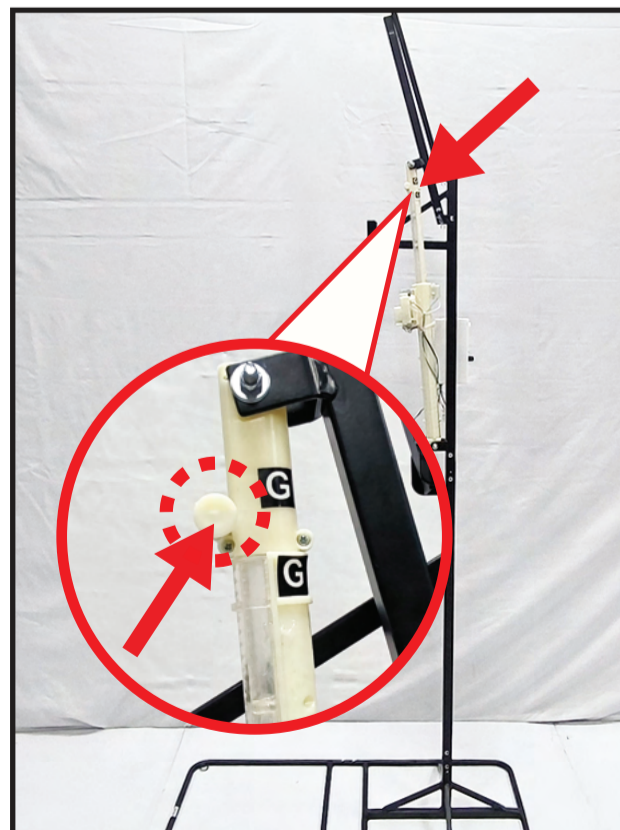

6. Press the push lock on the LARGE HORIZONTAL SUPPORT POLE to assemble the CENTER POLE WITH MODULE AND CONTROL BOX. Release the push lock to secure.

MATCH G to G

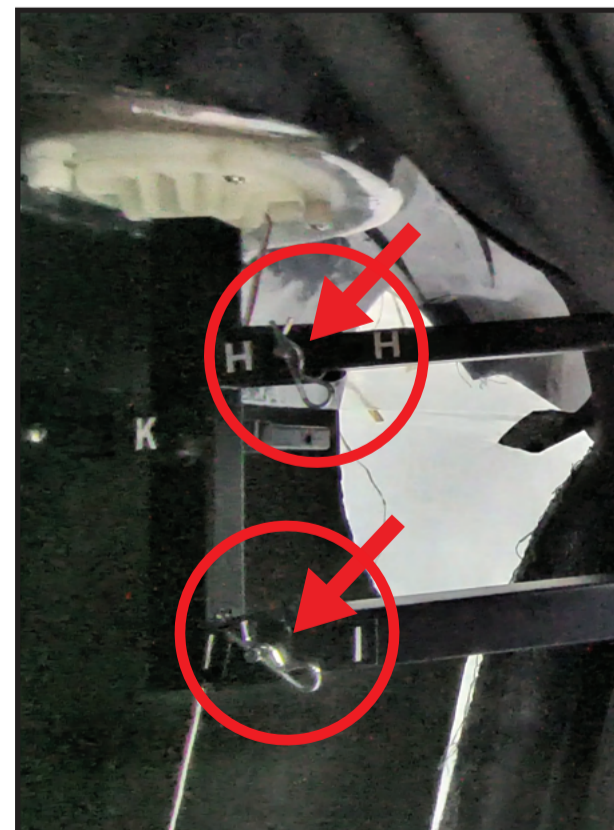

7. Insert the HEAD AND BODY into both HORIZONTAL SUPPORT POLES. Secure the HEAD AND BODY with the CLEVIS AND COTTER PINS.

Match H to H and Match I to I



8. Snap lock the RIGHT ARM POLE into HEAD AND BODY.

Match J to J



9. Snap lock the LEFT ARM POLE into HEAD AND BODY.

Match K to K




10. Snap lock the LEFT HAND POLE into the HEAD AND BODY.

Match L to L



11. Snap lock the RIGHT HAND POLE into the HEAD AND BODY.

Match M to M

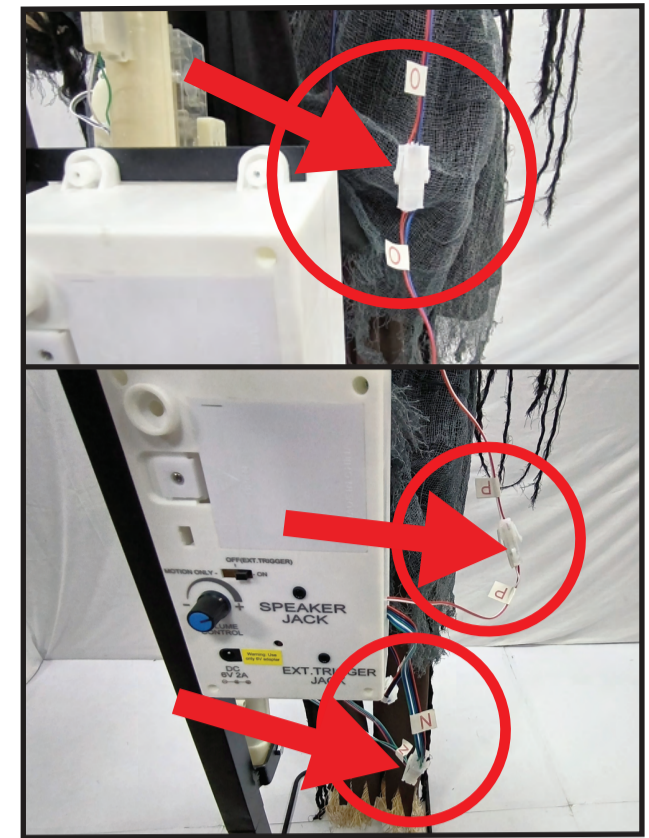


12. Connect the wires from the HEAD AND BODY to the wires located on the CENTER POLE WITH MODULE AND CONTROL BOX.

Match N to N, Match O to O, and Match P to P



13. Pull the fabric from the HEAD AND BODY over the CENTER POLE WITH MODULE AND CONTROL BOX.

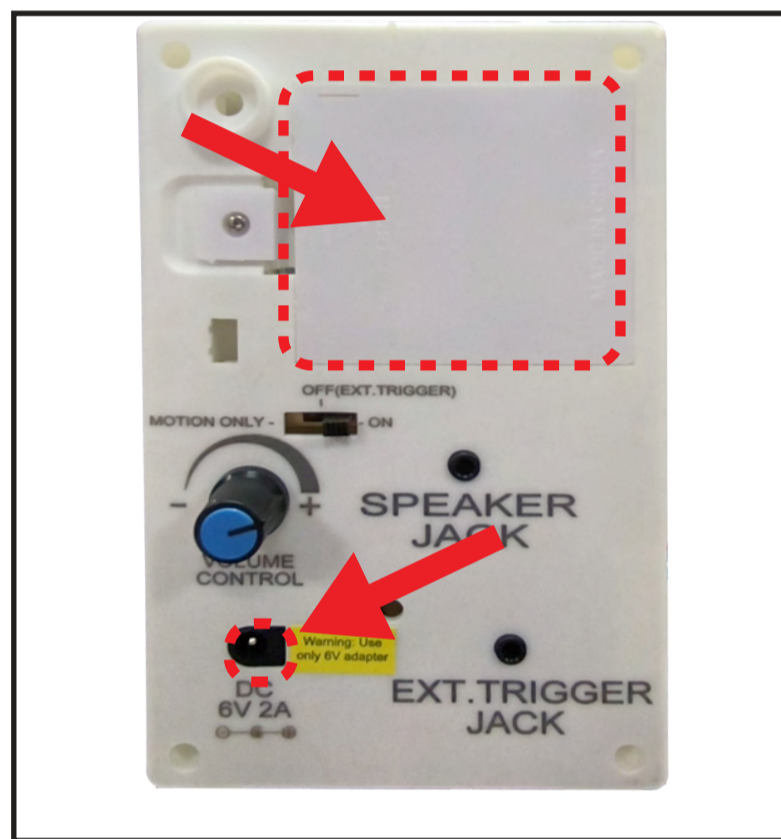

14. Insert 4 fresh alkaline batteries (recommended) or insert 6V 2A ADAPTER (Included). Turn the switch to the ON position to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn item OFF when not in use.



15. Close the hook and loop fastener access to the control box.



16. For added stability fill, the SANDBAGS to capacity. Place the SANDBAGS on the back of the completed BASE for optimal operation.

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on side of the control box.
2. Use volume knob on external speaker to control volume levels.




OPTIONAL EXT. TRIGGER SET UP

EXT. TRIGGER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from EXT. TRIGGER into the jack labeled EXT. TRIGGER JACK on the CONTROL BOX.
 2. Place the switch in the EXT. TRIGGER position to enable EXT. TRIGGER activation.
 3. Step on the EXT. TRIGGER to activate the scary sequence!
- * Ext. Triggers are sold separately and can be purchased at www.tekkyaccessories.com



Battery Diagram

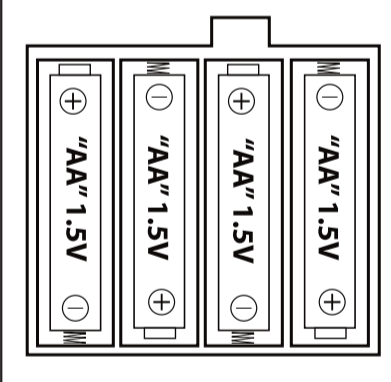

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

STORAGE AND REASSEMBLY

1




Secure the pop up MODULE (Follow steps 1 - 3) of assembly to reset the MODULE.

2



! WARNING ! THE SWITCH MUST BE IN THE OFF POSITION THROUGH ENTIRE PROCESS.


3

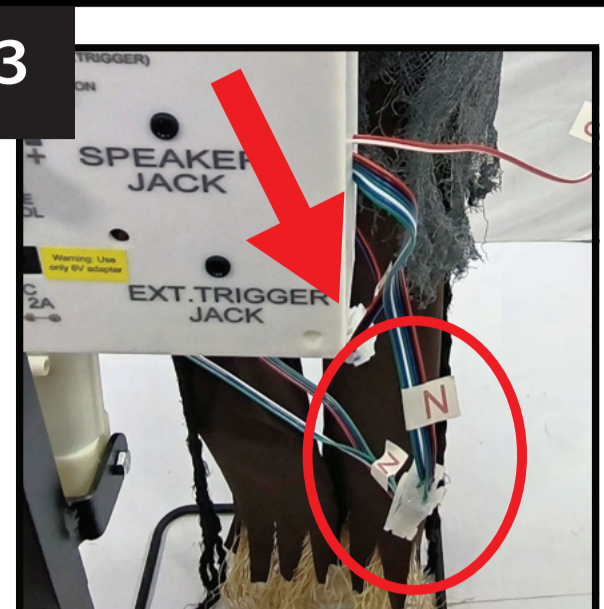

Connect the POP MODULE wire TO THE CONTROL BOX.


CONNECT N TO N.

4

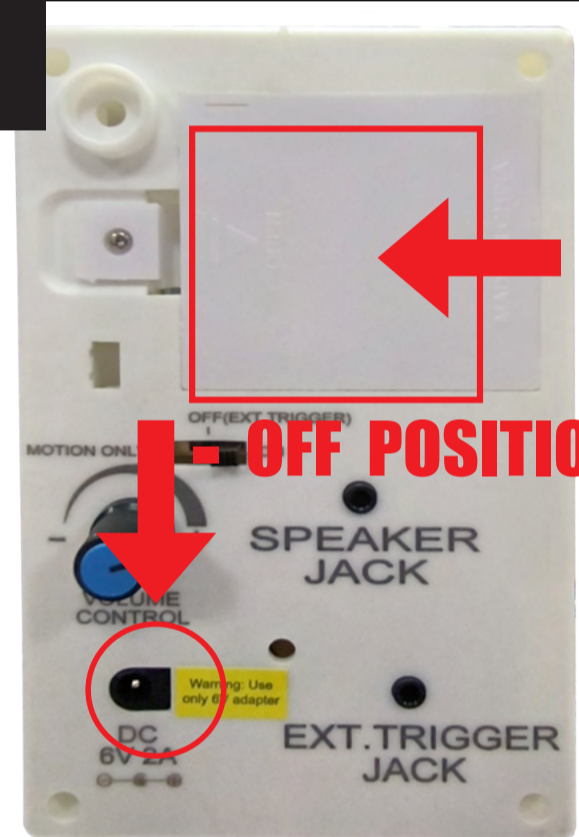

With the switch in the off position apply power. Plug in an adapter or insert Batteries.

5



WAIT FOR THE MODULE POLE TO FULLY RETRACT AND STOP.

6



Disconnect power (Remove a battery or unplug adapter) continue assembly.



TEKKY

visit us at tekkydesign.com

Requires 6V 2A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.

ANIMATED DROP DOWN SCARECROW™ is a trademark of Tekky.
Copyright © 2023 Tekky.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN
SETUP VIDEO

