


BOXHEAD TORTURE DEMON ANIMATED DECORATION™

INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.
ESTIMATED ASSEMBLY TIME: 5 MINUTES.

PARTS

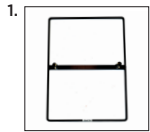


1. METAL BASE

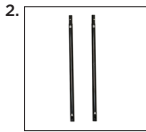

2. LOWER LEG POLES (2)




3. FEET (2)

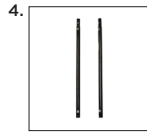

4. UPPER LEG POLES (2)


5. PANTS WITH
WAIST BRACKET

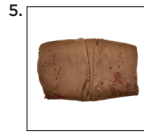

6. WAIST FRAME WITH
CONTROL BOX




7. HEAD & BODY

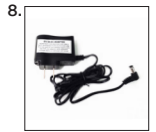


8. 6V 3A DC ADAPTER

ASSEMBLY

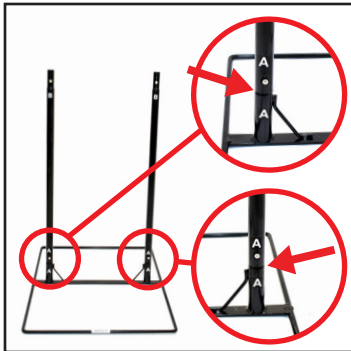


1. Insert and snap lock the
LOWER LEG POLES to
METAL BASE.

(MATCH A TO A) x2

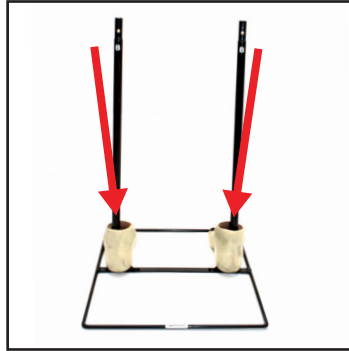


2. Slide the FEET over the
LOWER LEG POLES in
the correct left and right
orientation on the
METAL BASE.

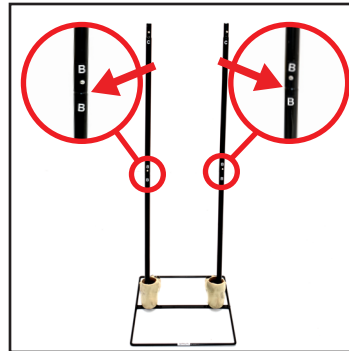


3. Insert and snap lock the
UPPER LEG POLES to
the LOWER LEG POLES.

(MATCH B TO B) x2

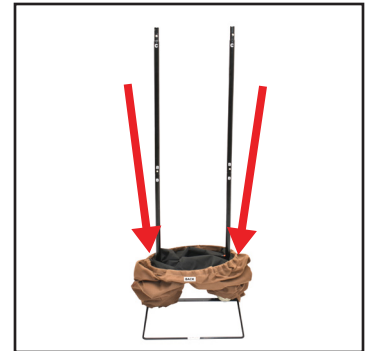


4. Slide the PANTS WITH
WAIST BRACKET
over the assembled LEG
POLES. Make sure
back label on PANTS
matches back label on
METAL BASE.

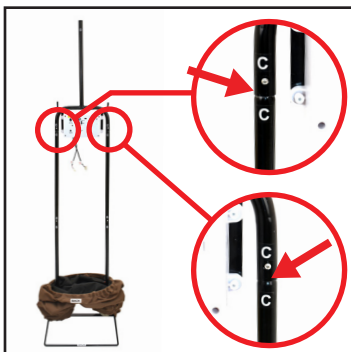


5. Insert and snap lock the
WAIST FRAME WITH
CONTROL BOX to the
UPPER LEG POLES.

(MATCH C TO C) x2

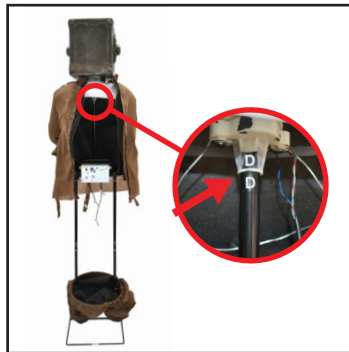


6. Insert and snap lock the
HEAD & BODY to the
WAIST FRAME WITH
CONTROL BOX.

(MATCH D TO D)

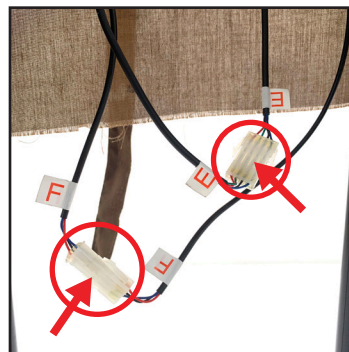

7. Connect the wires
located on the
CONTROL BOX.
(MATCH E TO E - Body
Movement and LED in
Head Box), (MATCH F
TO F - Human Sensor)

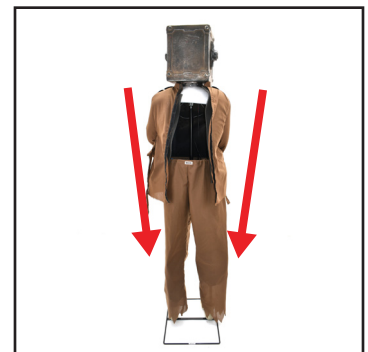

8. Insert the two metal
posts on WAIST
BRACKET into WAIST
FRAME WITH
CONTROL BOX.
(MATCH RED TO RED)
(MATCH BLUE TO BLUE)


ASSEMBLY



9. Attach the hook and loop fabric on the back of the HEAD & BODY.




10. Tie the belt strap in back of the HEAD & BODY.

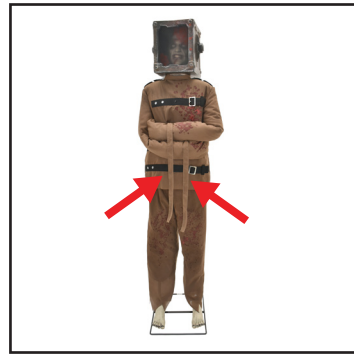


11. Make sure straps lay in downward position from arms.

OPERATING INSTRUCTIONS

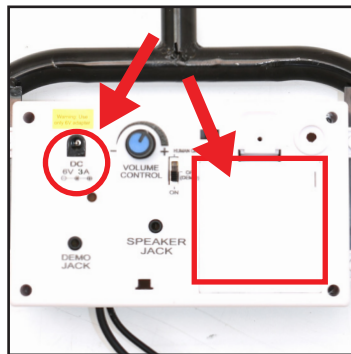

1. Plug in the 6V 3A DC ADAPTER (included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX and secure it by twisting it firmly. Do not overtighten.

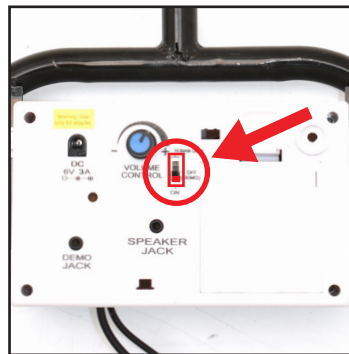

2. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use. Adjust volume control as needed.

OPERATING INSTRUCTIONS

OPTIONAL DEMO SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
 2. Place the switch on the CONTROL BOX into the OFF (DEMO) position to enable footpad activation.
 3. Step on footpad to activate the scary sequence!
- * Footpads are sold separately and can be purchased at www.tekkyaccessories.com




OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.



Battery Diagram

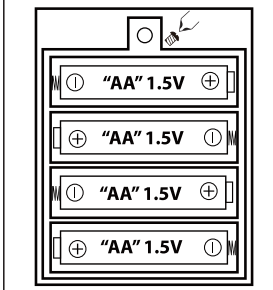

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.
Use only batteries recommended in the instructions.
Do not mix new and used batteries.
Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
Be mindful to insert batteries with the correct polarity (+/-) as indicated.
Remove all exhausted batteries.
Rechargeable batteries are only to be charged under adult supervision.
Rechargeable batteries are to be removed from the item before being charged.
Non-rechargeable batteries are not to be recharged.
The supply terminals are not to be short-circuited.
Always dispose of exhausted batteries properly.
Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.**

**WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkydesign.com for assistance.



Visit us at tekkydesign.com

Requires 4AA batteries (not included) or 6V 3A DC adapter (included).

ALL NEW MATERIALS:
PLASTIC, FABRIC, METAL,
POLYPROPYLENE FOAM,
POLYURETHANE FOAM

Surface washable only.

Boxhead Torture Demon
Animated Decoration™
is a trademark of Tekky.
Copyright © 2025 Tekky
All Rights Reserved.
FUN97026
MADE IN CHINA

**SMART PHONE SCAN
SETUP VIDEO**

