


BURLAP JUMPING SPIDER™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

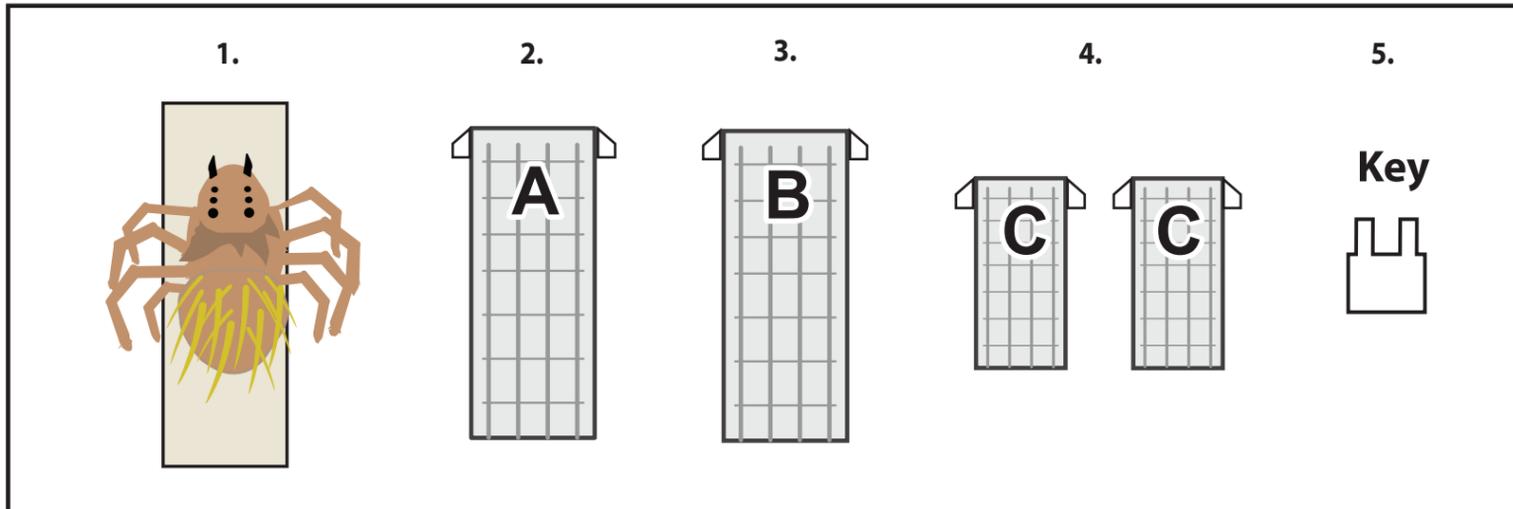


Parts:

- 1: MODULE AND SPIDER
- 2: FRONT FOOT
- 3: BACK FOOT
- 4: SIDE FEET
- 5: FOOT REMOVAL TOOL

Assembly:

1. Insert FRONT FOOT into bottom of MODULE WITH SPIDER until it locks into place. (Match A to A)
NOTE: Press to make sure each FOOT is flush with rectangular base.
2. To remove FOOT, insert plastic "KEY" (included) into holes on bottom. To release locks, twist and pull.
3. Insert BACK FOOT into bottom of MODULE WITH SPIDER until it locks into place. (Match B to B)
4. If needed place weight on FOOT to increase stability.
5. Insert SIDE FEET into bottom of MODULE WITH SPIDER until they lock into place. (Match C to C)
6. **IMPORTANT: Lift SPIDER wrapped in fabric until poles are vertical. Attach the 2 metal springs by pulling each spring backward and securing them to the posts located on either side of the pole on MODULE WITH SPIDER. Pull black fabric bag up and over the springs.**
7. Insert 4 AA alkaline batteries (not included) into the battery compartment located on the top of the MODULE or connect the DC Adapter (sold separately). NOTE: Make sure there are no obstructions to hinder the SPIDER'S movement.
8. Remove spring instruction label located on the corner of the MODULE and turn switch on top of MODULE to ON to operate in sound and motion activation mode. Make a loud sound (clap) or move in front of the item to activate. Leave switch in OFF position when not in use.
9. Release fabric around SPIDER and slide fabric pockets over all four feet. Place Spider in desired position and pose legs to complete setup.

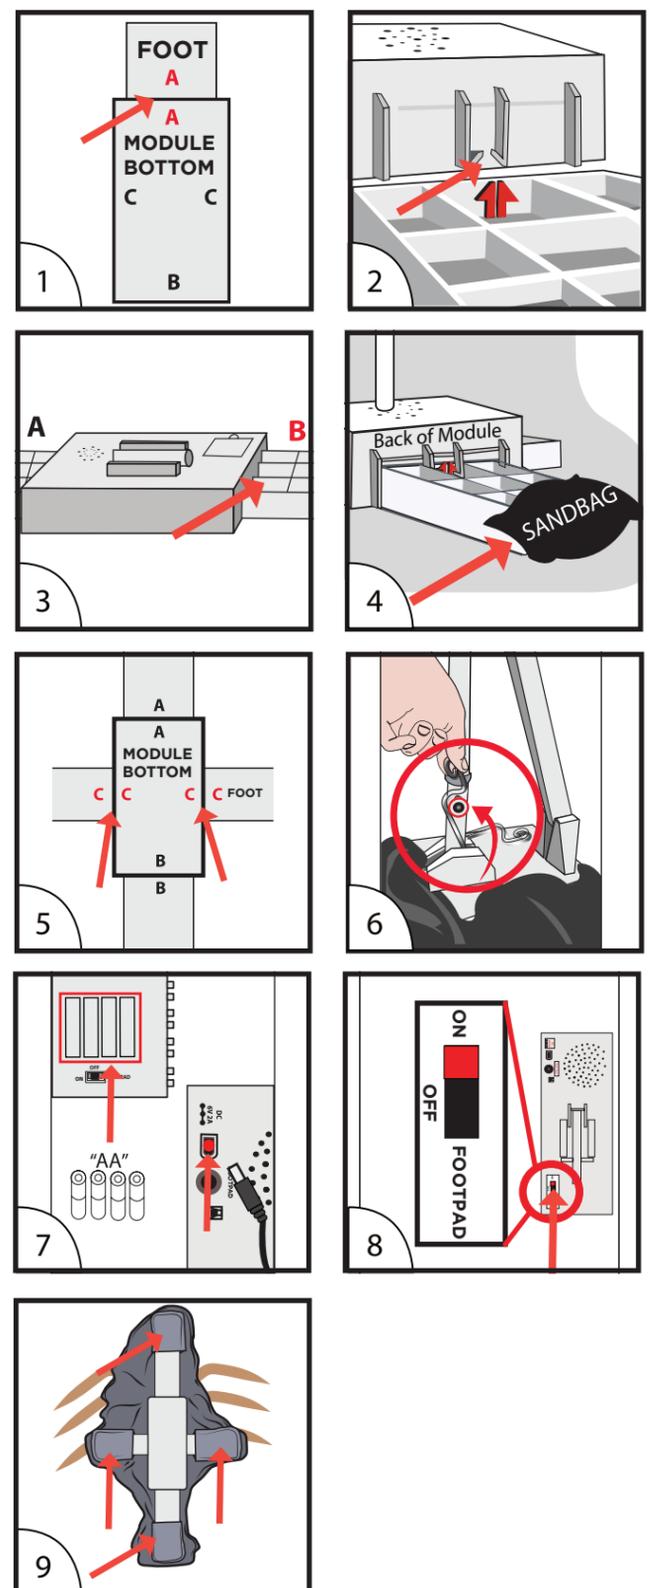

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED.


MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD JACK on the CONTROL BOX.


2. Place the switch to the FOOTPAD position to enable FOOTPAD activation.

3. Step on the FOOTPAD to activate the scary sequence!

*Footpads are sold separately and can be purchased at www.tekkyaccessories.com

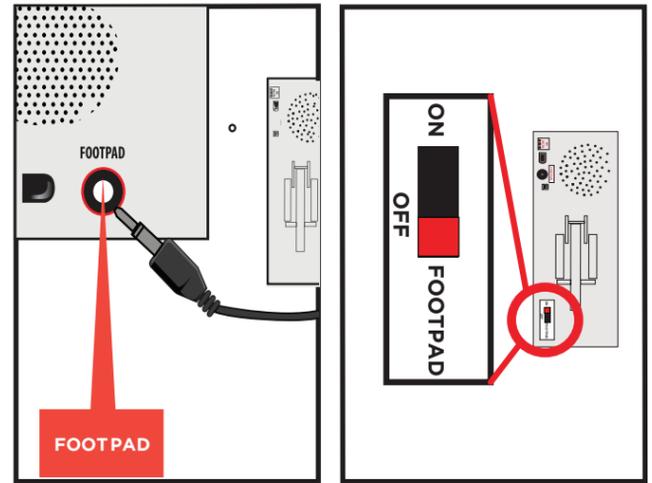

Battery Diagram

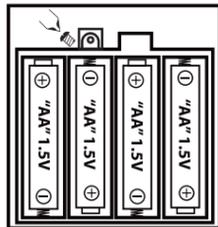

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING

**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**

SMART PHONE SCAN

SETUP VIDEO



TEKKY

visit us at tekkydesign.com

Requires 6V 2A Adapter (not included) or 4AA batteries (not included)

ALL NEW MATERIAL ONLY:

POLYESTER FIBRES

SURFACE WASHABLE ONLY.

USA REG. NO: PA 8542 (TW) PATENT:

<https://tekkydesign.com/pages/terms-conditions.php>

TEKKY, ORLAND PARK, IL 60467 USA

BURLAP JUMPING SPIDER™

is a trademark of Tekky.

Copyright © 2025 Tekky.

All Rights Reserved.

MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to support@tekkydesign.com for assistance.