



6 FEET TALL! SOUND AND MOTION ACTIVATED HALLOWEEN PROP EERIE COLOR CHANGING LED LIGHTS AND SPOOKY SOUNDS SETTING UP YOUR COLOR-CHANGING INVISIBLE WITCH™


PARTS (11)

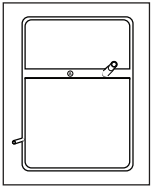


**METAL
BASE**

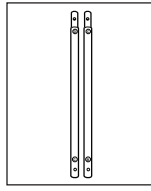


**LOWER
POLES (2)**

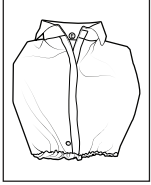


COSTUME

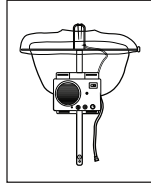


**SHOULDER
FRAME WITH
CONTROL BOX**

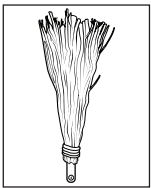


**BOTTOM
BROOM
POLE**

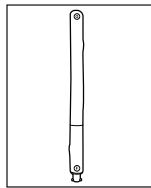


**LOWER
BROOM
POLE**

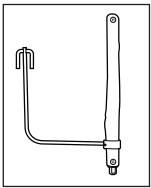


**MIDDLE
BROOM
POLE**

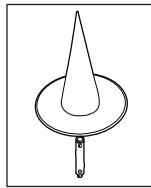


**HAT WITH
BROOM
POLE**

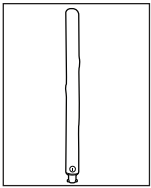

**UPPER
BROOM
POLE**

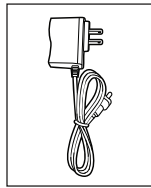

**5.9V 1.5A
DC
ADAPTER**

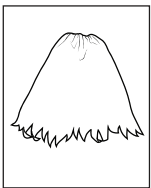

CAPE



**SCAN CODE
FOR EASY
SETUP VIDEO**

⚠️ **WARNING**

CHOKING HAZARD - small parts. This item is not a toy. For decoration only.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children 14 years of age and younger.

AGES 15+

INCLUDES ONE (1)

COLOR-CHANGING INVISIBLE WITCH™ DECORATION.
ASSEMBLY REQUIRED. DISPLAY ON LEVEL SURFACE.

ALL NEW MATERIALS: PLASTIC, METAL.
SURFACE WASHABLE ONLY.

INDOOR/SHELTERED OUTDOOR USE.
TAKE ITEM INDOORS DURING INCLEMENT WEATHER.
ACTUAL ITEM MAY VARY FROM THE PHOTOGRAPHS
AND/OR ILLUSTRATIONS ON PACKAGE.

ITEM # 96715.

COLOR-CHANGING INVISIBLE WITCH™ IS A TRADEMARK OF TEKKY.
COPYRIGHT © 2025 TEKKY. ALL RIGHTS RESERVED.

NOTE: KEEP POWER SWITCH IN THE "OFF" POSITION WHEN NOT IN USE.



**1. INSERT AND SNAP LOCK
LOWER LEG POLE INTO
METAL BASE.
MATCH B TO B.**



**2. INSERT AND SNAP LOCK
LOWER POLE INTO
MIDDLE POLE.
MATCH C TO C.**



**3. INSERT AND SNAP LOCK
SHOULDER FRAME WITH
CONTROL BOX INTO MIDDLE
POLE. MATCH D TO D.**



**4. SLIDE COSTUME OVER
SHOULDER FRAME WITH
CONTROL BOX.**



**5. INSERT BOTTOM BROOM
POLE INTO LOWER BROOM
POLE. MATCH F TO F.
TWIST TO LOCK.**



**6. INSERT MIDDLE BROOM
POLE INTO LOWER BROOM
POLE. MATCH G TO G.
TWIST TO LOCK.**




**7. INSERT HAT WITH
BROOM POLE INTO
MIDDLE BROOM POLE.
MATCH H TO H. TWIST
TO LOCK.**



**8. INSERT UPPER POLE
INTO HAT WITH BROOM
POLE. MATCH I TO I.
TWIST TO LOCK.**



**9. INSERT MIDDLE BROOM
POLE INTO SHOULDER
FRAME WITH CONTROL
BOX. MATCH J TO J.
TWIST TO LOCK.**

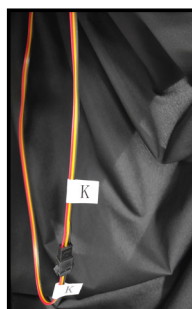

**10. CONNECT WIRE FROM
HAT TO WIRE FROM
CONTROL BOX. (MOTION
SENSOR) MATCH K TO K.**



**11. INSERT 5.9V 1.5A
DC ADAPTER TO
CONTROL BOX.**



**12. PLACE CAPE
OVER COSTUME.**



**13. PLACE POWER SWITCH ON BACK OF WITCH TO THE "ON" POSITION TO
OPERATE IN SOUND AND MOTION ACTIVATION MODE. MAKE A LOUD SOUND
(CLAP) OR MOVE IN FRONT OF WITCH TO ACTIVATE THE SCARY SEQUENCE!**

TO ACTIVATE WITH FOOTPAD

(NOT INCLUDED—CAN BE PURCHASED ONLINE AT TEKKYACCESSORIES.COM) CONNECT CABLE FROM FOOTPAD TO THE JACK LABELED "DEMO JACK" LOCATED ON CONTROL BOX. PLACE POWER SWITCH ON CONTROL BOX TO "DEMO" POSITION TO ENABLE FOOTPAD ACTIVATION. STEP ON THE FOOTPAD TO ACTIVATE THE ITEM. KEEP SWITCH IN THE "OFF" POSITION WHEN NOT IN USE.

MADE IN CHINA