


CONSTANT MOTION GHOST™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


PARTS

1. BASE WITH MODULE
2. GHOST HEAD WITH FABRIC
3. 12 VOLT 2 AMP ADAPTER

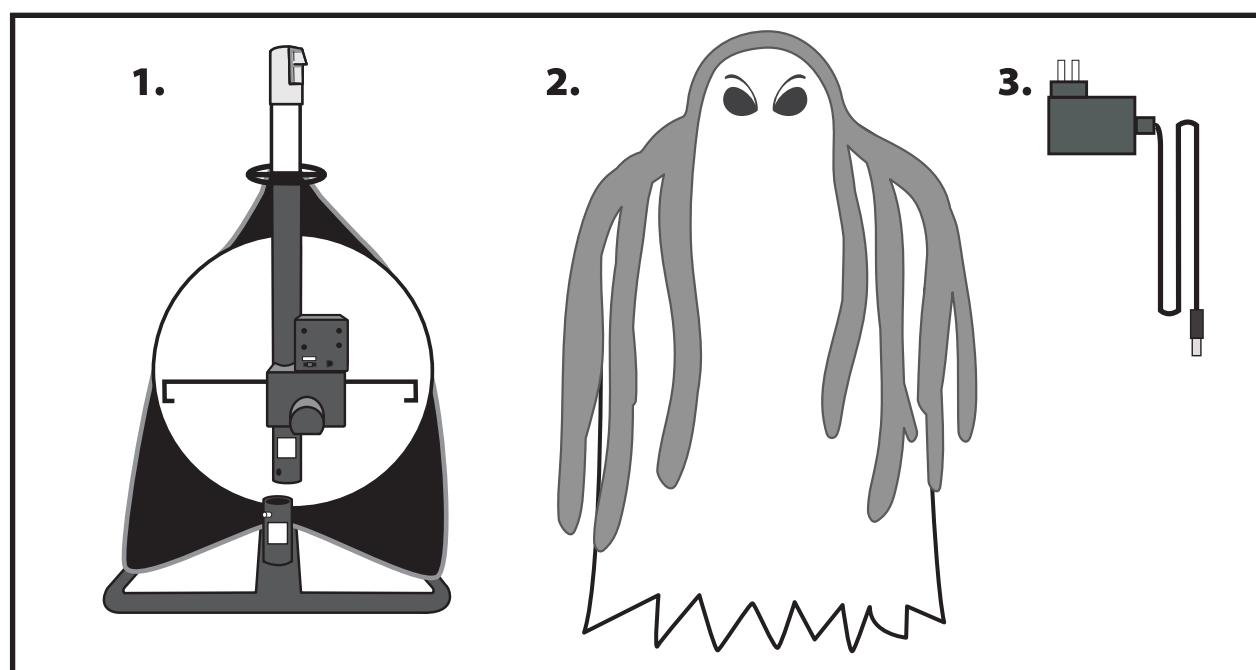

****DO NOT PLUG IN ADAPTER UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY****

1. Attach the long pole on **BASE WITH MODULE** to the short pole on the metal frame. (**Match A to A**). Push in metal pin on the short pole while inserting short pole into the long pole. (see illustration 1) The poles are fully attached when you hear an audible click.
NOTE: Add weight to metal frame on BASE for extra stability if needed.
2. Snap lock the **GHOST HEAD WITH FABRIC** to the **BASE WITH MODULE**. (**Match B to B**).
3. Plug in 12 volt 2 amp adapter into jack located on the **MODULE**.
4. Turn the switch on the **MODULE** to the "ON" position.
NOTE: CONSTANT MOTION GHOST WILL ACTIVATE ONCE SWITCH IS TURNED TO "ON" POSITION. GHOST WILL CONTINUE TO REPEAT SCARY SEQUENCE UNTIL THE SWITCH IS TURNED TO THE "OFF" POSITION. KEEP SWITCH IN "OFF" POSITION WHEN NOT IN USE.
5. Pull down **FABRIC** and adjust gauze for an "un"lifelike appearance.

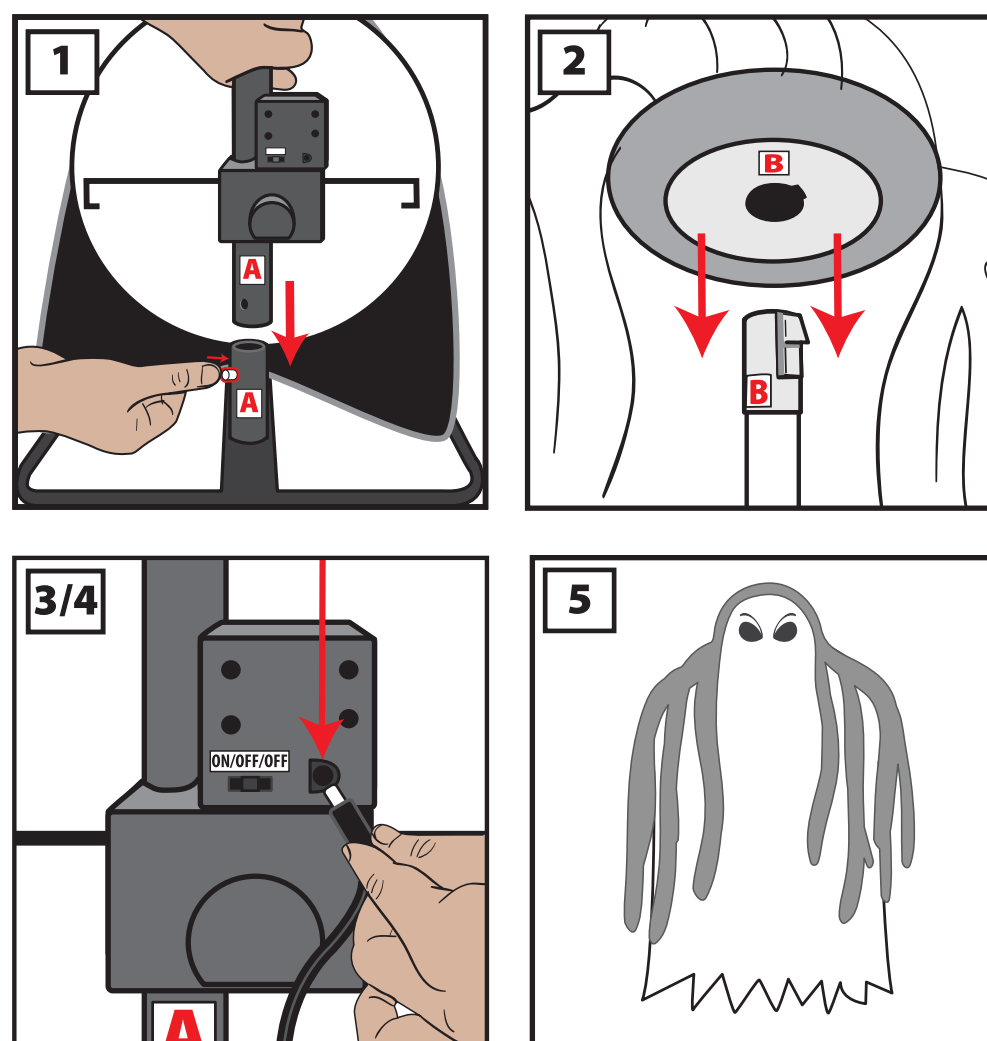

OUTDOOR WARNINGS:

- We recommend you operate your item in a sheltered outdoor area.
- This item operates best outdoors in temperatures above freezing (32°F).
- To avoid damage, bring your item indoors during adverse weather conditions (extreme cold, strong winds and/or rain).
- **OPERATING THIS ITEM IN THE RAIN COULD CAUSE DAMAGE!**



visit us at tekkytoys.com

Adapter Required:
12 VOLT 2 AMP DC ADAPTER
(included)

ALL NEW MATERIALS:
PLASTIC, WIRE, POLYESTER

Surface washable only.

CONSTANT MOTION GHOST is a trademark of Tekky Toys.

Copyright © 2015 Tekky Toys.

All Rights Reserved.

MADE IN CHINA

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go
to www.tekkytoys.com for assistance.

