




INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

Setup Instructions: Creepy Caretaker

Parts (5):

1. Head, Hand & Clothes
2. Module/Base
3. Upper Tombstone
4. Lower Tombstone
5. Bag with Tombstone Stakes (3) & Feet (2)

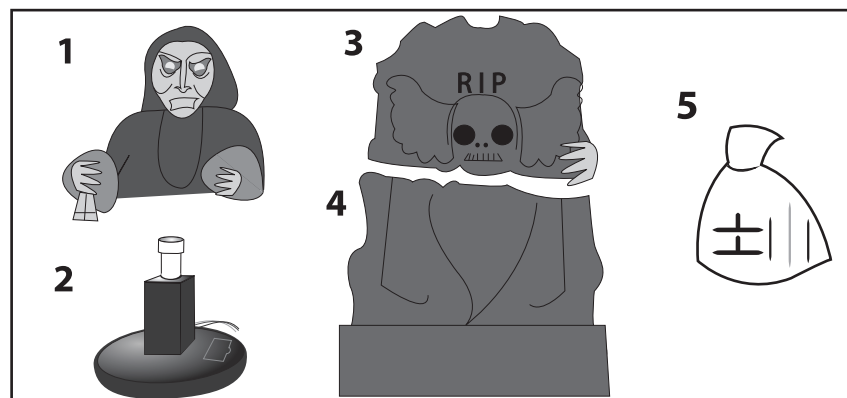


- 1.) Attach HEAD, HAND & CLOTHES to Module/Base.
Twist to lock into place.
- 2.) Connect cable coming from under clothes to cable coming from MODULE/BASE matching A to A.
- 3.) Insert 3 spikes into pre-drilled holes in UPPER TOMBSTONE. Make sure to keep long metal spike in center.
- 4.) Connect UPPER TOMBSTONE to LOWER TOMBSTONE by inserting spikes into pre-drilled holes in LOWER TOMBSTONE. Press Top & Bottom halves of TOMBSTONE together.
- 5.) (Indoor) Insert feet into bottom of LOWER TOMBSTONE as shown.
(Outdoor) Turn feet 90° and insert, then insert opposite side of spike into soft ground.
- 6.) Make sure to keep TOMBSTONE close to the Caretaker so lights on the TOMBSTONE shine on his face. Connect cable found inside sleeve to cable coming from Tombstone matching B to B.
- 7.) Find velcro on the hand of UPPER TOMBSTONE. Attach to the velcro on matching sleeve.

Note: Bend lantern arm in U-shape as pictured. Keep lantern hand level with mouth, and make sure lantern can be seen when Caretaker rises.

- 8.) Insert 4 brand new AA batteries into battery compartment located on MODULE, or attach optional 6V 2A DC adapter (sold separately).

- 9.) Pull clothes down and fully cover Base as shown.

Note: Turn switch on MODULE to ON to operate in Timer/Sound activation mode (Clap during 1.5 minute breaks to instantly start item playing again). Turn item OFF when not in use.

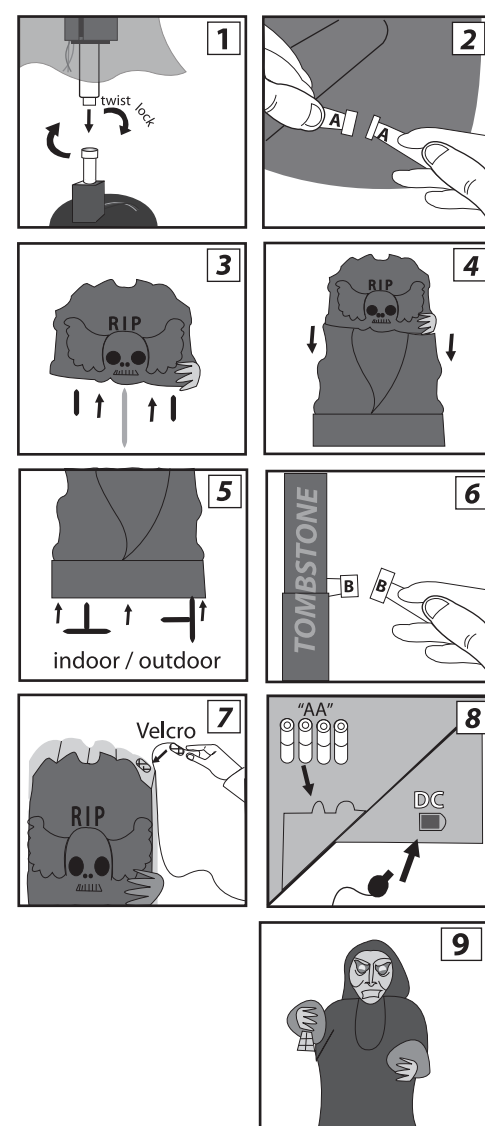

Optional Footpad Setup

Follow Steps 1 through 8 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to step #9 to continue setup)


NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

*Footpads are sold separately and can be purchased at www.tekkytoys.com

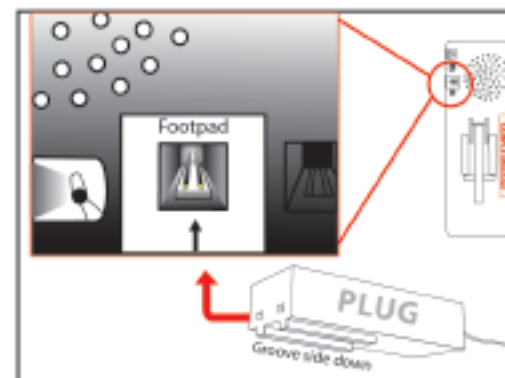

Outdoor Warnings: For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

****No weight should be placed onto item****

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
Spring activated motion may cause injury if instructions are not followed correctly.
Stay clear of item while operating.

Requires 4'AA' Batteries
or optional DC Adapter (6V 2A)
Surface washable only.
ALL NEW MATERIALS:
PLASTIC, POLYESTER,
POLYESTER FIBER

CREEPY CARETAKER
is a trademark of Tekky Toys.
Copyright © 2010 Tekky Toys.
All Rights Reserved.

SMART PHONE SCAN
SETUP VIDEO

