

# 6 FOOT ANIMATED LED FLAMING SCARECROW™

## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.







WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.



### PARTS

1. STAND (QTY 1)
2. METAL SNAP LOCK POLES (QTY 4)
3. HEAD, BODY, AND ARM (QTY 1)
4. WAIST BRACKET AND MODULE (QTY 1)
5. RIB CAGE AND FABRIC (QTY 1)

1. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **A** to **A**)
2. Insert METAL SNAP LOCK POLES into METAL STAND. (Match **B** to **B**)
3. Insert WAIST BRACKET AND MODULE into METAL SNAP LOCK POLES. (Match **C** to **C**)
4. Lift the clothing on the HEAD BODY AND ARM and insert the pole into the WAIST BRACKET AND MODULE. (Match **D** to **D**)
5. Connect the arm poles located inside his *RIGHT* sleeve under the shoulder area on the HEAD, BODY AND ARM. (Match **E** to **E**)
6. Attach RIB CAGE AND FABRIC to HEAD BODY AND ARM using the hook and loop fasteners located underneath the burlap collar.
7. Reach inside the HEAD BODY AND ARM and connect all three wires located inside the clothing. (Match **F** to **F**) (Match **G** to **G**) and (Match **H** to **H**)
8. Gently unbend and pose his *LEFT* (non-moving) arm as pictured.  
\*Make sure the motion sensor is clear from fabric and other obstructions.
9. Reach inside the fabric on the HEAD BODY AND ARM. Connect 6V 2A ADAPTER (not included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the MODULE. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use.  
**WARNING: FAST MOTION. STAY CLEAR OF SWIPING ARM WHILE OPERATING!**

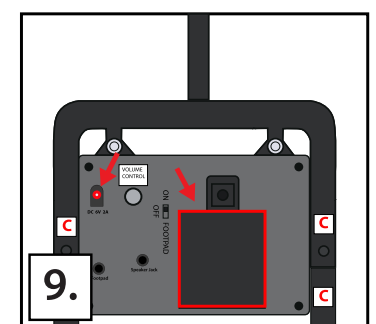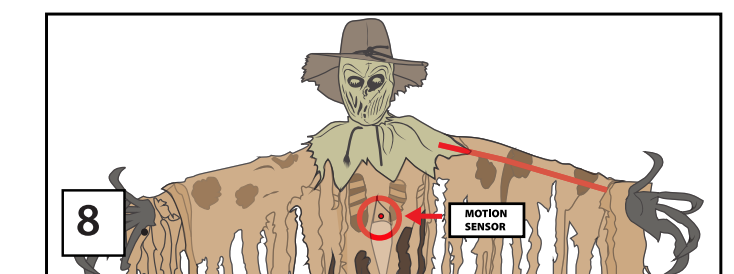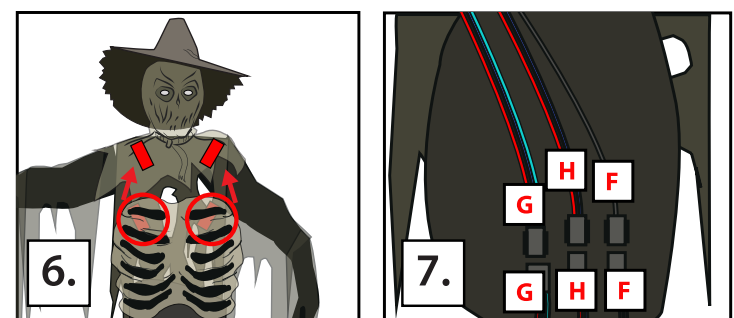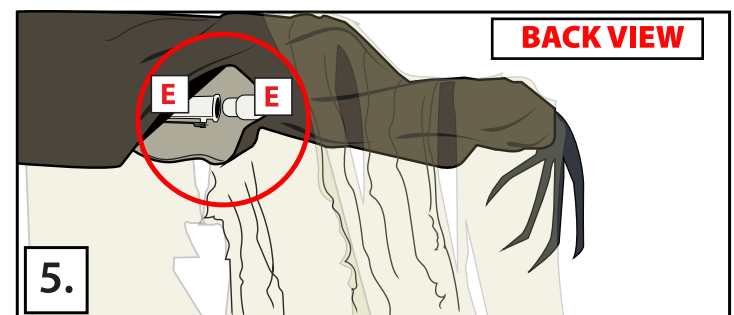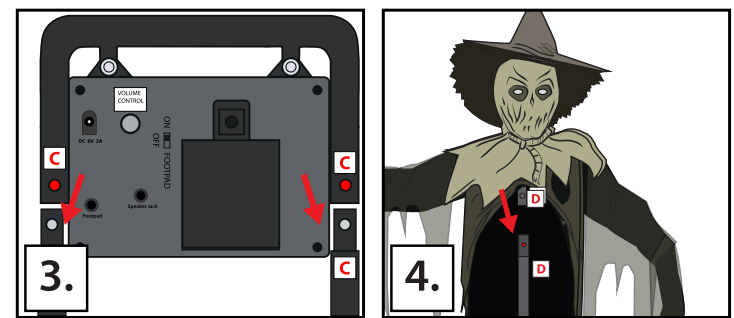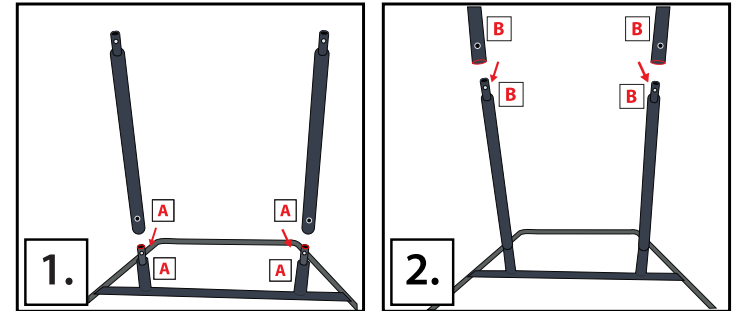


TROUBLESHOOTING	
PROBLEM	SOLUTION
Item will not activate/Motion sensor does not work	Ensure motion sensor is located on the front of the chest is not blocked by fabric or any other obstructions. To test the motion sensor shine a flashlight in the motion sensor tube. See Illustration 8.
Item will not activate/Arm will not move	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.
Sound is distorted or faint	If using batteries, replace with fresh batteries.
No Sound.	Ensure the volume knob is not turned all the way down.
No flaming effect in head.	Ensure all wires are connected securely and matched with the correct labels. See Illustration 7.

#### OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

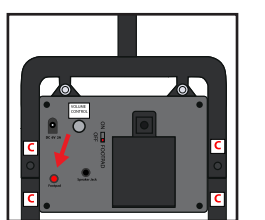


\* Footpads and adapters are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)

#### OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Plug speaker cord into the jack labeled SPEAKER JACK located on the MODULE.
2. Use volume knob on external speaker to control volume levels.

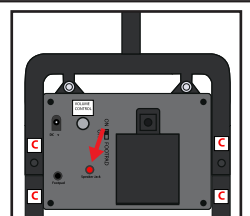

#### SMART PHONE SCAN SETUP VIDEO



#### Battery Diagram

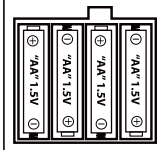

#### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**  
**RECOMMENDED FOR SHELTERED OUTDOOR USE.**



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, or any parts missing, please go to [tekkydesign.com](http://tekkydesign.com) for assistance or call 1-877-527-0313



visit us at [tekkydesign.com](http://tekkydesign.com)  
Requires 6V 2A ADAPTER (not included)  
or 4AA batteries (not included)

ALL NEW MATERIALS:  
METAL, FOAM, PLASTIC, POLYESTER  
Surface washable only.

FLAMING SCARECROW™ is a trademark of Tekky.  
Copyright © 2020 Tekky.  
All Rights Reserved.  
MADE IN CHINA

Model # 58686

Item# 1005 250 085