FLYING BAT"


INSTALLATION AND OPERATING INSTRUCTIONS


KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN



OPERATING INSTRUCTIONS:

- 1. Remove heavy-duty demonstration batteries and insert 2 new 'AA' batteries into the battery compartment located on the body of the bat.
- 2. Unravel wire on mounting bracket to desired length.
- 3. Securely hang mounting bracket. Mounting bracket has multiple holes allowing for a range of mounting capabilities.
- 4. Insert plastic hook located on mounting bracket into the plastic loop located on the top of the bat.
- 5. Turn switch on the bat to the "ON" position.
- 6. Gently push bat forward in a circular motion to initiate flying motion. (see illustration A)

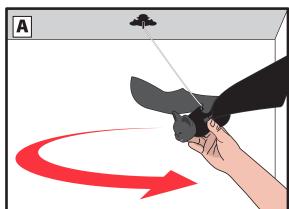

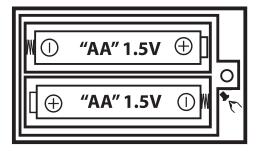

BATTERY INSTRUCTIONS AND CAUTIONS:

- -Use only the batteries recommended.
- -Remove batteries when not in use.
- -Do NOT use rechargeable batteries.
- -Be sure to insert the batteries with the correct polarity +/-.
- -Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
- -Always dispose of exhausted batteries properly.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

Warning! This item is not a toy. For decoration only. Strangulation Risk!
Keep cable away from children. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children 14 years of age and younger.

WARNING: STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT HANG ITEM ON UNEVEN SURFACE.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.

Surface Washable Only.ALL NEW MATERIALS: PLASTIC, POLYESTER

Battery Powered: Requires 2 AA Batteries

FLYING BAT is a trademark of Tekky Toys. Copyright © 2015 Tekky Toys. All Rights Reserved. MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkytoys.com for assistance.

