 


GRAVE MOURNER

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

SET UP INSTRUCTIONS GRAVE MOURNER

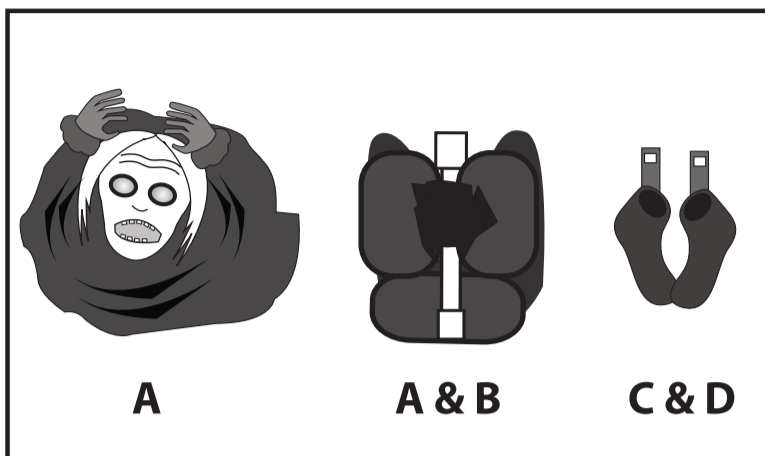

PARTS

 
 
 
 
 
 
1. UPPER BODY - HEAD, ARMS, HANDS, SHIRT (LABELED A)

2. LOWER BODY AND BASE, AND POLE WITH SKIRT (LABELED A & B)

3. FEET (LABELED C & D)

- 1). Snap lock **POLE WITH SKIRT** (male end) into pole on **LOWER BODY AND BASE** (female end). (Match **B** to **B**)
Press until it clicks into place.
- 2). Insert **FEET** into bottom of **LOWER BODY AND BASE**. (Match **C** to **C** and **D** to **D**)
- 3). Snap lock **UPPER BODY** to pole on **LOWER BODY AND BASE**. (Match **A** to **A**)
Press until it clicks into place.
- 4). Connect cable coming from under clothes to cable coming from **LOWER BODY AND BASE**. (Match **E** to **E**)
- 5). Attach hook and loop fasteners under back of shirt to fasteners on top of skirt.
- 6). Attach hook and loop fasteners under skirt to fasteners located behind ankle on each foot.
- 7). Insert 4 brand new AA batteries into battery compartment located on the bottom of the **LOWER BODY AND BASE**, or attach optional 6V 2A adapter (sold separately).
- 8). Adjust skirt and shirt for a realistic appearance.

Turn switch on top of **BASE** to **ON** to operate in **Timer/Sound mode** (Item will function with 3 minute breaks between cycles - or, clap during 3 minute break to instantly start item playing again).
Leave switch in **OFF** position when not in use.

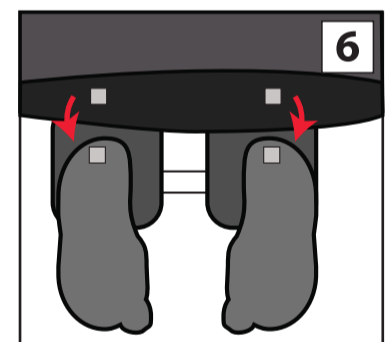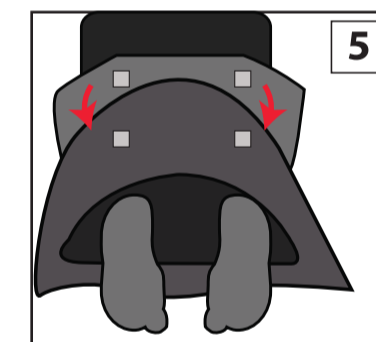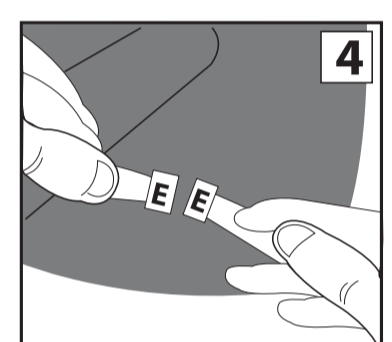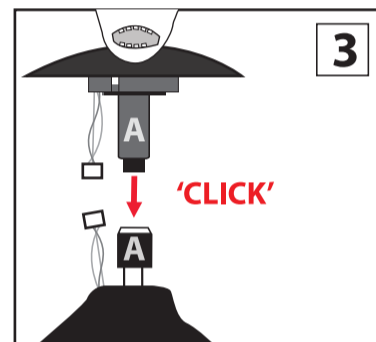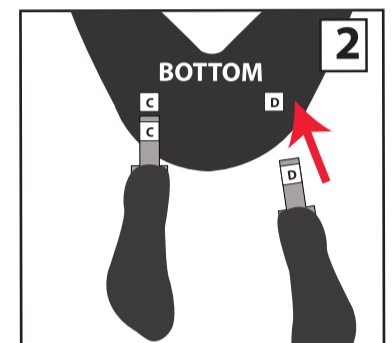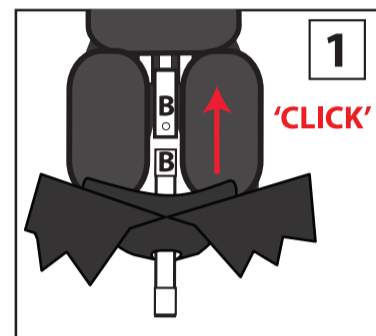

Optional Footpad Setup

Follow Steps 1 through 8 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

 
 
NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to footpad jack of your item. **DO NOT** use excessive force when inserting plug.

*Footpads are sold separately and can be purchased in Spirit Halloween stores or online at: www.spirithalloween.com

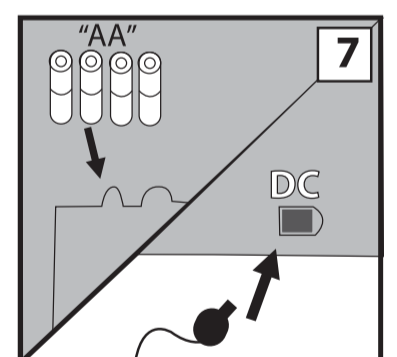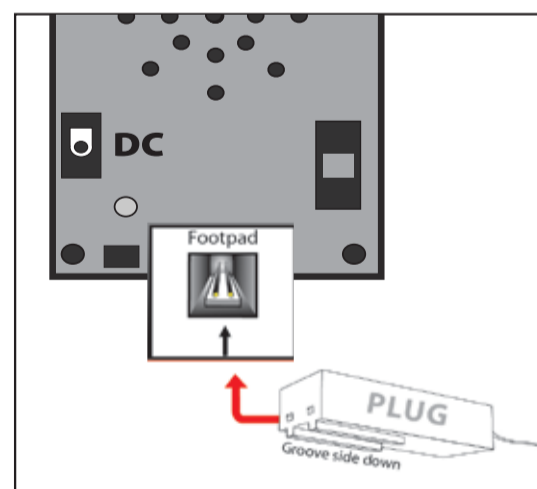

Outdoor Warnings: For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.



VISIT US: WWW.TEKKYTOYS.COM

Surface Washable Only.
ALL NEW MATERIALS: PLASTIC, POLYESTER,
POLYESTER FIBER

Battery Powered:
Requires 4 AA Batteries (not included)
DC Adapter Ready 6V 2A (not included)
** Footpad and DC adapter sold separately and
can be purchased at www.spirithalloween.com

Gravemourner is a trademark of Tekky Toys.
Copyright © 2012 Tekky Toys.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN SETUP VIDEO



****No weight should be placed onto item****

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
Stay clear of item while operating.



