


GIGGLES THE CLOWN™

Installation and Operating Instructions












Keep all plastic and wire parts away from children.

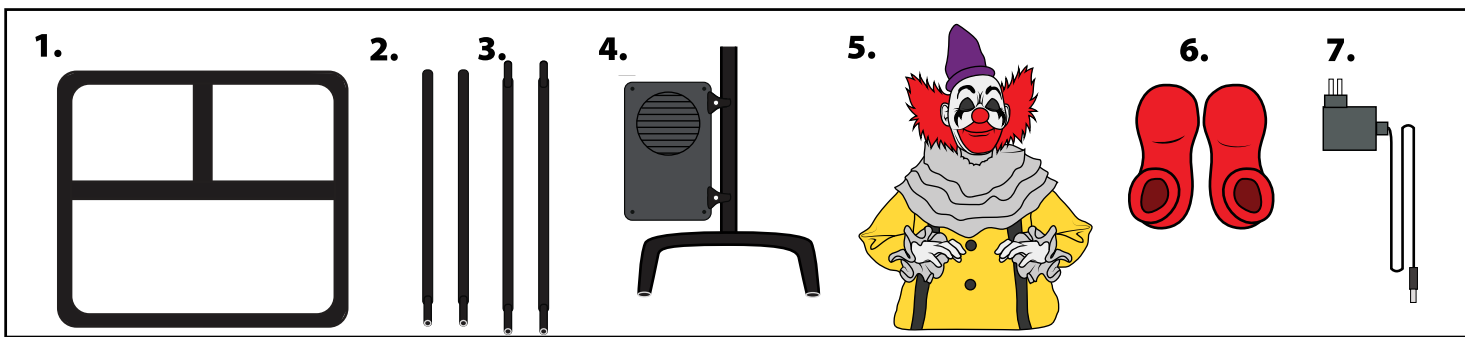

PARTS

1. METAL STAND
2. LOWER LEG POLES
3. UPPER LEG POLES
4. WAIST BRACKET AND CONTROL BOX
5. BODY AND HEAD
6. SHOES
7. 6V 3A ADAPTER


1. Snap lock the LOWER LEG POLES into the METAL STAND. (Match A to A)
2. Snap lock the UPPER LEG POLES into the LOWER LEG POLES. (Match B to B)
3. Slide SHOES over the LEG POLES.
4. Slide the BODY AND HEAD over the LEG POLES.
5. Snap lock the WAIST BRACKET AND CONTROL BOX to the UPPER LEG POLES. (Match C to C)
6. Snap lock the BODY AND HEAD to the WAIST BRACKET AND CONTROL BOX. (Match D to D).
7. Reach inside the clothing on the BODY AND HEAD. Snap lock the right and left arms into the module. (Match E to E) and (Match F to F)
8. Connect both wire bundles inside the clothing on the BODY AND HEAD. (Connect G to G), (Match YELLOW to YELLOW) (Match BLUE to BLUE) and (Match GREEN to GREEN)
9. Insert the 6V 3A ADAPTER (included) or 4AA batteries (not included) into the control box. Turn the switch to the ON position and move in front of the item or make a loud sound (clap) to activate the item. Turn the item off when not in use.
10. Close the hook and loop on the back of the clothes. Make sure the collar is secure around the neck.
11. Attach hook and loop fasteners located on the pants to the hook and loop fasteners located on the shoes. Position the item as shown and Stand clear of the arms during operation.

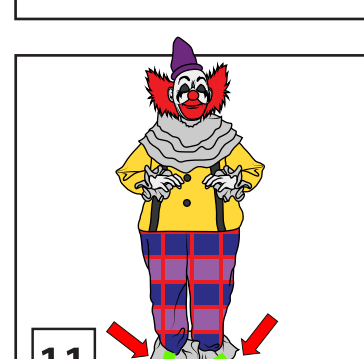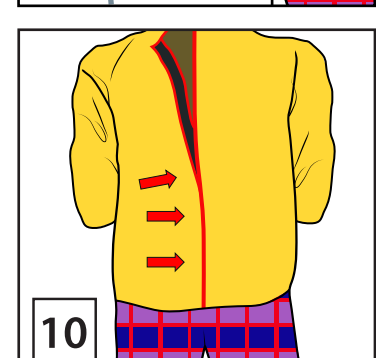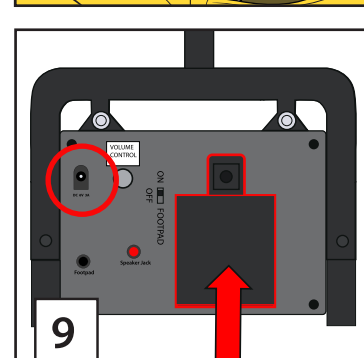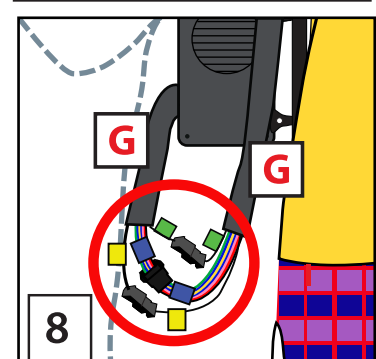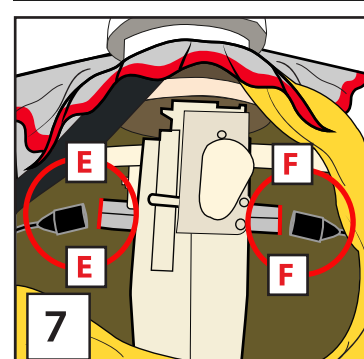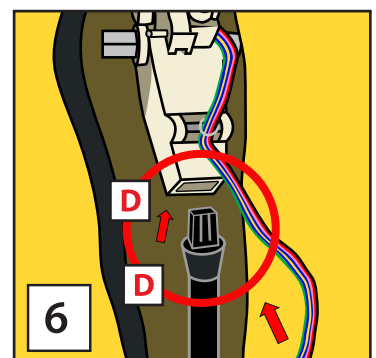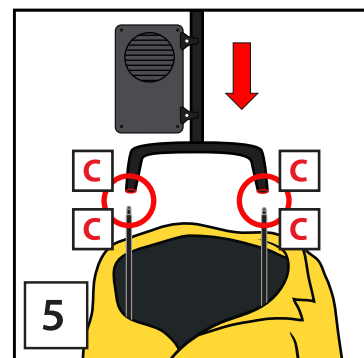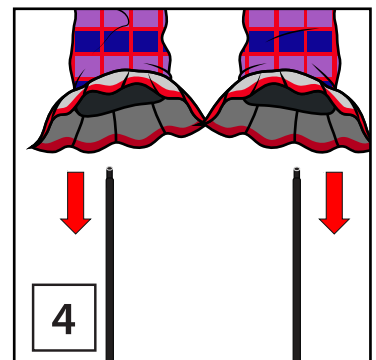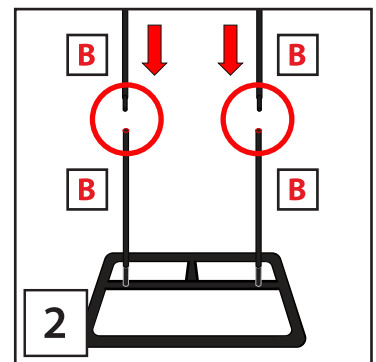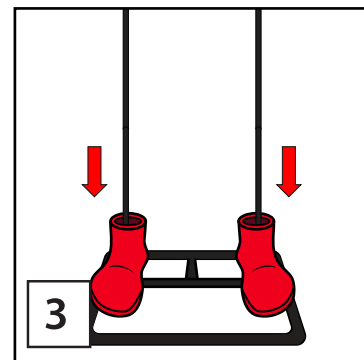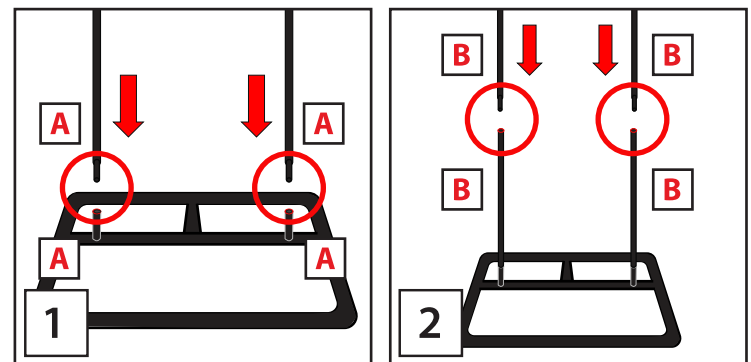

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

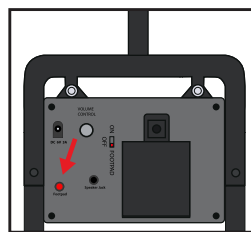

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.

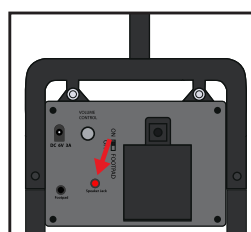


* Footpads and adapters are sold separately and can be purchased at www.tekkyaccessories.com

SMART PHONE SCAN SETUP VIDEO



BATTERY INSTRUCTIONS AND CAUTIONS

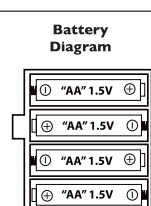


Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND. DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE! If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

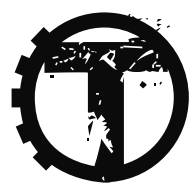

visit us at tekkydesign.com

Requires 6V 3A Adapter (included) or 4 AA batteries (not included)

ALL NEW MATERIALS:
METAL, PLASTIC, FABRIC
Surface washable only.

"GIGGLES" THE CLOWN™
is a trademark of Tekky.
Copyright © 2021 Tekky.
All Rights Reserved.
MADE IN CHINA