



GUTTER HANGERS™

Parts:

1. Fabric body
2. Gutter Clips (2)
3. Gutter Clip with Solar Panel (1)
(attached to ghost's head)
4. Yard Stake (1)

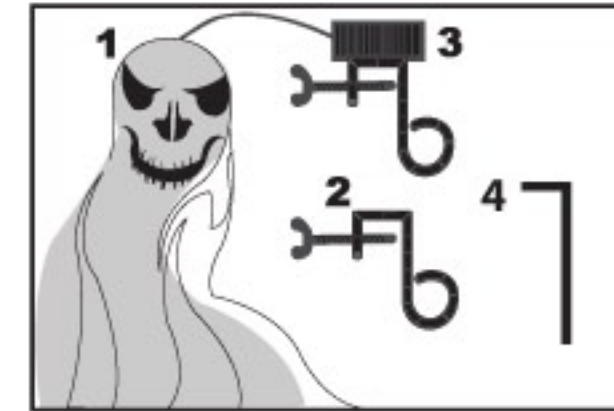

1. Find Gutter Clip with Solar Panel. Carefully remove film covering from Solar Panel.
2. Place Gutter Clip with Solar Panel in direct sunlight.
Note: To fully charge the Solar Panel, charge in direct sunlight for 13 hours.
3. Find 3 nylon loops on ghost. Attach loops onto Gutter Clips. (see illustration 1a & 1b)
Note: Gutter Clip with Solar Panel Should be attached to the center loop located directly above the ghost's head.
4. Hang Gutter Clips on gutter. (see illustration 2) Adjust arms away from head to achieve desired look. (see photo below)
5. Tighten thumb screw to secure Gutter Clips onto gutter. (see illustration 3)
6. Find grommet on end of fabric and use Yard Stake to secure to the ground. (see illustration 4)
Note: If there is excess fabric, fold over and have grommet face-up. Secure with Yard Stake through grommet and extra fabric.
7. Locate the switch on the Gutter Clip with Solar Panel and place switch to the 'ON' position.
(Switch is located on the underside of the Gutter Clip with Solar Panel)

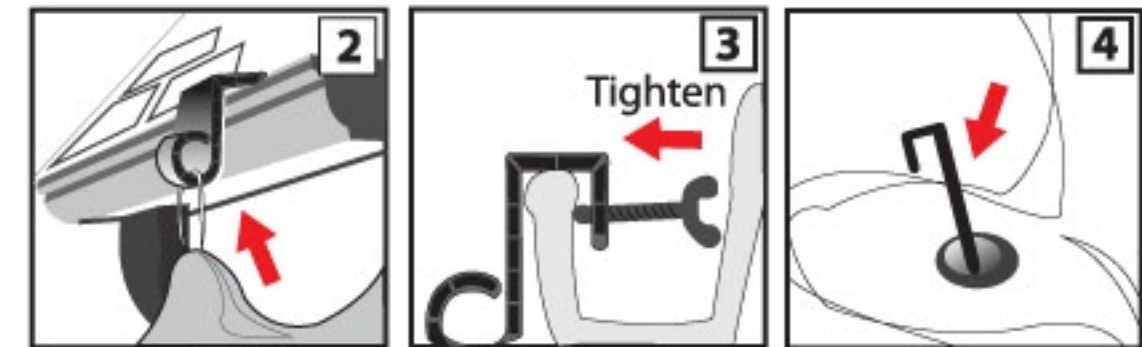

Note: Lights will function only in darkness and automatically turn on and off (no need to turn the switch to the off position). Solar Panel will automatically recharge with direct sunlight.

Hint: Add weight if needed. (However do not place any weight directly on top of the string lights located throughout the ghost.)



VISIT US:
WWW.TEKKYTOYS.COM

Surface Washable Only.
ALL NEW MATERIALS
PLASTIC, POLYESTER, POLYESTER FIBER

GUTTER GHOST™ is a
trademark of Tekky Toys.
Copyright ©2011 Tekky Toys.
All Rights Reserved.



STOP!

DO NOT RETURN THIS ITEM TO THE STORE!

If you are experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.

WARNING! STRANGULATION RISK!

Keep all loops, cables and ties away from children. This item is not
a toy. For decoration only. Small Parts. Choking hazard.
This product is intended for use by persons 15 years of age and older.
NOT intended for use by children ages 14 years and younger.

