

# KILLER KLOWNS FROM OUTER SPACE™ ANIMATED SPIKEY™

 
 
## INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.


**WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.**

**ESTIMATED ASSEMBLY TIME: 5 MINUTES.**



### PARTS



 1. METAL BASE  
2. LEG POLES (2)  
3. SHOES (2)



  
4. HEAD, SHOULDERS,  
& CLOTHES  
5. WAIST FRAME



6. TORSO FRAME WITH  
CONTROL BOX  
7. TORSO BLISTER




 8. RIGHT ARM WITH  
DOG ASSEMBLY




9. LEFT ARM  
10. 6V 3A DC ADAPTER

### ASSEMBLY

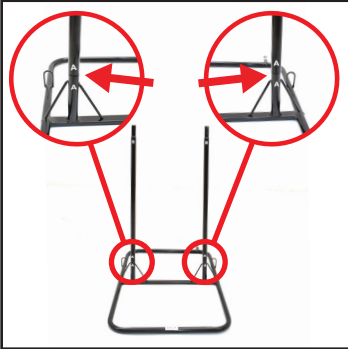


1. Insert and snap lock the  
LEG POLES into the  
METAL BASE.  
  
(MATCH A TO A x2)

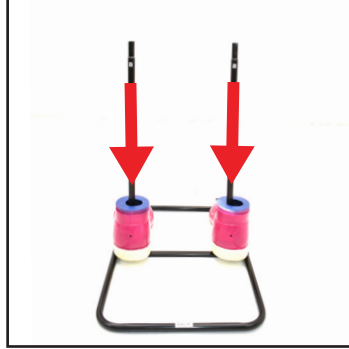


2. Slide the SHOES over  
the assembled LEG  
POLES with the back of  
the SHOES facing the  
BACK label of the  
METAL BASE.



3. Open the back of the  
HEAD, SHOULDERS &  
CLOTHES and slide the  
CLOTHES over the LEG  
POLES with the back  
facing the BACK label  
on the METAL BASE.

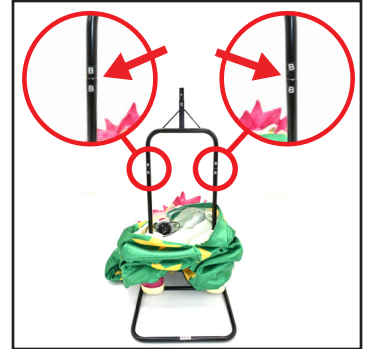

4. Insert and snap lock the  
WAIST FRAME to the  
LEG POLES.  
  
(MATCH B TO B x2)

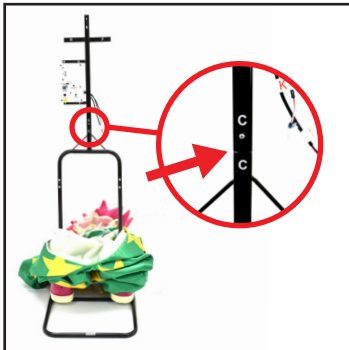

5. Insert and snap lock the  
TORSO FRAME WITH  
CONTROL BOX to the  
WAIST FRAME.  
  
(MATCH C TO C)



6. Insert and snap lock the  
TORSO BLISTER to the  
TORSO FRAME WITH  
CONTROL BOX.  
  
(MATCH D TO D)




7. Pull the HEAD,  
SHOULDERS, &  
CLOTHES up over the  
assembled  
TORSO FRAME.



8. Insert and snap lock the  
HEAD, SHOULDERS,  
& CLOTHES to the  
TORSO FRAME WITH  
CONTROL BOX.  
  
(MATCH E TO E)

## ASSEMBLY

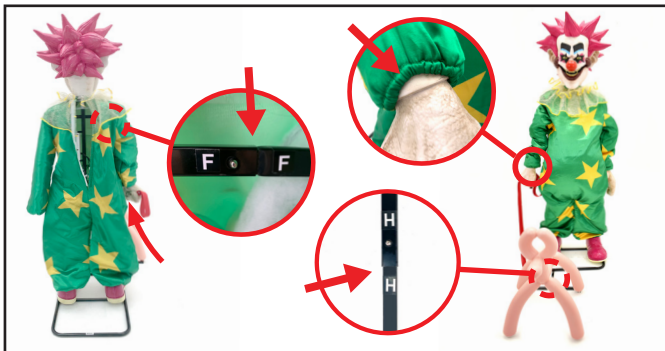

9. Slide the RIGHT ARM WITH DOG ASSEMBLY through the right sleeve of the clothes. Insert and snap lock the RIGHT ARM WITH DOG ASSEMBLY to the TORSO FRAME WITH CONTROL BOX.

(MATCH F TO F)

Feed the wire labeled J through the RIGHT ARM sleeve. Adjust the right sleeve elastic over the right wrist as shown in the diagram.

With the product facing forward, insert and snap lock the DOG WITH ASSEMBLY into the METAL BASE.

(MATCH H TO H)



10. Slide the LEFT ARM through the left sleeve of the clothes. Insert and snap lock the LEFT ARM to the TORSO FRAME WITH CONTROL BOX.

(MATCH G TO G)

Adjust the left sleeve elastic over the left wrist as shown in the diagram.



11. Through the back of the CLOTHES, connect all of the wires to the CONTROL BOX wires.

(MATCH I TO I - Human Sensor)  
(MATCH J TO J - Dog Motion)  
(Match K to K - Clown's Eye LEDs)

## ASSEMBLY



12. Hook and loop the back of the CLOTHES.



13. Secure the elastic located on the bottom of each pant leg over the SHOES. Adjust the appearance as shown in the diagram.

## OPERATING INSTRUCTIONS



1. Insert 4 AA batteries (not included) into the battery compartment located on the CONTROL BOX.

OR

Insert a 6V 3A DC ADAPTER (included) into the CONTROL BOX.



2. Move the switch to the ON position (marked in red) and make a loud sound (clap), or move in front of the item to activate.

OR

Move the switch to the HUMAN ONLY position (marked in blue) to activate with motion only. Move the switch to the OFF(DEMO) position when not in use.

## OPERATING INSTRUCTIONS

### OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
2. Place the switch on the CONTROL BOX into the OFF(DEMO) position to enable footpad activation.
3. Step on footpad to activate the scary sequence!

\* Footpads are sold separately and can be purchased at [www.tekkyaccessories.com](http://www.tekkyaccessories.com)




### OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.



### Battery Diagram

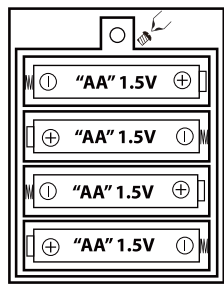

### BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.  
This product is intended for use by persons 15 years of age and older.  
Not intended for use by children ages 14 years and younger.**

**WARNING**  
**DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.**  
**STAY CLEAR OF ITEM WHILE OPERATING.**  
**DO NOT PLACE ITEM ON UNEVEN GROUND.**  
**DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.**



**DO NOT RETURN THIS ITEM TO THE STORE!**  
If experiencing technical difficulties, please go  
to [www.tekkydesign.com](http://www.tekkydesign.com) for assistance.



Visit us at [tekkydesign.com](http://tekkydesign.com)

Requires 4AA batteries (not  
included) or 6V 3A DC  
adapter (included).

MODEL # 61098  
FUN97019

ALL NEW MATERIAL ONLY:  
POLYPROPYLENE FOAM,  
POLYURETHANE FOAM.

**SURFACE WASHABLE ONLY.**

KILLER KLOWNS FROM OUTER  
SPACE™ & © 1988 Orion Pictures  
Corporation. © 2025 Metro-  
Goldwyn-Mayer Studios Inc.

Manufactured by:  
Tekky, Orland Park, IL  
60467 USA  
[Tekkydesign.com](http://Tekkydesign.com)

MADE IN CHINA



**SMART PHONE SCAN**  
**SETUP VIDEO**

