

MARY THE UNHAPPILY EVER AFTER ANIMATRONIC™


INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME: 5 MINUTES.


PARTS

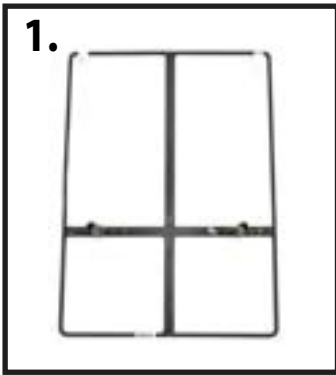

1. METAL BASE

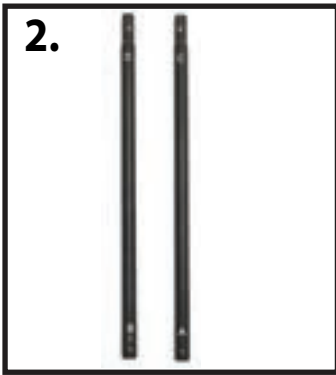

2. LOWER LEFT AND RIGHT LEG POLES

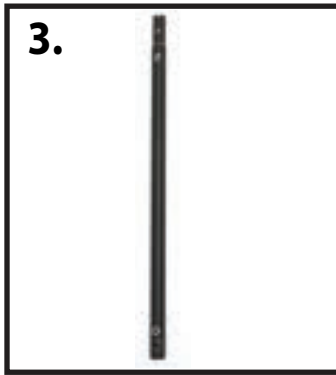

3. UPPER RIGHT LEG POLE



4. UPPER LEFT LEG POLE WITH CONTROL BOX







5. UPPER BODY ASSEMBLY



6. 6V 2A DC ADAPTER

ASSEMBLY

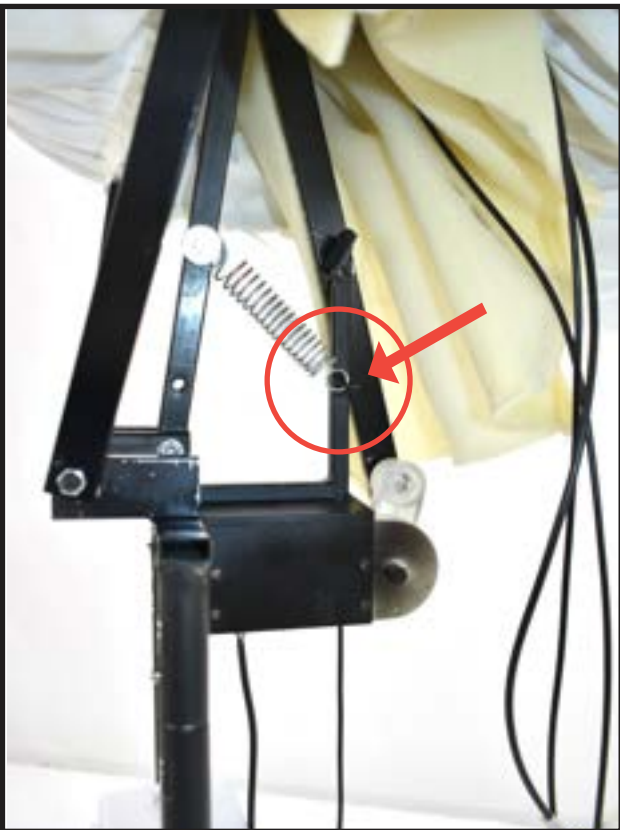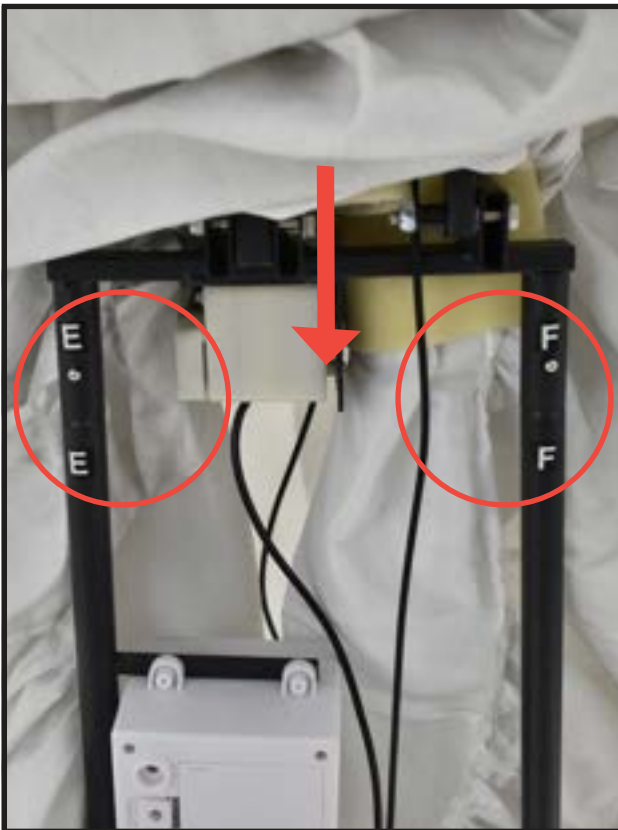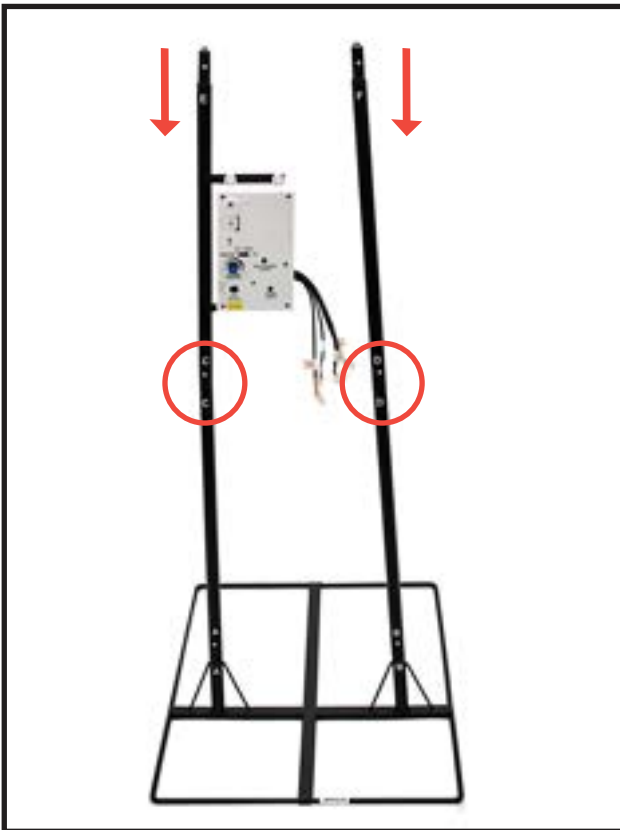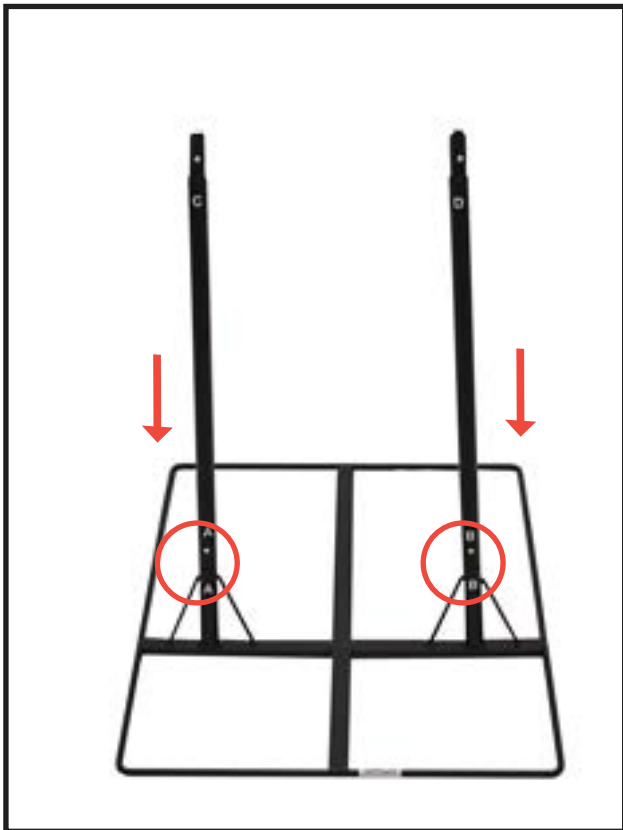

1. Insert and snap lock METAL BASE to LOWER LEFT AND RIGHT LEG POLES.

(MATCH A to A)
(MATCH B to B)

2. Insert and snap lock the UPPER LEFT LEG POLE WITH CONTROL BOX and UPPER RIGHT LEG POLE into the LOWER LEG POLES.

(MATCH C to C)
(MATCH D to D)

3. Insert and snap lock UPPER BODY ASSEMBLY into assembled UPPER LEG POLES.

(MATCH E to E)
(MATCH F to F)

4. Secure the spring from the metal frame on the UPPER BODY ASSEMBLY to the hook on the positive stop as shown above.

**Please note that the spring is not connected for shipping purposes. Connected spring should look like the above photo.*



5. Open the hook & loop on the back of the dress.




6. Locate the UPPER BODY ASSEMBLY'S right arm pole in the right sleeve. Insert and snap lock the right arm pole into the UPPER BODY ASSEMBLY'S shoulder frame.

(MATCH G to G)



7. Locate the UPPER BODY ASSEMBLY'S left arm pole in the left sleeve. Insert and snap lock the left arm pole into the UPPER BODY ASSEMBLY'S shoulder frame.

(MATCH H to H)

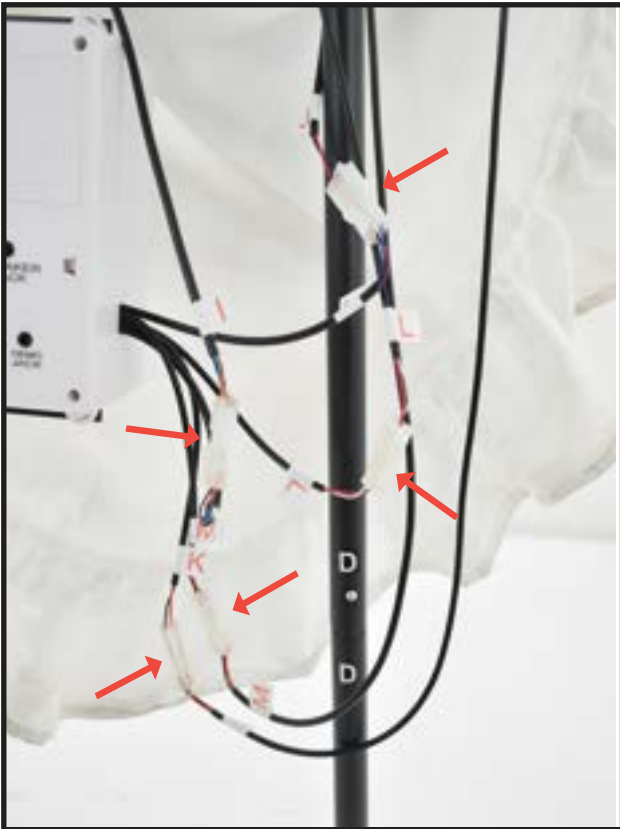

8. Connect the wires located on the UPPER BODY ASSEMBLY to the wires located on the CONTROL BOX.
(MATCH I to I - Body Movement)
(MATCH J to J - Human Sensor)
(MATCH K to K - Right Hand LED)
(MATCH L to L - LED Eyes)
(MATCH M to M - Left Hand LED)

ASSEMBLY



9. Close the opening on the back of the upper dress by lining up the hook & loop and gently pressing together.



10. Hook and loop the bottom of the dress to the METAL BASE in the two locations shown.



11. Adjust the UPPER BODY ASSEMBLY's clothing and position of the hands as shown in the diagram.

OPERATING INSTRUCTIONS



1. Plug in the 6V 2A DC ADAPTER (included), onto the CONTROL BOX.

OR

Insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.



2. Turn the switch to the ON position (marked in red) to activate the item. Move in front of the item, or make a loud sound (clap) to activate.

OR

Turn the switch to the HUMAN ONLY position (marked in blue) to activate the item with only motion.


Turn item OFF when not in use. Adjust volume control as needed.

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
- 2. Place the switch in the OFF(DEMO) position to enable footpad activation.
- 3. Step on the footpad to activate the scary sequence!

* Footpads are sold separately and can be purchased at www.tekkyaccessories.com

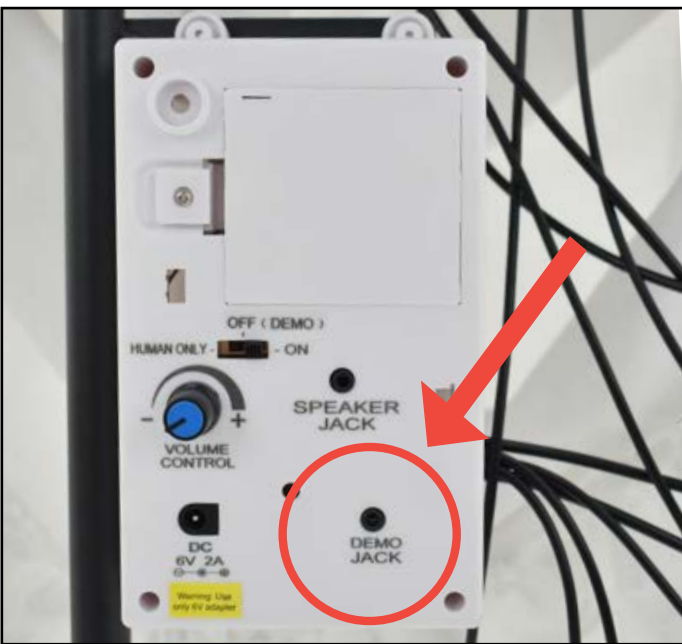


OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

- 1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
- 2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.



Battery Diagram

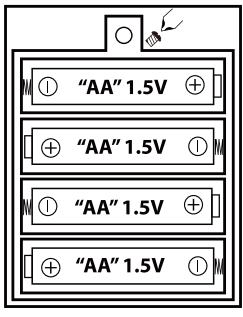

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING

DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to support@tekkydesign.com for assistance.



TEKKY™

visit us at tekkydesign.com

Requires 6V 2A ADAPTER (included)
or 4AA batteries (not included)
FUN97020

ALL NEW MATERIALS:
FABRIC, METAL, PLASTIC, POLYPROPYLENE FOAM,
and POLYURETHANE FOAM.

Surface washable only.

MARY THE UNHAPPILY EVER AFTER ANIMATRONIC™
is a trademark of Tekky.
Copyright © 2025 Tekky.
All Rights Reserved.
MADE IN CHINA

SMART PHONE SCAN SETUP VIDEO

