

MEGA WOLF™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN


WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

RECOMMENDED 2 PERSON ASSEMBLY

PARTS:

1. HEAD
2. RIGHT ARM
3. LEFT ARM
4. RIGHT FOOT
5. LEFT FOOT
6. SHIRT
7. PANTS & HIP HOOP
8. BASE FRONT
9. BASE BACK
10. LOWER LEG POLES
11. UPPER LEG POLE
12. UPPER LEG POLE & CONTROL BOX
13. WAIST FRAME
14. TORSO FRAME
15. MODULE
16. LARGE CLEVIS AND COTTER PIN
17. CLEVIS AND COTTER PINS
18. RIGHT ARM POLE
19. LEFT ARM POLE
20. BACK FRAMES
21. REAR BLISTER
22. SHOULDER FRAME
23. LURCHING POLE
24. BASE EXTENSION POLES
25. WIRE TETHERS
26. SANDBAGS
27. ADAPTER

PARTS

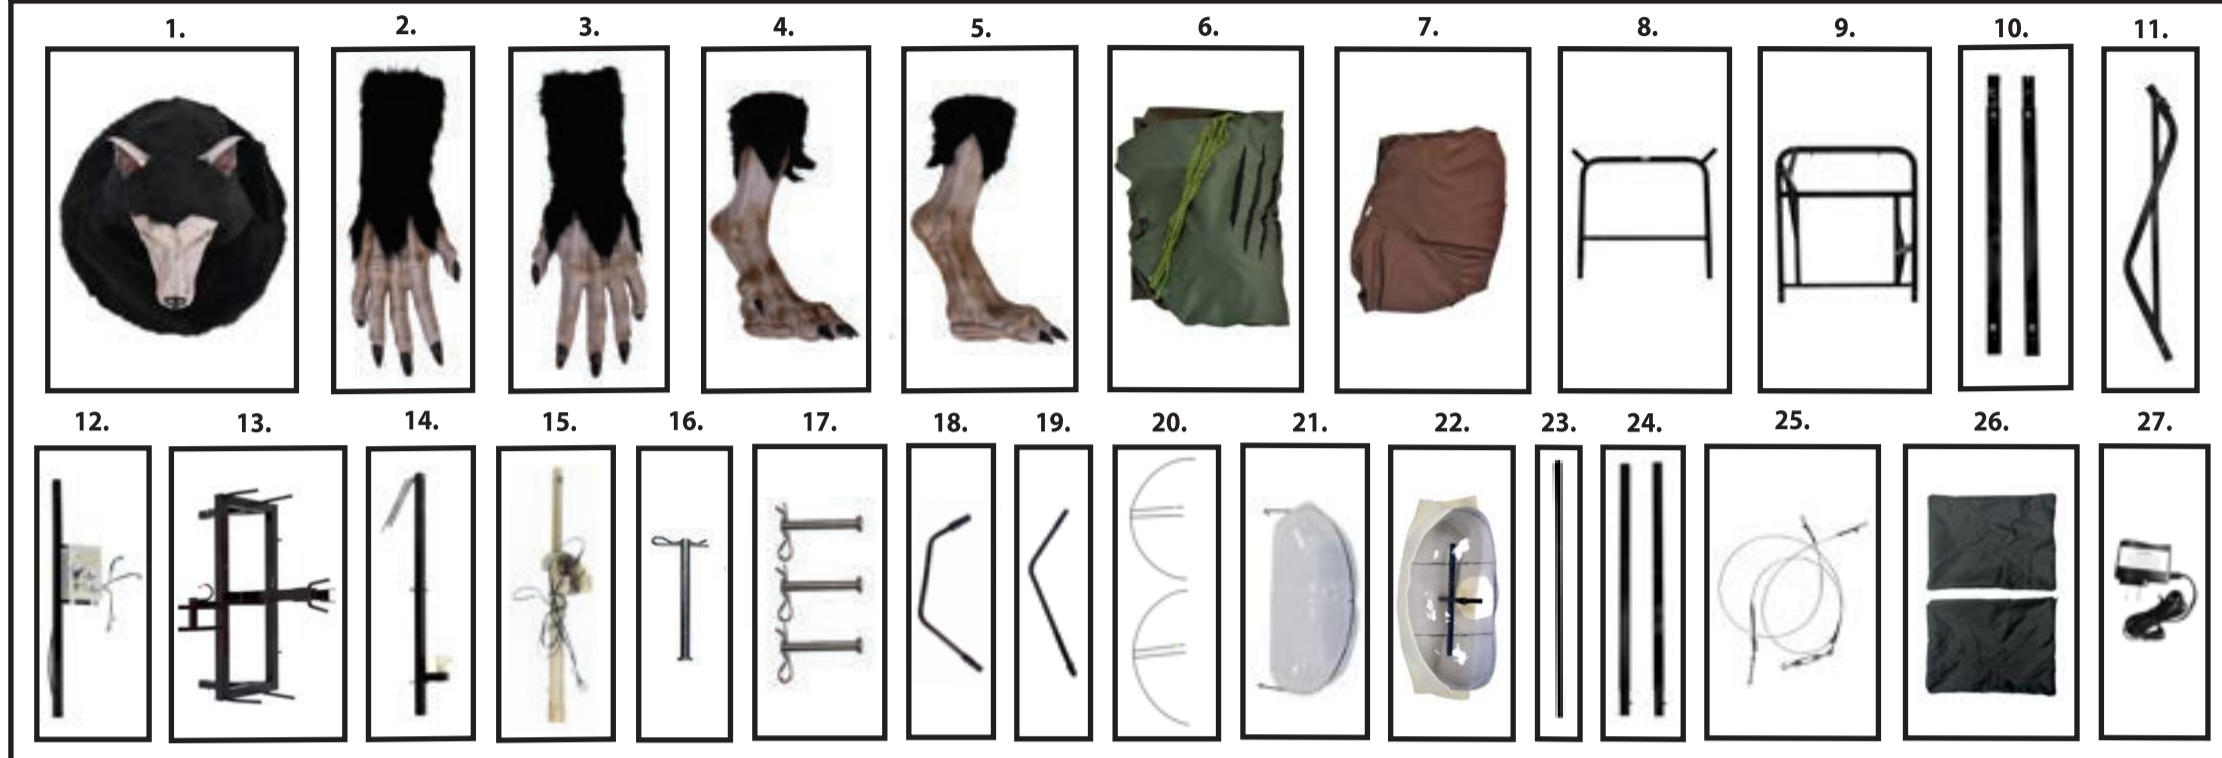


ASSEMBLY




1. Snap lock the **BASE BACK** and **BASE FRONT** together.

MATCH **A** to **A** and **B** to **B**

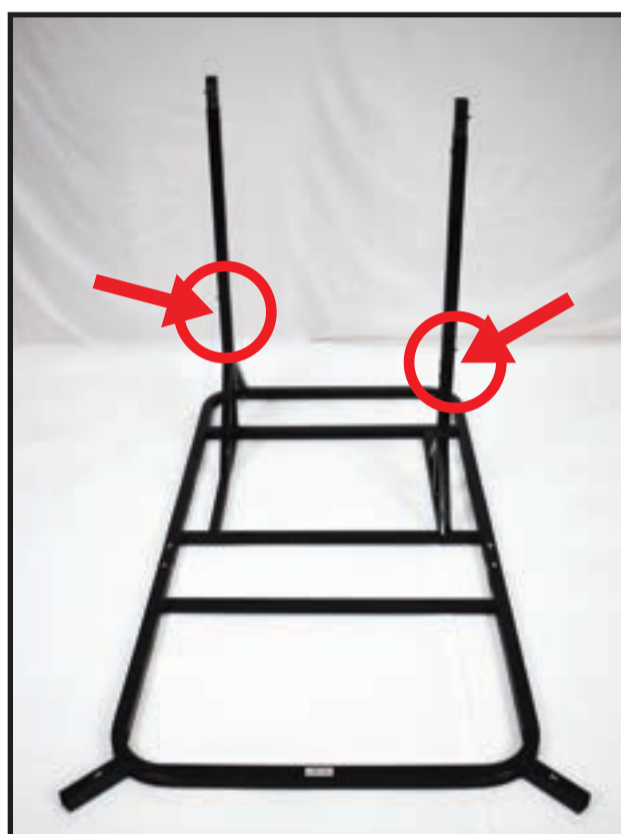

2. Snap lock the **LOWER LEG POLES** onto the **BASE BACK**.

MATCH **C** to **C** and **D** to **D**

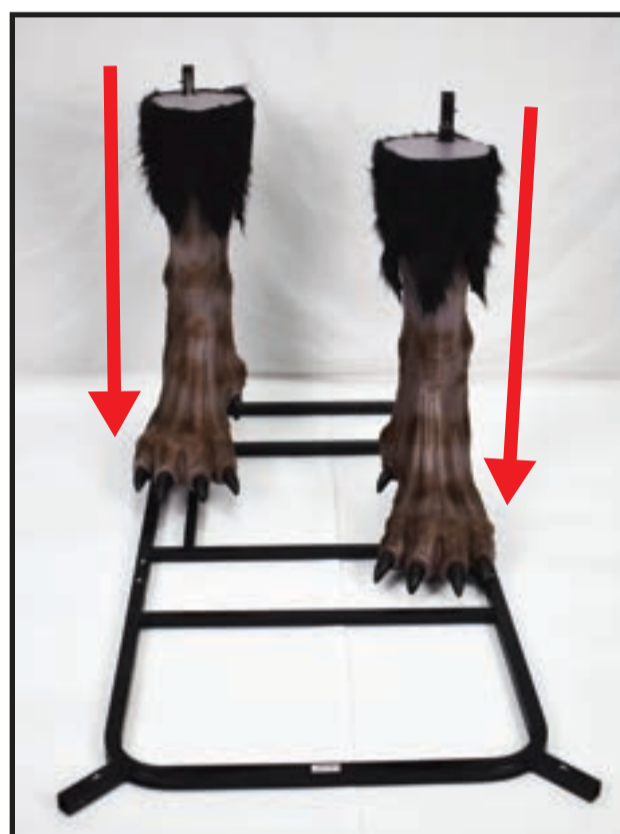

3. With the front of the feet facing towards the front label of the **BASE FRONT**, slide the **LEFT FOOT** over the left **LOWER LEG POLE**. Slide the **RIGHT FOOT** over the right **LOWER LEG POLE**.



4. Snap lock the **UPPER LEG POLE** and the **UPPER LEG POLE & CONTROL BOX** into the **LOWER LEG POLES**.

MATCH **E** to **E** and **F** to **F**



5. With the front label of the **PANTS & HIP HOOP** facing the front label of the **BASE FRONT**, slide the right pant leg over the **UPPER LEG POLE** and the left pant leg over the **UPPER LEG POLE & CONTROL BOX**.



6. Snap lock the **WAIST FRAME** into the **UPPER LEG POLE** and **UPPER LEG POLE & CONTROL BOX**.

MATCH **G** to **G** and **H** to **H**




7. Insert the **REAR BLISTER** to the back of the **WAIST FRAME**.

MATCH **RED** to **RED**




8. Insert the **REAR BLISTER** to the back of the **WAIST FRAME**.

MATCH **BLUE** to **BLUE**

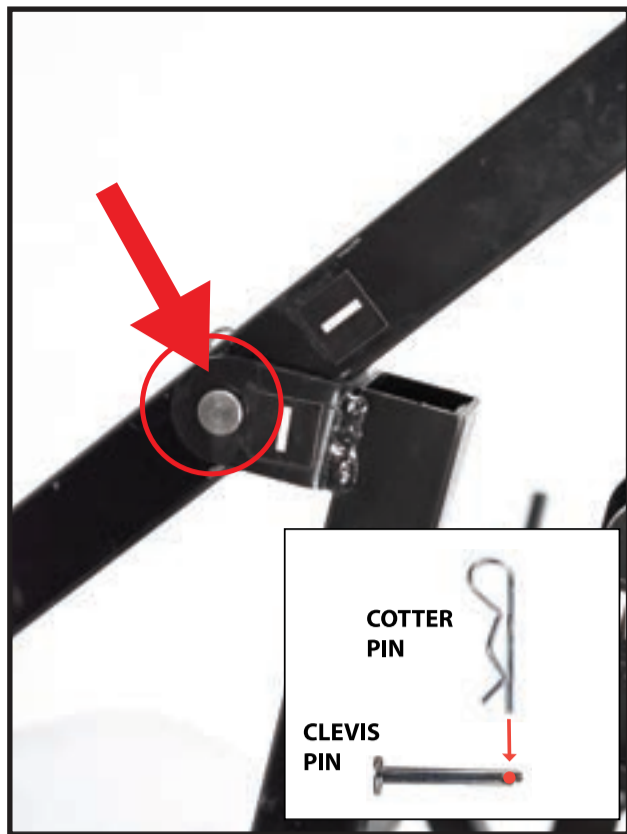


9. Secure the **TORSO FRAME** to the back of the **WAIST FRAME** using the **CLEVIS AND COTTER PIN**.

MATCH I to I

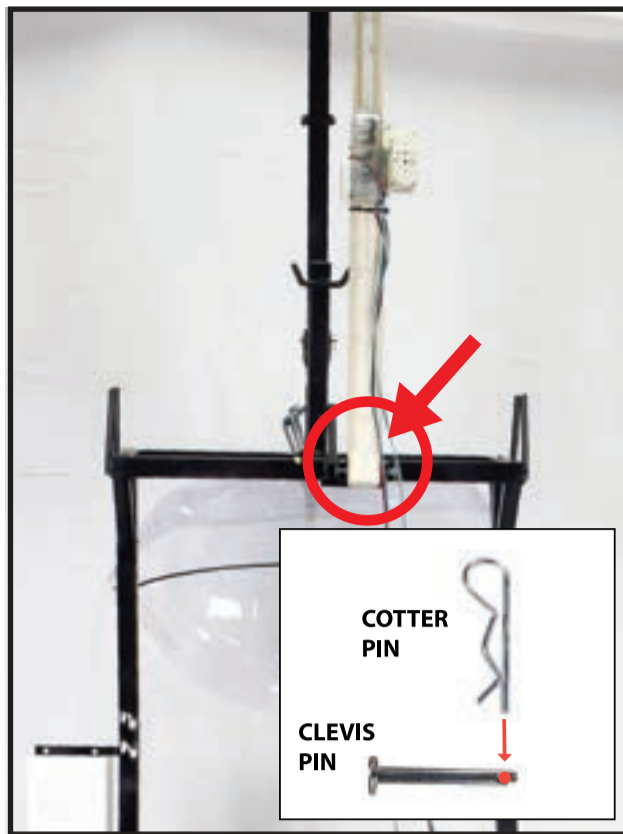


10. Secure the **MODULE** to the front of the **WAIST FRAME** using the **LARGE COTTER PIN**.

MATCH J to J

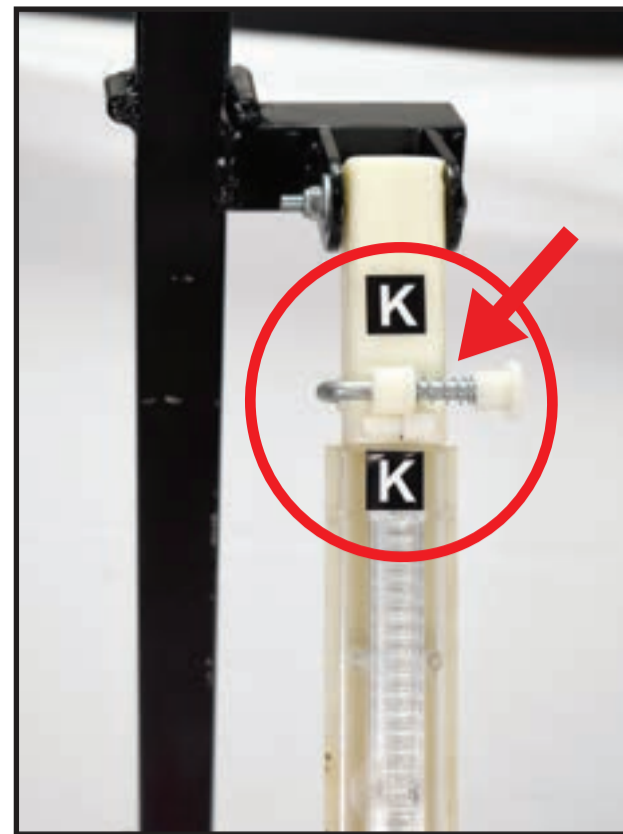


11. Push in the circular locking pin, located on the **TORSO FRAME**, and release it once the top of the **MODULE** is inserted into the **TORSO FRAME**.

MATCH K to K

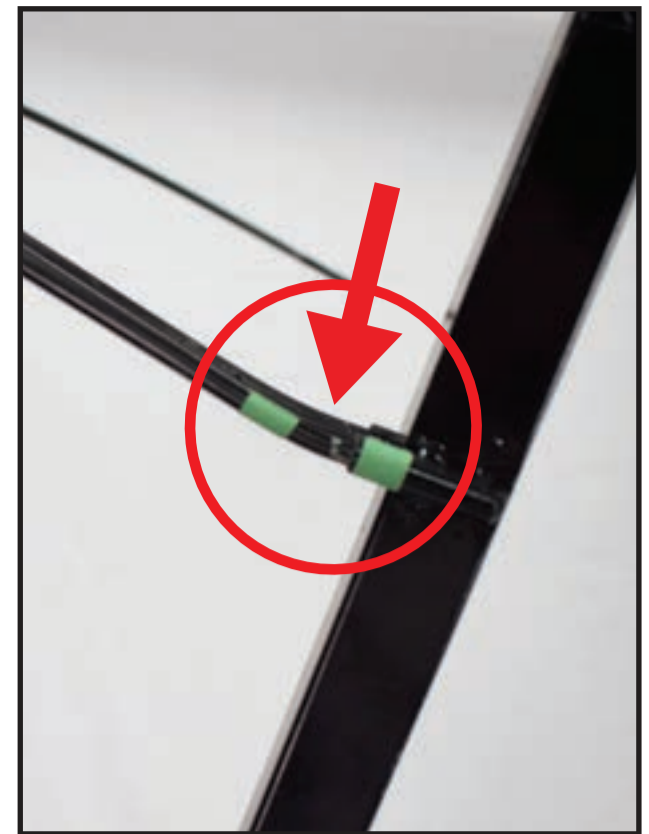


12. Lay the item down against its own box. Insert the **BACK FRAME** into the back of the **TORSO FRAME**.

MATCH GREEN to GREEN

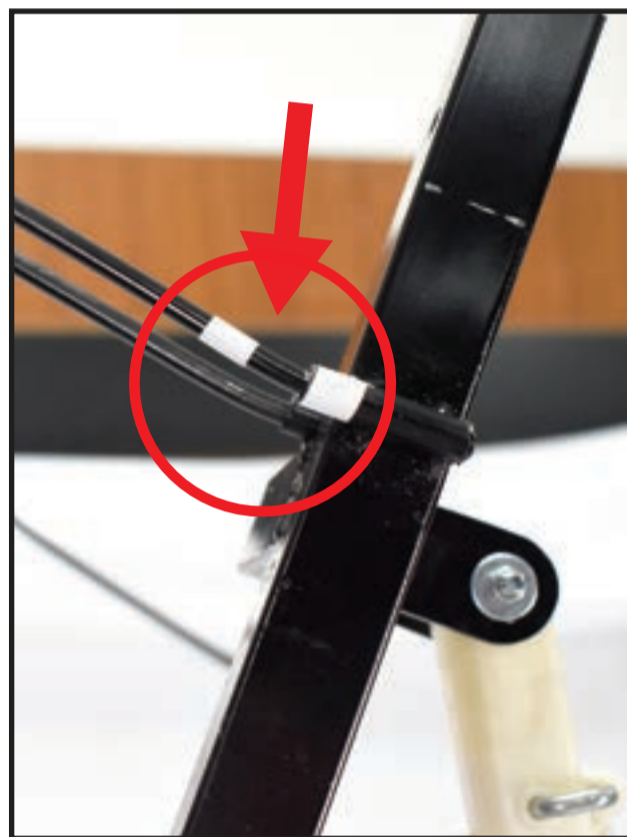


13. Insert the **BACK FRAME** into the back of the **TORSO FRAME**.

MATCH WHITE to WHITE

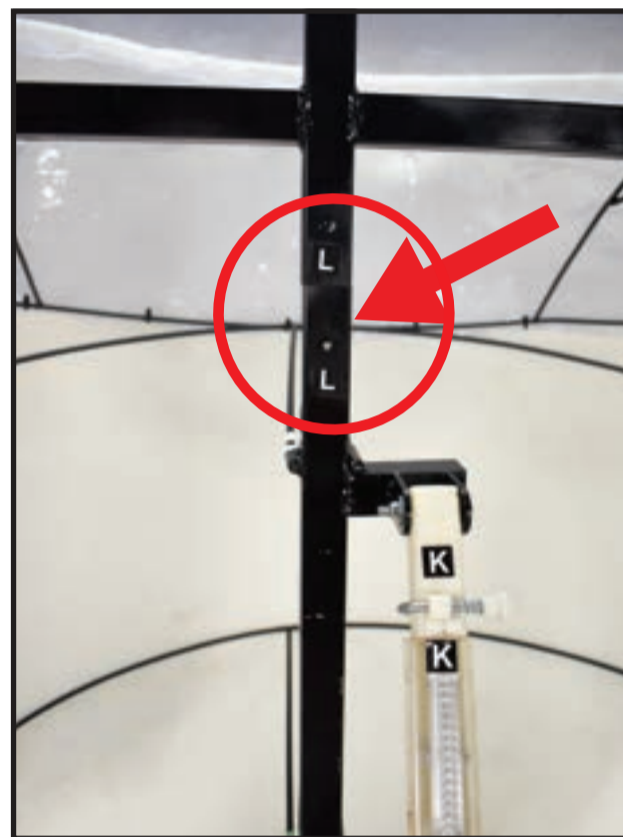


14. Snap lock the **SHOULDER FRAME** onto the **TORSO FRAME**.

MATCH L to L

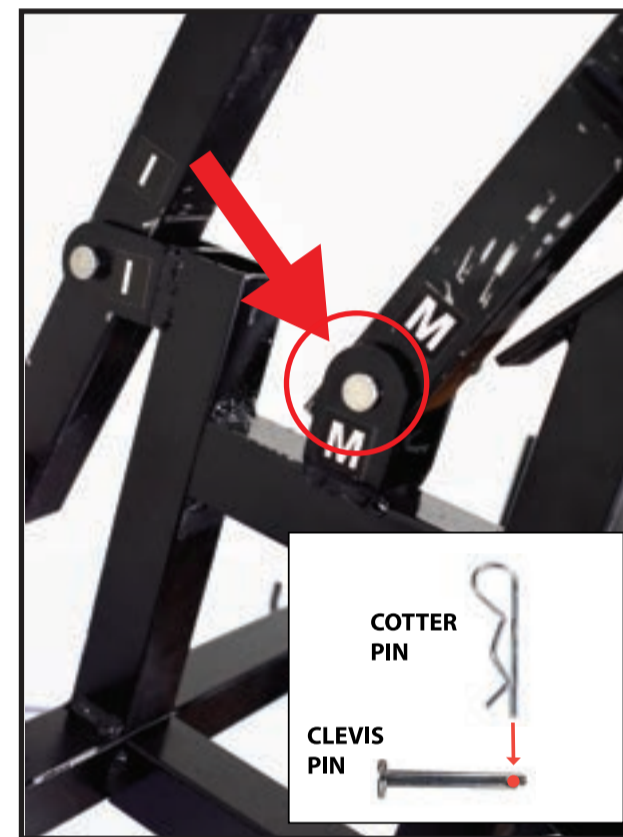


15. Secure the bottom of the **LURCHING POLE** onto the **TORSO FRAME** using a **CLEVIS AND COTTER PIN**.

MATCH M to M

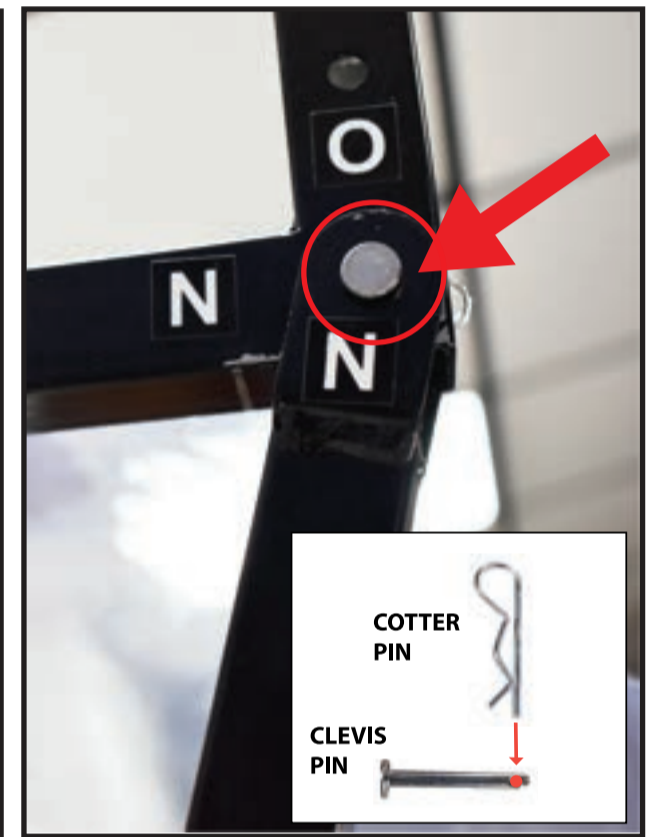


16. Secure the top of the **LURCHING POLE** to the **SHOULDER FRAME** using a **CLEVIS AND COTTER PIN**.

MATCH N to N

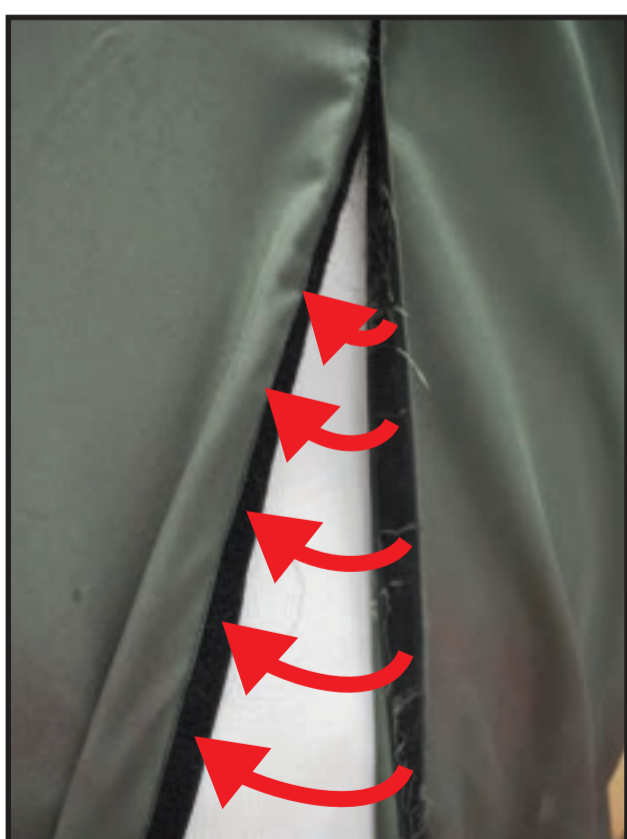


17. Hook and loop fasten the **SHIRT** onto the **SHOULDER FRAME** with the hook and loop on the backside of the **SHOULDER FRAME**. Adjust the layer of foam underneath until it lays flat.

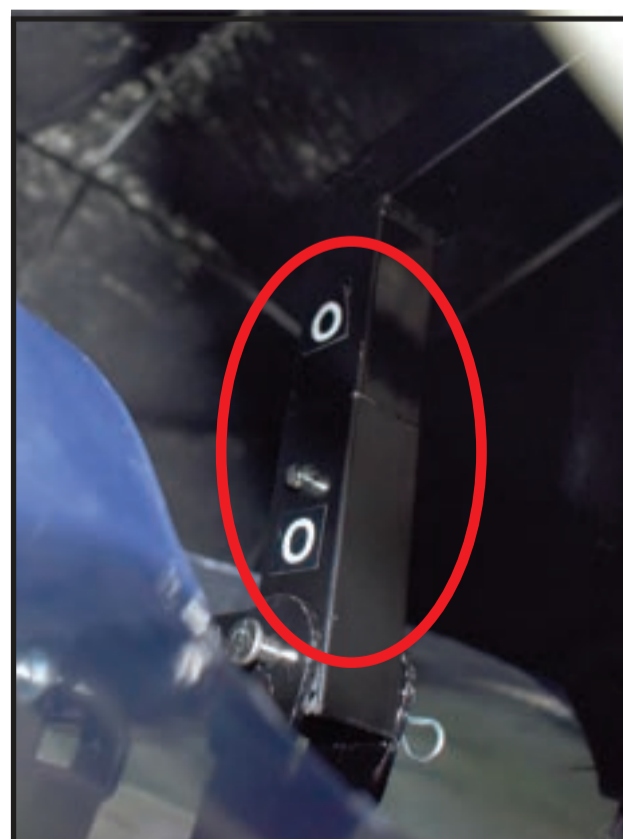


18. Fold the fabric of the **HEAD** back over itself before snap locking the base of the **HEAD** onto the **SHOULDER FRAME**.

MATCH O to O

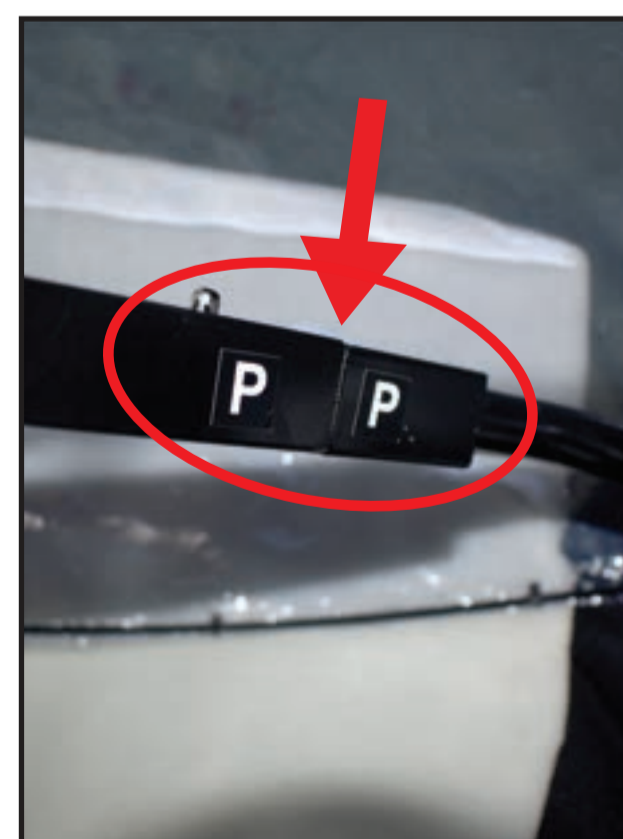




19. Push the **SHIRT** up to reveal the **SHOULDER FRAME**. With the end of the **LEFT ARM POLE** already adjusted into the **SHIRT**'s left sleeve, snap lock the **LEFT ARM POLE** into the **SHOULDER FRAME**.

MATCH P to P

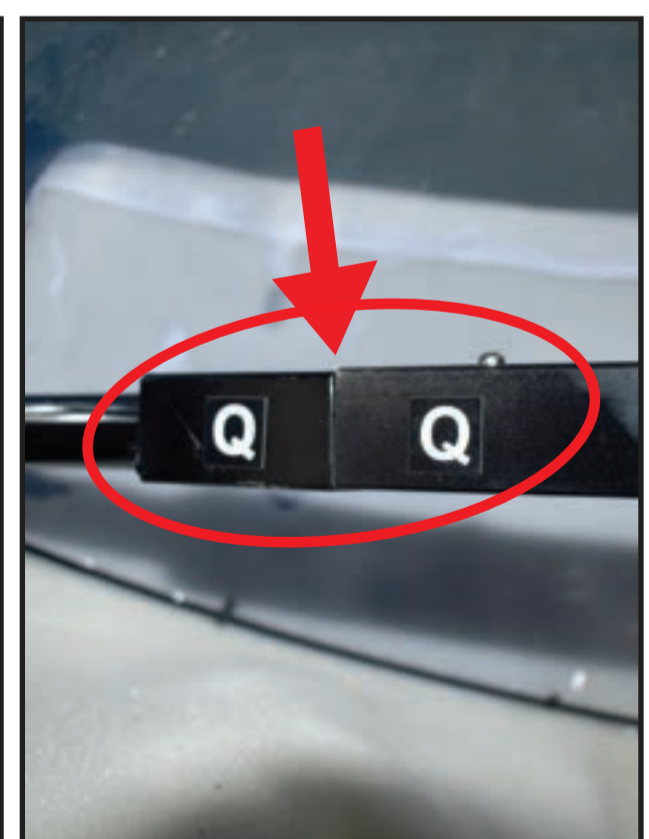

20. With the end of the **RIGHT ARM POLE** already adjusted into the **SHIRT**'s right sleeve, snap lock the **RIGHT ARM POLE** into the **SHOULDER FRAME**.

MATCH Q to Q

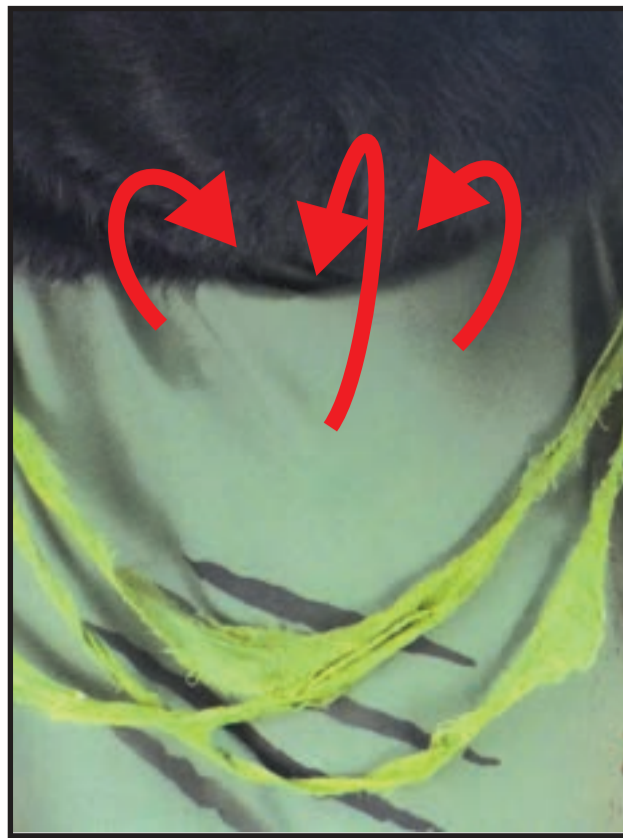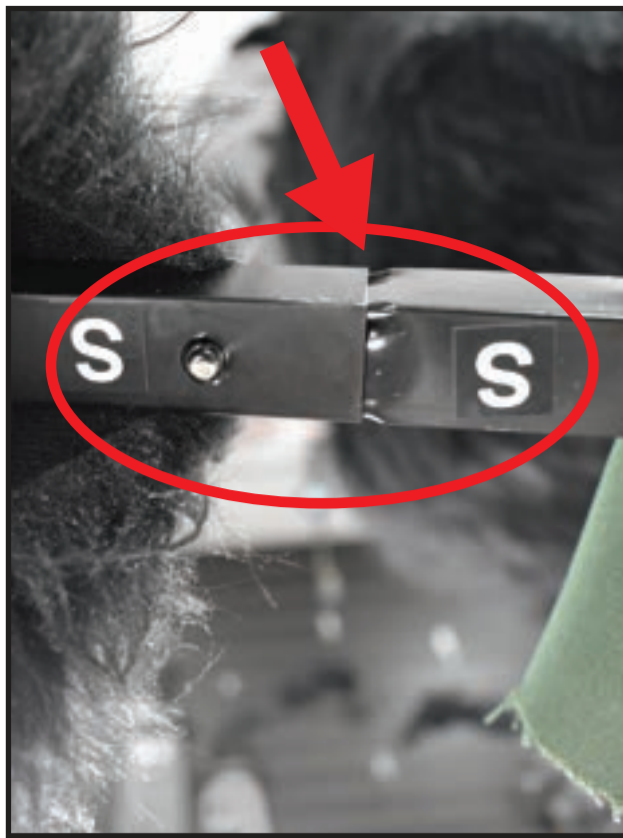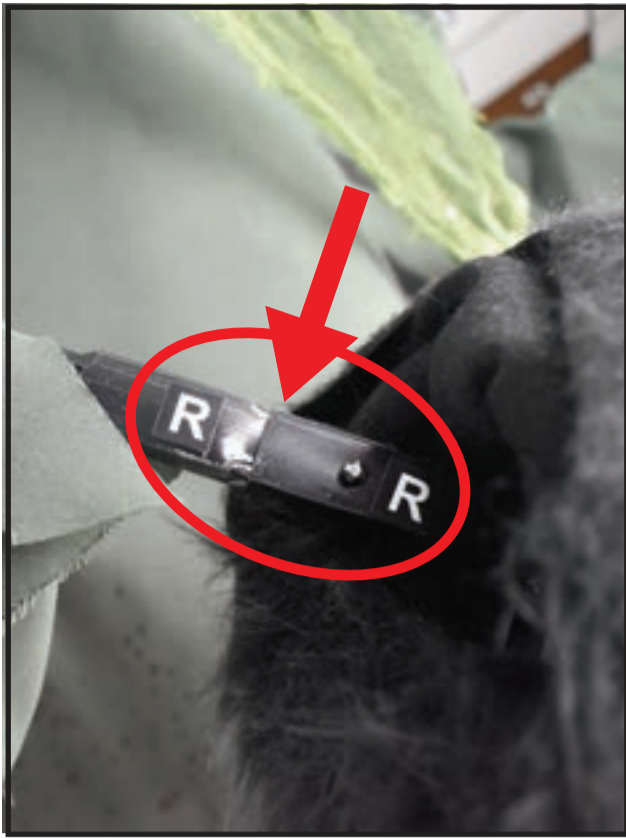

21. Snap lock the RIGHT HAND into the RIGHT ARM POLE.

MATCH R to R

22. Snap lock the LEFT HAND into the LEFT ARM POLE.

MATCH S to S


23. Stuff the HEAD's fabric underneath the collar of the SHIRT.

24. Adjust the Sleeves over the arms of the RIGHT HAND AND LEFT HAND.




25. RECOMMENDED TWO PERSON STEP.

Stand the item back upright.

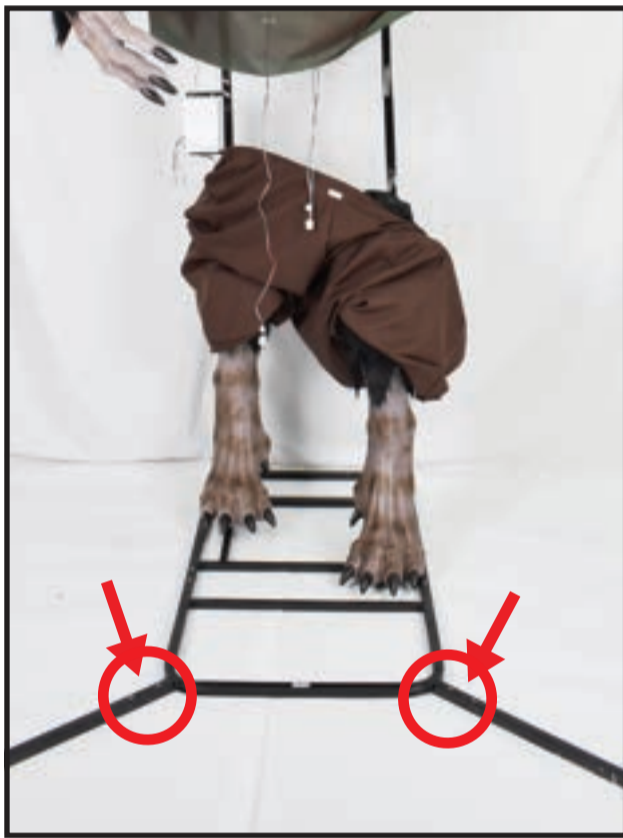


26. Snaplock the BASE EXTENSION POLES into the BASE FRONT.

MATCH T to T

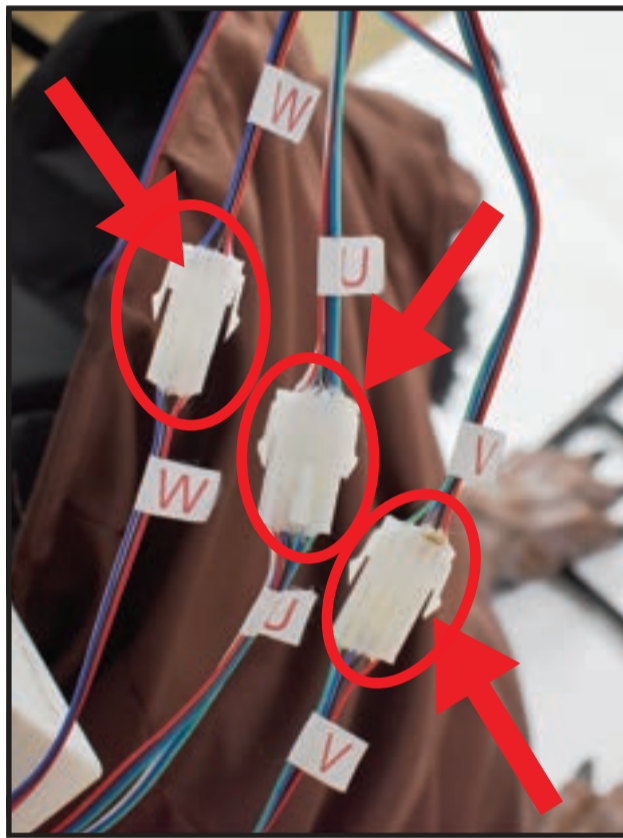


27. Connect the wire assemblies located on the MODULE and HEAD to the UPPER LEG POLE & CONTROL BOX.

CONNECT U to U, CONNECT V to V and CONNECT W to W

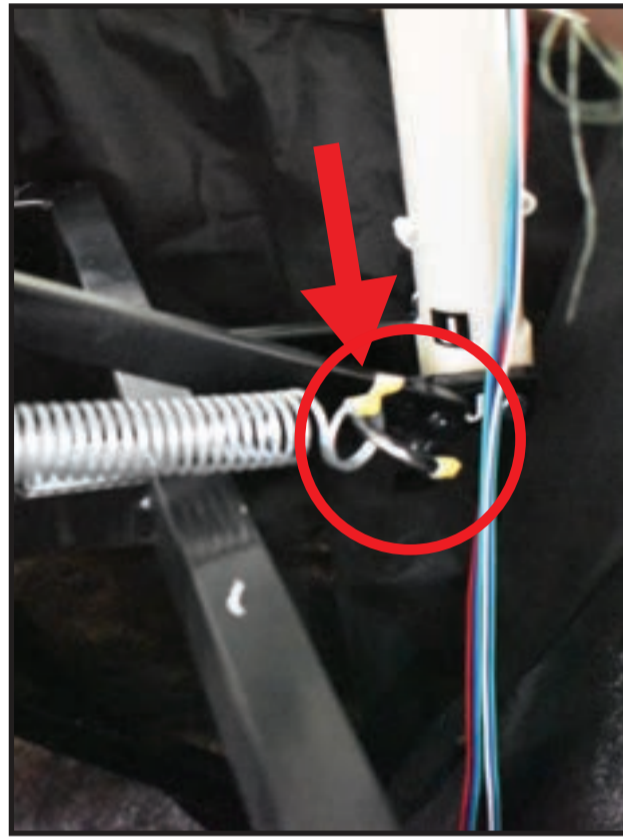

28. Connect the SPRING from the TORSO FRAME to the WAIST FRAME.

MATCH YELLOW to YELLOW

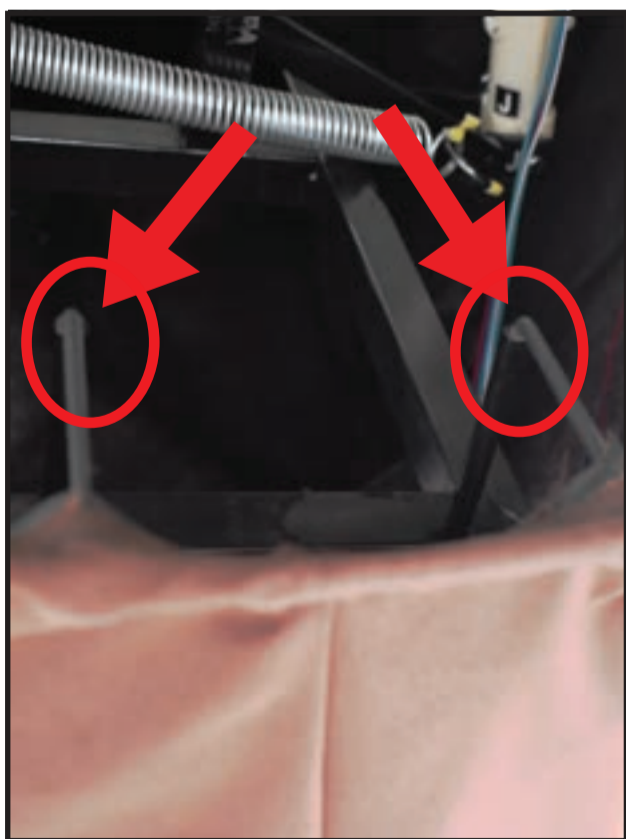

29. Raise and insert the PANTS & HIP LOOP into the WAIST FRAME on all four sides of the WAIST FRAME.




30. Feed the loop ends of the WIRE TETHER through the holes located on the back of the PANTS. Place the loops over the two hooks located on the back of the WAIST FRAME.



31. Secure the other end of the WIRE TETHERS onto the BACK BASE.



32. For additional stability, fill and place the two SANDBAGS (10 kg./22 lb. capacity) on the BACK BASE as shown above.

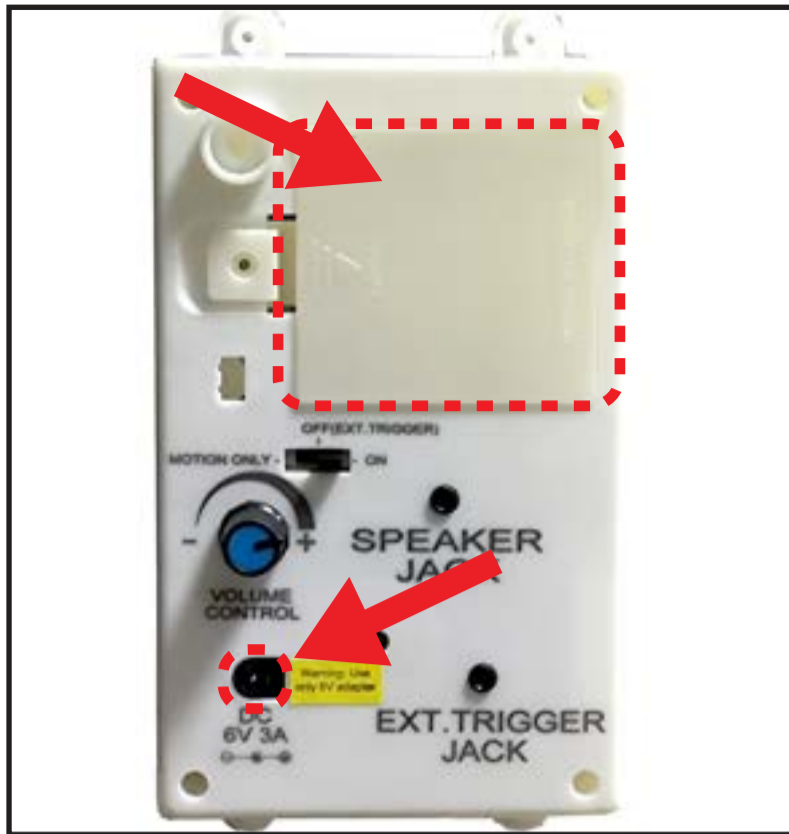

33. Adjust the SHIRT over the PANTS.

34. Insert 4 fresh alkaline batteries (recommended) or insert 6V 3A ADAPTER (Included). Turn the switch to the ON position to operate in Sound or Motion activation mode. Make a loud sound (clap), or move in front of the item to activate. Turn item OFF when not in use.

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on side of the control box.
2. Use volume knob on external speaker to control volume levels.




OPTIONAL EXT. TRIGGER SET UP

EXT. TRIGGER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from EXT. TRIGGER into the jack labeled EXT. TRIGGER JACK on the CONTROL BOX.
2. Place the switch in the EXT. TRIGGER position to enable EXT. TRIGGER activation.
3. Step on the EXT. TRIGGER to activate the scary sequence!
 - * Footpads/Ext. triggers are sold separately and can be purchased at www.tekkyaccessories.com



Battery Diagram

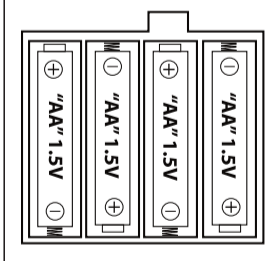

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



visit us at tekkydesign.com
 Requires 6V 3A ADAPTER (included) or 4AA batteries (not included)

ALL NEW MATERIALS:
 METAL, FOAM, PLASTIC, POLYESTER
 Surface washable only.

MEGA WOLF™
 is a trademark of Tekky.

Copyright © 2023 Tekky
 All Rights Reserved.
 MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
 If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

SMART PHONE SCAN SETUP VIDEO

