





RISING FROM THE GRAVE™ - ZOMBIE

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- 1.) **Insert FEET into BASE as shown in illustration 1a.**
Connect parts "A" to "A" and "B" to "B". (Illustration 1b)
Note: Press to make sure feet are FLUSH with rectangular base and snap lock into place. To remove FOOT, insert plastic key (included) into holes on bottom to release locks and pull.
- 2.) **Connect Poles together and insert into receptacle on Base.**
(See illustration 2)
Note: Adjust and align the snap lock with the indentation inside the pole.
- 3.) **Install fresh, new alkaline batteries (4 "AA") into battery compartment located on top of BASE or connect DC adapter.**
- 4.) **Place the Zombie Head with Fabric on top of the pole.**
(See illustration 3)
Note: Adjust and align the snap lock with the indentation inside the pole.
- 5.) **Drape Fabric down over Pole and Base.**
(See illustration 4)
Note: Completely cover the rectangular base to enhance the appearance of the Zombie.
- 6.) **Slide switch on BASE to the ON position to use in Sound Activation mode.**
Note: Clap or make a loud sound to activate.
- 7.) **Attach Velcro on back of fabric to Velcro on FOOT. Attach Velcro on front of fabric to Velcro on front of FOOT.**

Hint: Whenever possible, add weight to Feet or tape down Feet to increase stability as in illustration 5.

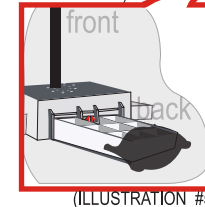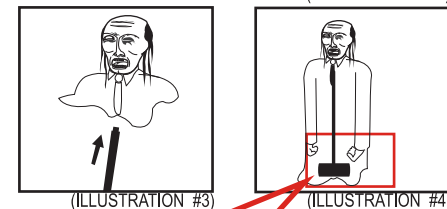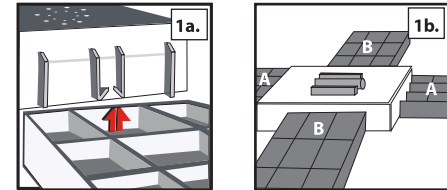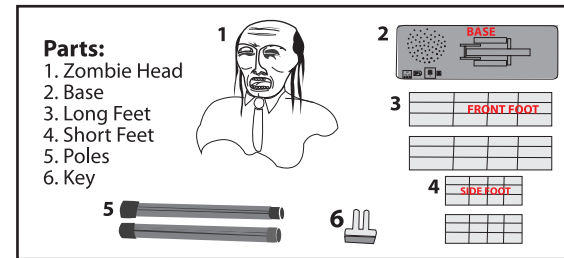

Optional Footpad Setup

Follow Steps 1 through 5 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'FOOTPAD' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence. (go to instruction #7 to continue setup)


NOTE:

When plugging in, make sure pins line up properly with holes on plug. Align plug, groove side down, with the notch.

CAUTION!

Not aligning the plug to jack properly may cause permanent damage to Foot Pad jack of your item. Do not use excessive force when inserting plug.

*Footpads are sold separately and can be purchased at www.tekkytoys.com

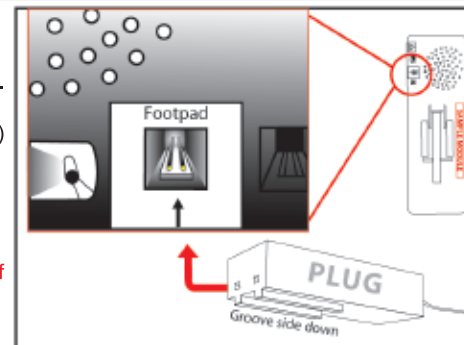

If you hear a constant "clicking" sound and this item does not function properly, it means that there is an obstruction preventing the pole from lowering fully (for example: rock, bush, incline, etc.). The clicking sound does not mean that it is broken, just remove any obstruction and the item should function normally.

****No weight should be placed onto item****

Outdoor Warnings: For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
 Spring activated motion may cause injury if instructions are not followed correctly. Stay clear of item while operating.

Requires 4 AA Batteries
 or optional DC Adapter (6V 2A)
Surface washable only.
 ALL NEW MATERIALS:
 PLASTIC, POLYESTER,
 POLYESTER FIBER

RISING FROM THE GRAVE and
 RISING FROM THE GRAVE ZOMBIE
 are trademarks of Tekky Toys.
 Copyright © 2011 Tekky Toys.
 All Rights Reserved.



DO NOT RETURN THIS ITEM TO THE STORE!
 If experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.



visit us:
www.tekkytoys.com