


Rising from the Grave™ Reaper™ -- Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

1) Insert parts "A" and "B" onto the Base.

Note: Connect "A" to "A" and "B" to "B".
Press to make sure supports are FLUSH with the rectangular base.

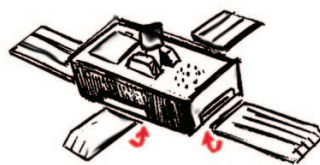

2) Place Sand Bags on Long Supports ("A") to increase stability.

Note: Fill included sand bags with sand (sand not included) and secure tightly.
Place the filled bags of sand into fabric bags and zip closed.



3) Connect Poles "C" together and insert into receptacle on Base.

Note: Adjust and align the snap lock with the indentation inside the pole.



Insert into base.


4) Place the Reaper Head with Fabric on top of the pole.

Note: Adjust and align the snap lock with the indentation inside the pole.



5) Drape Fabric down over Pole and Base.

Note: Completely cover the rectangular base to enhance the appearance of the Corpse.
Two pockets are located on the fabric (Front and Back).
Insert the Long Supports ("A") into the Fabric Pockets.

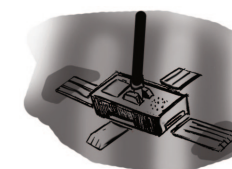

6) Plug cable located inside of fabric to jack extending from base.

7) For sound activation place the switch located on the base in the "ON" position. Clap or make a loud sound to activate. For remote control activation place the switch in the "REMOTE" position. Press button on remote to activate.

4 "AA" Batteries or *DC Adapter is required for operation. One 9 Volt battery is required for remote control use.
*DC Adapter is sold separately and can be purchased at: www.tekkytoys.com
Batteries are NOT included.

Optional Footpad Setup

Follow Steps 1 through 6 on initial installation first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on the base.
2. Place the switch on the base into the 'REMOTE' position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

*footpads are sold separately and can be purchased at www.tekkytoys.com

Surface washable only.

ALL NEW MATERIALS: PLASTIC, POLYESTER,
POLYESTER FIBER

Battery powered (4 "AA", 1 "9-volt")
or optional DC Adapter (6 V 2A)

DC Adapter can be purchased at www.tekkytoys.com

Batteries NOT included.

RISING FROM THE GRAVE and
RISING FROM THE GRAVE REAPER
are trademarks of Tekky Toys.
Copyright © 2007 Tekky Toys.
All Rights Reserved.

MADE IN CHINA.

If you hear a constant "clicking" sound and this item does not function properly, it means that there is an obstruction preventing the pole from lowering fully (for example: rock, bush, incline, etc.). The clicking sound does not mean that it is broken, just remove any obstruction and the item should function normally.

Outdoor Warnings:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32° F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning: This item is not a toy. For Decoration only. Small parts, choking hazard.
This product is intended for use by persons 14 years of age and older.
Not intended for use by children 13 years of age and younger.

⚠ WARNING

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
Spring activated motion may cause injury if instructions are not followed correctly.
Stay clear of item while operating.



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to
www.tekkytoys.com for assistance.



Visit us at:
www.tekkytoys.com



6 69703 53502 0
Manufactured for and distributed by
Tekky Toys, Orland Park, IL, USA.

Tekky Toys Item #53502
RISING FROM THE GRAVE REAPER™