


Rocking Vampire™ Set up Instructions

- Carefully disconnect the 'TRY ME' wire from the module.
Note: Keep these instructions for future use and reference.
- Replace the batteries with brand new, fresh alkaline batteries or, connect your 6V 2A DC Adapter (sold separately).
Note: This item is shipped with batteries for demo purposes only.
- Take the module with the speaker side facing you, and insert bracket through black material (legs), into receptacles on module with feet.
*Note: Make sure to match up L to L and R to R.
Press hard to lock into place.*
- Insert end of POLE A into the receptacle labeled A on the HEAD (see Photo B).
Note: Twist to lock into place
- Insert end of POLE B into receptacle labeled B on the BRACKET.
Note: Twist to lock into place
- Connect WIRE labeled C into module port labeled C (see Photo C).
- Pull clothing up and Velcro clothing in 4 places to opposite Velcro on legs.
- Place foam piece on top of module against object you are mounting to (mounting object).
- Wrap Velcro strap over the top of the mounting object, down through the metal loop in front of the module, back up over the mounting object and adhere to the Velcro strip on the back of the module (see Illustration A).
*Note: Rocking Vampire™ needs to be tightly secured to mounting object, or swinging motion will not work properly. Vampire must be level when hung or he will not swing.
Hide or cut excess Velcro strap for a more realistic look.*
- Turn the switch located on the black module box to the 'ON' position.
- Clap or make a loud sound to activate the item.
Note: Leave the switch in the 'OFF' position when not in use to preserve the life of the batteries.

Optional Footpad Setup (footpads sold separately)

- Connect wire from the optional footpad to the jack labeled footpad located on the black module.
- Place the switch on the module to the 'FOOTPAD' position to enable footpad activation
- Step on footpad to activate the scary sequence.

Illustration A

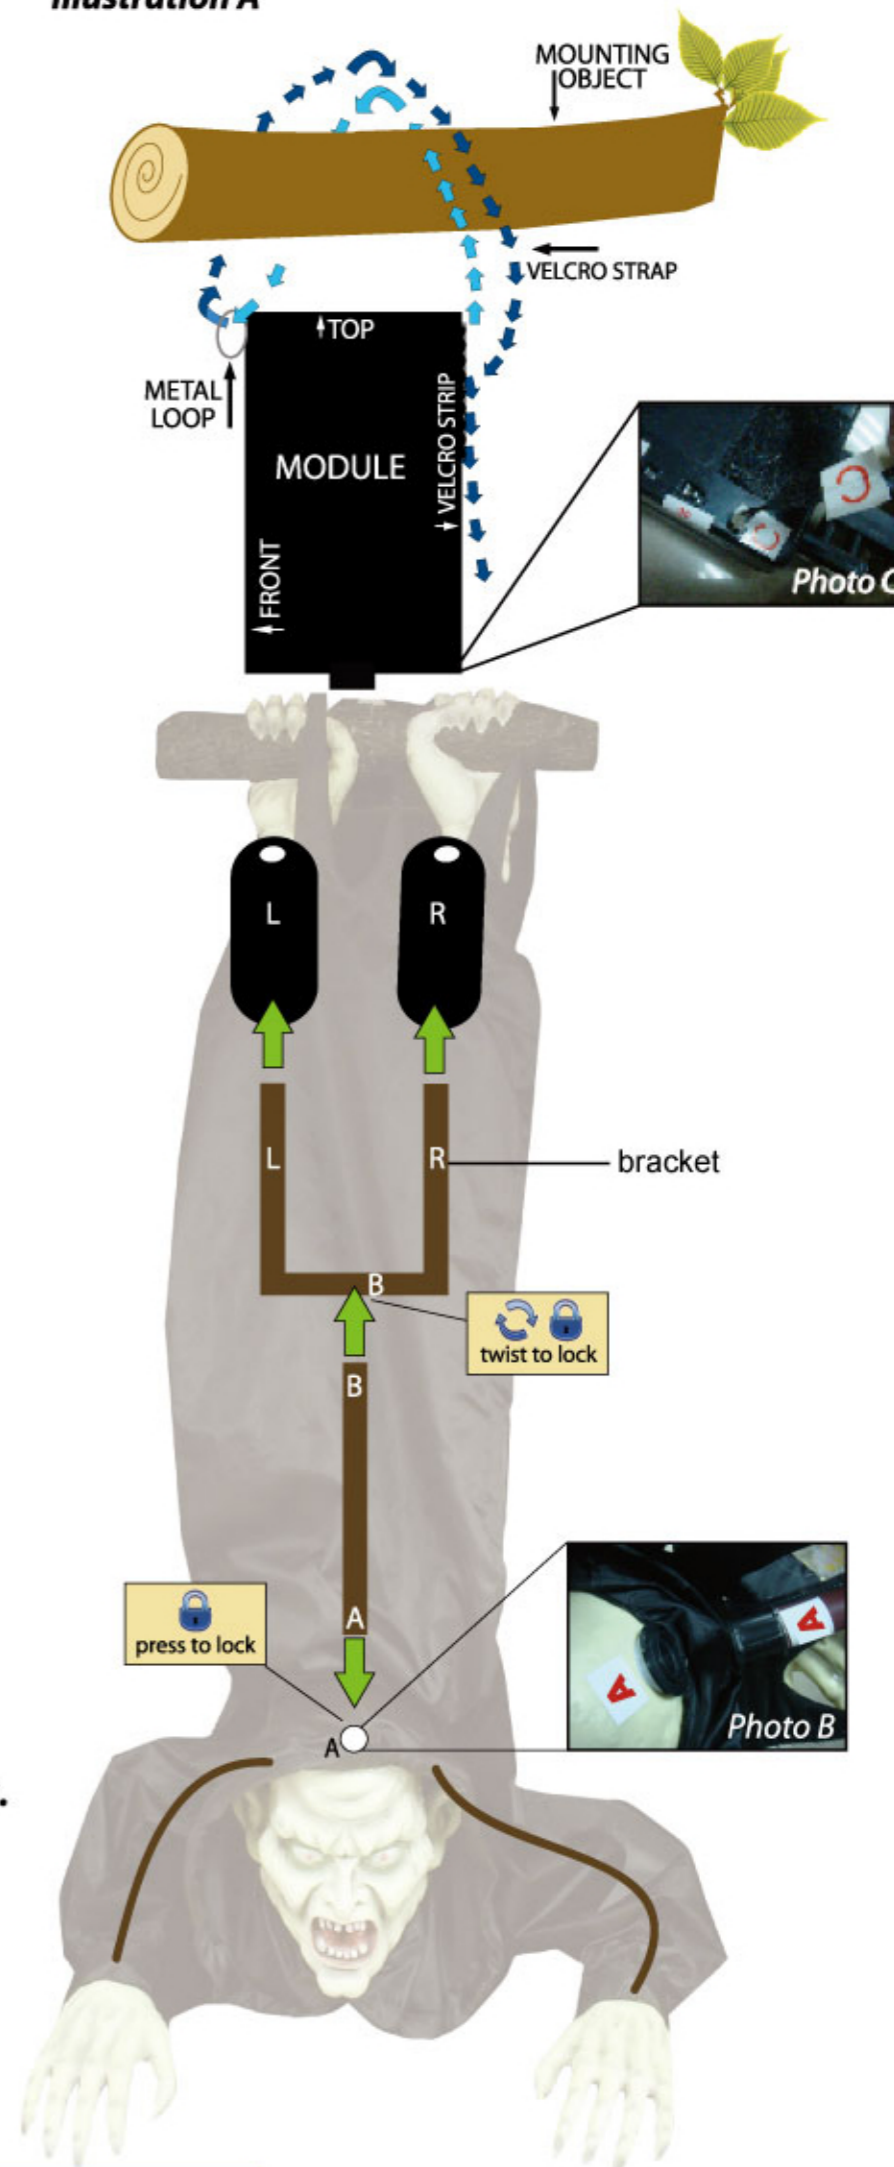

If you hear a constant "clicking" sound and this item does not function properly, it means there is an obstruction preventing the item from operating (for example: rock, brush, incline, etc.). The clicking sound does not mean that the item is broken, just remove any obstruction and the item should function normally.

CAUTION:

Spring activated motion may cause injury if instructions are not followed correctly. Do not turn on the item until you have completely finished assembly.

WARNING:

This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

OUTDOOR WARNING:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best in temperatures above freezing (32° F). Tekky Toys recommends using heavy-duty, alkaline batteries for best operating performance.

Powered by:
Battery (4 "AA")
or 6V 2A DC Adapter (sold separately)

Requires 4 "AA" Batteries

ALL NEW MATERIALS
PLASTIC, POLYESTER
Surface Washable Only.

ROCKING VAMPIRE is a
trademark of Tekky Toys.
Copyright © 2010 Tekky Toys.
All Rights Reserved.

MADE IN CHINA