



SMALL FLYING GHOST


Item# 56102e

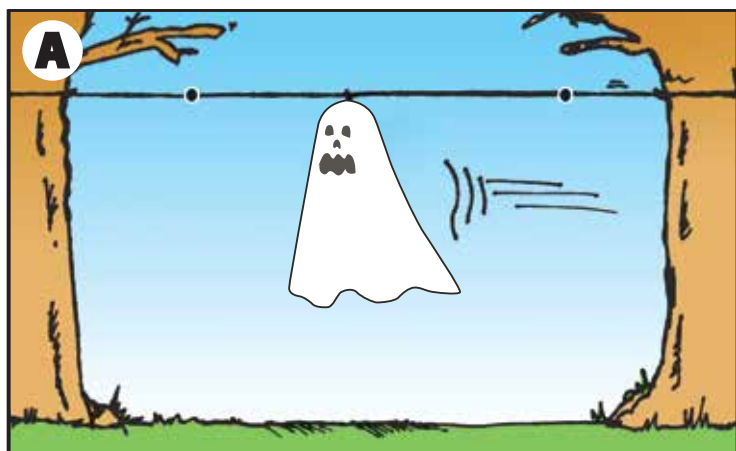


Keep cable as tight and horizontal as possible.

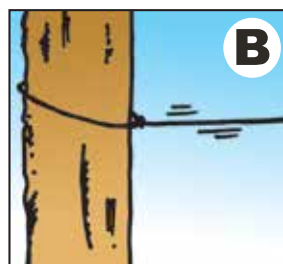

Hook cable around tree.

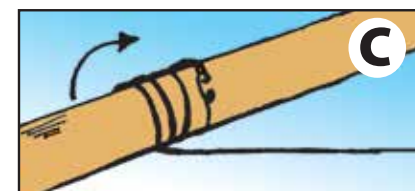

Wind cable around object. Tighten cable before winding.

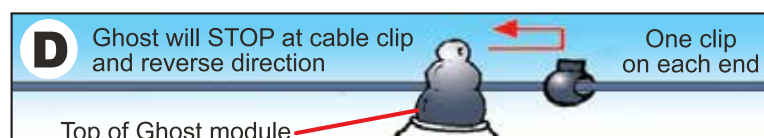

Position clips along cable to stop ghost where desired.


Setting Up Your Flying Ghost

For the best performance, we highly recommend keeping the cable perfectly horizontal (illus. A). Any incline or decline in the cable may cause the Flying Ghost to run poorly or stop!

- Be sure cable is pulled as tight as possible!
- Refer to illustrations B and C above for tips on fastening cable ends so there is no slack in the line.

Operating Instructions:

A 3-way switch is located near the battery compartment at the bottom of the plastic module.

The Flying Ghost has 3 operating modes: **OFF**, **ON** (with creepy sounds) and  (ON with NO sounds).


Flying Ghost is sound activated. Clap your hands or make a loud noise to begin the 'Flying' action. The ghost will travel back and forth along the cable, automatically reversing directions when reaching the cable end (or cable clips).

Operating Tips:

- Keep the cable free of debris, leaves, twigs, ice, etc.
- Keep ghost away from tree branches or other obstructions, which may hinder movement.
- Position the two clips along cable to **STOP** the ghost where desired (illus. D)

OUTDOOR WARNING: For best overall performance, we recommend you bring your Flying Ghost indoors during adverse weather conditions (extreme cold, strong wind and/or rain). The Flying Ghost operates best outdoors in temperatures above freezing (32° F). We recommend using heavy-duty, alkaline batteries for best operating performance.

WARNING! Small parts, choking hazard. This is not a toy. For decoration only. Strangulation Risk! Keep cables and wires away from children. This product is intended for use by persons 15 years of age and older. Not intended for use by children 14 years and younger.

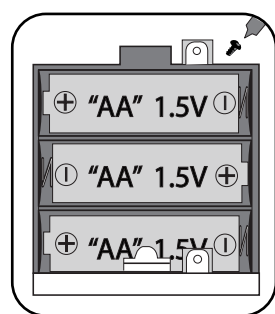

Uses 3 "AA" Batteries (not included)

Battery Instructions and Cautions:

- Use only the batteries recommended by the manufacturer.
 - Remove batteries when not in use.
 - Do NOT use rechargeable batteries.
 - Be sure to insert the batteries with the correct polarity +/-.
 - Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium.
 - Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.
- ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.



TEKKY

VISIT US AT TEKKYTOYS.COM

SCARY FLYING GHOST is a trademark of Tekky Toys.
Copyright © 2004 Tekky Toys. All Rights Reserved.
Protected by US and International patents.

Surface Washable Only.

NO WEIGHT SHOULD BE PLACED ON THIS ITEM.

ALL NEW MATERIALS:
Plastic, Polyester, Polyester Fiber

Battery Powered: Requires 3 "AA" Batteries (not included)



DO NOT RETURN THIS ITEM TO THE STORE
If you are experiencing technical difficulties,
please go to www.tekkytoys.com for assistance.