

SWIPING SCARECROW ANIMATED DECORATION™

INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

WARNING: DO NOT TURN ON THE PROP UNTIL FULLY ASSEMBLED. STAY CLEAR OF THE PROP WHILE OPERATING.

ESTIMATED ASSEMBLY TIME: 5 MINUTES.


PARTS

1.




1. HEAD WITH CLOTHES,
ARMS, BASE, &
CONTROL BOX

2.

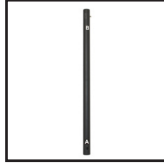

2. CENTER POLE

3.

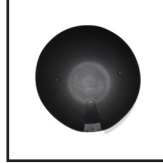

3. BOWL

4.



4. 6V 2A DC ADAPTER

ASSEMBLY



1. Insert and snap lock the
bottom of CENTER
POLE into BASE.

(MATCH A TO A)




2. Insert and snap lock the
top of CENTER POLE
into the neck on
HEAD WITH CLOTHES,
ARMS, BASE, &
CONTROL BOX.

(MATCH B TO B)



3. Open the slit under the
armpit of the HEAD
WITH CLOTHES, ARMS,
BASE, & CONTROL
BOX and connect the
right arm.

(MATCH C TO C)

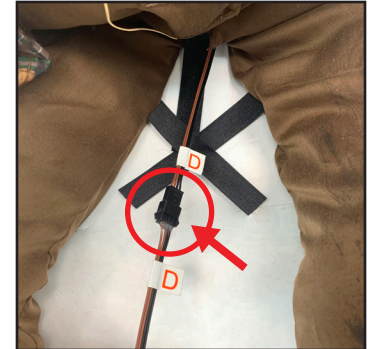


4. Connect the wire
located on CONTROL
BOX to wire on BOWL.

(MATCH D TO D -
Motion Sensor)



5. Attach the hook and
loop fasteners from
BOWL to the overalls.

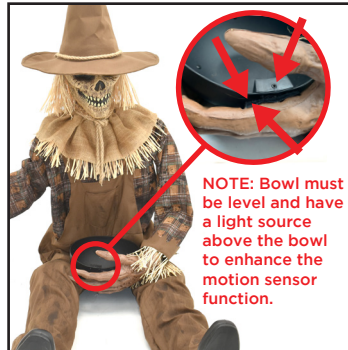

NOTE: Bowl must
be level and have
a light source
above the bowl
to enhance the
motion sensor
function.

6. Bend the arm wire to
attach the hook and
loop fasteners from
BOWL to the left hand.




7. Attach the hook and
loop fasteners from
the overalls to the shirt.




NOTE: Attach
hook and loop on
pants under chair
in seated position.
Pull hook and
loop tightly to
secure well.

8. Close the back of the
overalls. Position
in chair (not included),
and fill BOWL to lure
trick-or-treaters for a
scary surprise!

OPERATING INSTRUCTIONS

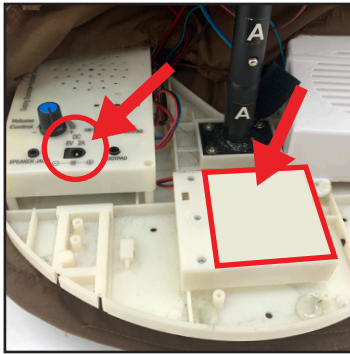

1. Plug in the 6V 2A DC ADAPTER (included) or insert 4 AA BATTERIES (not included) into the battery compartment located on the CONTROL BOX.

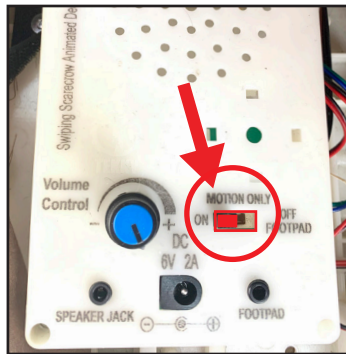

2. Turn the switch to the ON position for sound and movement activation. Noise or movement in the candy bowl will activate the item. Turn the switch to the MOTION ONLY position for movement activation. Only movement will activate the item. Turn item off when not in use. Adjust volume control knob as needed.



3. Allow the item to reset. Then, ensure the arms are posed as shown above.

OPERATING INSTRUCTIONS

OPTIONAL FOOTPAD SETUP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the CONTROL BOX.
2. Place the switch on the CONTROL BOX into the OFF FOOTPAD position to enable footpad activation.
3. Step on footpad to activate the scary sequence!


* Footpads are sold separately and can be purchased at www.tekkyaccessories.com




OPTIONAL EXTERNAL SPEAKER SETUP

EXTERNAL SPEAKER IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Turn the VOLUME CONTROL knob on the CONTROL BOX to highest level and use external speaker knob to control volume level.

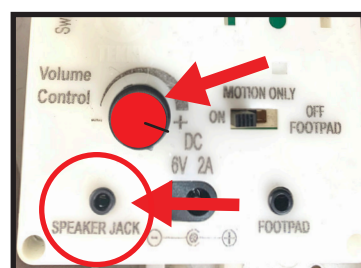

Battery Diagram

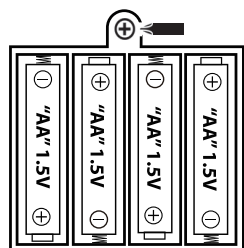

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult.
Remove batteries when not in use.

Use only batteries recommended in the instructions.

Do not mix new and used batteries.

Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.

Be mindful to insert batteries with the correct polarity (+/-) as indicated.

Remove all exhausted batteries.

Rechargeable batteries are only to be charged under adult supervision.

Rechargeable batteries are to be removed from the item before being charged.

Non-rechargeable batteries are not to be recharged.

The supply terminals are not to be short-circuited.

Always dispose of exhausted batteries properly.

Do NOT dispose of batteries in fire, they may leak or explode.

**Warning! This item is not a toy. For decoration only. Small parts, choking hazard.
This product is intended for use by persons 15 years of age and older.
Not intended for use by children ages 14 years and younger.**

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!

If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.



Visit us at tekkydesign.com

Requires 4AA batteries (not included) or 6V 2A DC adapter (included).

ALL NEW MATERIALS:
PLASTIC, FABRIC, METAL,
POLYPROPYLENE FOAM,
POLYURETHANE FOAM

Surface washable only.

Swiping Scarecrow
Animated Decoration™
is a trademark of Tekky.
Copyright © 2025 Tekky
All Rights Reserved.
FUN97937
MADE IN CHINA

SMART PHONE SCAN
SETUP VIDEO

