TERROR VISION[™] (SKULL) INSTALLATION AND OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

OPERATING INSTRUCTIONS

KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN

- 1. Insert 4 brand new 'AA' alkaline batteries (not included) into the battery compartment located on the back of the TV or connect the optional DC adapter (sold separately).
- 2. Place the switch on the back of the TV to the "ON" position. Make a loud sound to initiate scary sequence.
- 3. Place the switch to the "KNOB" position to activate using the right knob only.


NOTE: Keep the switch in the "OFF" position when not in use.

OPTIONAL FOOTPAD SETUP

Follow step #1 on initial installation first.

- 1. Connect the cable from the optional footpad to the jack labeled FOOTPAD located on the back of TV.
- 2. Place the switch on the back of TV into the 'FOOTPAD' position to enable FOOTPAD activation.
- 3. Step on FOOTPAD to activate the scary sequence.

*Footpads are sold separately and can be purchased at www.tekkyaccessories.com

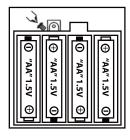

battery mistructions and cautions	
 Use only the batteries recommended by the manufacture 	er.

Remove batteries when not in use.

Pattony Instructions and Caution


- Do NOT use rechargeable batteries
- · Be sure to insert the batteries with the correct polarity +/-.
- Never mix different types of batteries: old and new, carbon-zinc, alkaline, nickel-cadmium or rechargeable.


• Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

WARNING: This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 and under.

WARNING DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY. STAY CLEAR OF ITEM WHILE **OPERATING. DO NOT PLACE ITEM ON UNEVEN GROUND.** DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION

Item# 58308

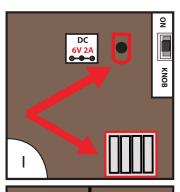

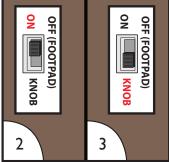



FOR FOOTPADS, ADAPTERS, AND ALL OTHER ACCESSORIES, PLEASE VISIT: www.tekkyaccessories.com



DO NOT RETURN THIS ITEM TO THE STORE!

STOP If experiencing technical difficulties, please go to tekkydesign.com for assistance.

Surface Washable Only.

ALL NEW MATERIALS : PLASTIC, POLYESTER

Requires 4'AA' Batteries (Not included) or 6V 2A DC adapter (Sold separately) TERROR VISION is a trademark of Tekky. Copyright © 2016 Tekky. All Rights Reserved. MADE IN CHINA

