


TWISTED JACK™

Installation and Operating Instructions





Keep all plastic and wire parts away from children.

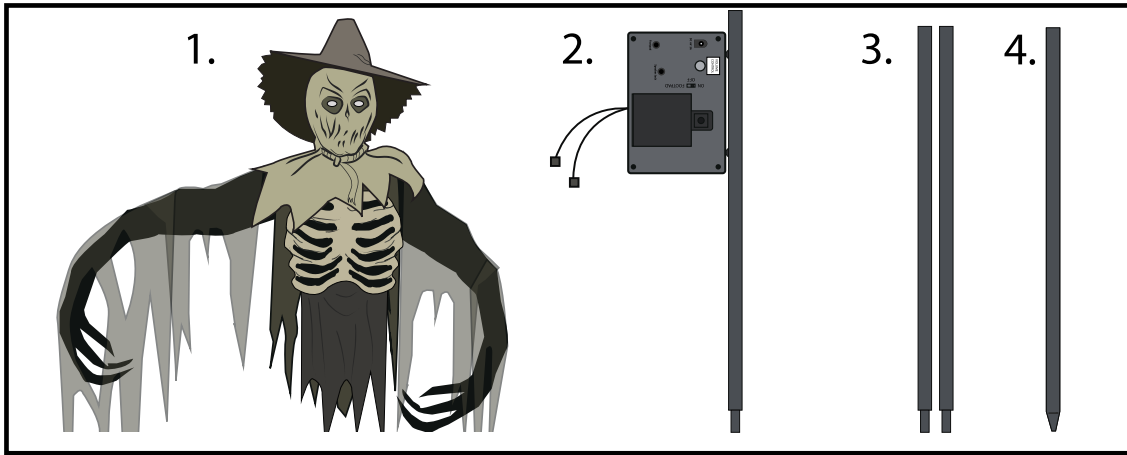

PARTS

1. BODY AND HEAD
2. SNAP LOCK POLE AND MODULE
3. CENTER SNAP LOCK POLES QTY 2
4. STAKE POLE

1. Insert STAKE POLE into CENTER SNAP LOCK POLE. (Match **A** to **A**)
2. Insert CENTER SNAP LOCK POLE into CENTER SNAP LOCK POLE. (Match **B** to **B**)
3. Insert CENTER SNAP LOCK POLE into SNAP LOCK POLE AND MODULE. (Match **C** to **C**)
4. Lift the clothing and insert the SNAP LOCK POLE AND MODULE into the BODY AND HEAD. (Match **D** to **D**)
5. Reach inside the BODY AND HEAD and connect the two wires located inside the clothing. (Match **E** to **E**) and (Match **F** to **F**)
6. Gently unbend and pose the arms as pictured.
*Make sure the motion sensor is clear from fabric and other obstructions.
7. Reach inside the fabric on the BODY AND HEAD. Connect 6V 2A ADAPTER (not included) or insert 4 AA alkaline batteries (not included) into the battery compartment located on the MODULE. Turn the switch to the ON position to activate the item. Move in front of the item or make a loud sound (clap) to activate. Turn item OFF when not in use.

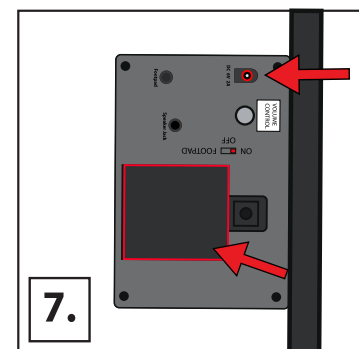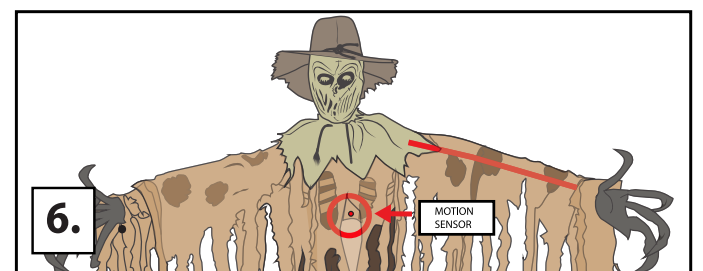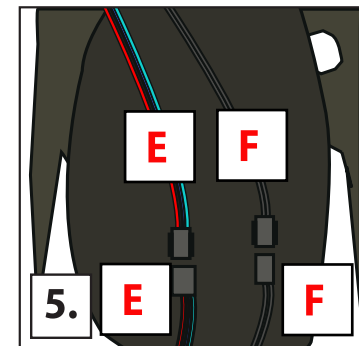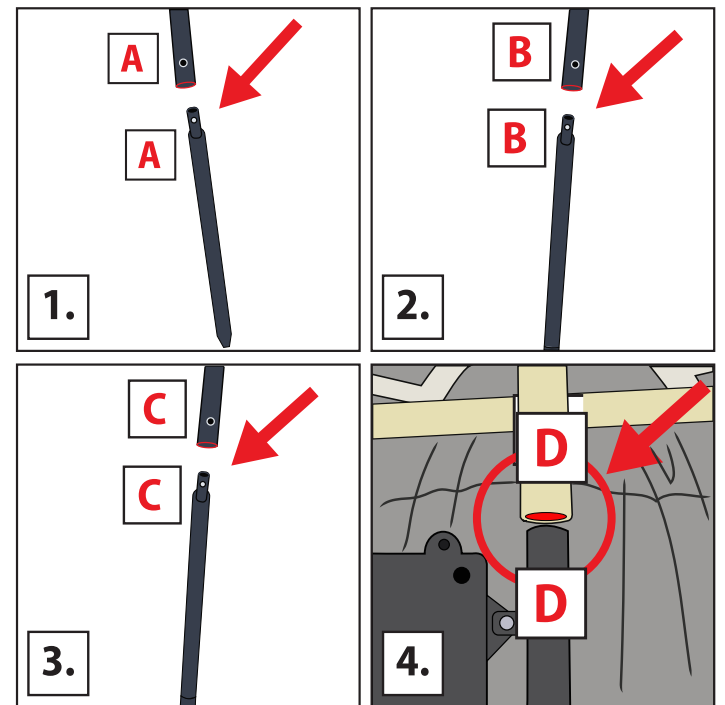

STAKED SET-UP

USE A SCREW DRIVER OR OTHER TOOL TO START A STAKE HOLE IN THE GROUND. USING BOTH HANDS FIRMLY PUSH THE METAL STAKE INTO THE GROUND DEEP ENOUGH SO THE SCARECROW WILL NOT FALL OVER.

HANGING SET-UP

LOCATE THE METAL LOOP ON THE BACK OF TWISTED JACK'S™ HEAD & MOUNT THE ITEM TO THE WALL, FRONT DOOR OR ANY DESIRED LOCATION.

OPTIONAL FOOTPAD SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.

1. Insert the cable from optional footpad into the jack labeled FOOTPAD on the MODULE.
2. Place the switch in the FOOTPAD position to enable FOOTPAD activation.
3. Step on the FOOTPAD to activate the scary sequence!

* Footpads and adapters are sold separately and can be purchased at www.tekkyaccessories.com

SMART PHONE SCAN SETUP VIDEO



visit us at tekkydesign.com
Requires 6V 2A ADAPTER (not included) or 4AA batteries (not included)

ALL NEW MATERIALS:
METAL, FOAM, PLASTIC, POLYESTER
Surface washable only.
TWISTED JACK™ is a trademark of Tekky.
Copyright © 2020 Tekky.
All Rights Reserved.
MADE IN CHINA

BATTERY DIAGRAM

BATTERY INSTRUCTIONS AND CAUTIONS

Battery installation and removal should be performed by an adult. Remove batteries when not in use. Use only batteries recommended in the instructions. Do not mix new and used batteries. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries. Be mindful to insert batteries with the correct polarity (+/-) as indicated. Remove all exhausted batteries. Rechargeable batteries are only to be charged under adult supervision. Rechargeable batteries are to be removed from the item before being charged. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Always dispose of exhausted batteries properly. Do NOT dispose of batteries in fire, they may leak or explode.

Warning! This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 15 years of age and older. Not intended for use by children ages 14 years and younger.

WARNING
DO NOT TURN ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.
STAY CLEAR OF ITEM WHILE OPERATING.
DO NOT PLACE ITEM ON UNEVEN GROUND.
DO NOT PLACE WEIGHT ON ITEM WHILE IN OPERATION.



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkydesign.com for assistance.

