

WITCH'S BREW!™

Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

PARTS INCLUDED:

- BOTTOM BASE (1)
- POLE (labeled A) (12)
- PLATE WITH HEAD (1)
- CAULDRON (1)
- ARM (labeled B) (2)
- STIRRING STICK (2)
- YARD STAKE (3)

- 1) Place BOTTOM BASE on level ground with snap-locks facing up.**
Note: If using in sheltered outdoor area with soft ground, use "L"-shaped metal YARD STAKES included to secure BOTTOM BASE (use 2) and CAULDRON (use 1).
- 2) Connect POLES labeled "A" together (creates 4 poles).**
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 3) Insert all four POLES onto snap-locks on the BOTTOM BASE.**
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 4) Insert PLATE WITH HEAD onto top of POLES.**
Note: Witch's face should face same direction as arrow points on bottom BASE.
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 5) Insert ARMS "B" (L-shaped pieces) into ARM JOINTS "B".**
Note: ARM JOINTS located on PLATE WITH HEAD.
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 6) Connect the 2 wires (coming from Cauldron, and from Witch's PLATE WITH HEAD) labeled "C" together.**
- 7) Insert fresh new alkaline batteries into battery compartment (located on PLATE WITH HEAD), or connect DC adapter.**
- 8) Connect two loose pieces of STIRRING STICK together with STIRRING STICK attached to hand.**
Note: Twist to lock.
Note: Place BROOM POLE into cauldron - which should be close to the Witch so that the LIGHTS shine on the Witch's Face. Align the LED light inside the Cauldron facing the Witch's Face for optimum lighting result.
- 9) Secure wrist straps on fabric sleeves to indentations on wrists.**
- 10) Turn SWITCH (located on back of PLATE WITH HEAD) to "ON" to operate in Timer/Sound mode (Witch will function with 2 minute breaks between cycles - or, clap during 2 minute break to instantly start Witch playing again).**
Note: With DC ADAPTER plugged in, Witch will operate continuously with no breaks. So, make sure to unplug when not in use.
Note: In battery powered operation, leave switch in OFF position when not in use to preserve the life of the batteries.
- 11) Drape FABRIC CLOAK over Witch.**
Note: Release fabric and drape over Witch as shown in above illustration.



Optional Footpad Setup

Follow initial installation instructions first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on PLATE WITH HEAD.
2. Place the switch on the PLATE WITH HEAD into the position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence

*footpads are sold separately and can be purchased at www.tekkytoys.com

Warning: This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

WARNING
DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

Outdoor Warnings:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

***** No weight should be placed on the item. *****

Caution:
Do not touch cords, or any part connected when plugged in.
Do not operate in wind/rain.
Do not operate until you have completely finished assembly.
For best overall performance, please shut off when not in use.

Powered by Battery (3 "AA") or 4.5V 1 A DC Adapter (optional)
Optional footpad and/or DC Adapter are sold separately and can be purchased at www.tekkytoys.com.

Requires 3 "AA" Batteries

Create your own Halloween scene with all of Tekky Toys' animated products!

www.tekkytoys.com

ALL NEW MATERIALS: PLASTIC, POLYESTER, POLYESTER FIBER
Surface washable only.
WITCH'S BREW! is a trademark of Tekky Toys.
Copyright © 2007 Tekky Toys. All rights reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com.



WITCH'S BREW!™

Installation and Operating Instructions

REMOVE ALL PARTS FROM PACKAGING.
KEEP ALL PLASTIC AND WIRE PARTS AWAY FROM CHILDREN.

PARTS INCLUDED:

- BOTTOM BASE (1)
- POLE (labeled A) (8)
- PLATE WITH HEAD (1)
- CAULDRON (1)
- ARM (labeled B) (2)
- STIRRING STICK (1)
- YARD STAKE (3)

- 1) Place BOTTOM BASE on level ground with snap-locks facing up.**
Note: If using in sheltered outdoor area with soft ground, use "L"-shaped metal YARD STAKES included to secure BOTTOM BASE (use 2) and CAULDRON (use 1).
- 2) Connect POLES labeled "A" together (creates 4 poles).**
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 3) Insert all four POLES onto snap-locks on the BOTTOM BASE.**
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 4) Insert PLATE WITH HEAD onto top of POLES.**
Note: Witch's face should face same direction as arrow points on bottom BASE.
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 5) Insert ARMS "B" (L-shaped pieces) into ARM JOINTS "B".**
Note: ARM JOINTS located on PLATE WITH HEAD.
Note: Adjust and align the snap-lock with the indentation inside the pole.
- 6) Connect the 2 wires (coming from Cauldron, and from Witch's PLATE WITH HEAD) labeled "C" together.**
- 7) Insert fresh new alkaline batteries into battery compartment (located on PLATE WITH HEAD), or connect DC adapter.**
- 8) Connect 1 loose piece of STIRRING STICK together with STIRRING STICK attached to hand.**
Note: Twist to lock.
Note: Place BROOM POLE into cauldron - which should be close to the Witch so that the LIGHTS shine on the Witch's Face. Align the LED light inside the Cauldron facing the Witch's Face for optimum lighting result.
- 9) Secure wrist straps on fabric sleeves to indentations on wrists.**
- 10) Turn SWITCH (located on back of PLATE WITH HEAD) to "ON" to operate in Timer/Sound mode (Witch will function with 2 minute breaks between cycles - or, clap during 2 minute break to instantly start Witch playing again).**
Note: With DC ADAPTER plugged in, Witch will operate continuously with no breaks. So, make sure to unplug when not in use.
Note: In battery powered operation, leave switch in OFF position when not in use to preserve the life of the batteries.
- 11) Drape FABRIC CLOAK over Witch.**
Note: Release fabric and drape over Witch as shown in above illustration.



Optional Footpad Setup

Follow initial installation instructions first.

1. Connect wire from the optional footpad to the jack labeled FOOTPAD located on PLATE WITH HEAD
2. Place the switch on the PLATE WITH HEAD into the position to enable FOOTPAD activation.
3. Step on FOOTPAD to activate the scary sequence.

*footpads are sold separately and can be purchased at www.tekkytoys.com

Optional Fog Machine Setup

Follow initial installation instructions first.

1. The flexible hose for the fog machine connection has one side opening which is large for fog machine to the cauldron, the other side is for fog machine only. Connect flexible hose to the back of the cauldron.
2. Mount metal ring to nozzle on fog machine and tighten screws to hold in place.
3. Place other end of flexible hose onto prongs coming from metal ring. (Make sure to leave 1-2 inches space between nozzle and opening of flexible hose)

-OR-

Safely place your own fog mister or fog machine inside the Witch's Cauldron for a spooky affect.

*fog machine sold separately.

Outdoor Warnings:

For best overall performance, we recommend you operate your item in a sheltered outdoor area. We also recommend you bring your item indoors during adverse weather (extreme cold, strong winds and/or rain). This item operates best outdoors in temperatures above freezing (32°F). Tekky Toys recommends using fresh alkaline batteries for best operating performance.

Warning: This item is not a toy. For decoration only. Small parts, choking hazard. This product is intended for use by persons 14 years of age and older. Not intended for use by children 13 years of age and younger.

*****No weight should be placed on the item.*****
Caution:
Do not touch cords, or any part connected when plugged in.
Do not operate in wind/rain.
Do not operate until you have completely finished assembly.
For best overall performance, please shut off when not in use.

WARNING

DO NOT TURN THIS ITEM ON UNTIL YOU HAVE COMPLETELY FINISHED ASSEMBLY.

Powered by Battery (3 "AA") or 4.5V 1 A DC Adapter (optional)
Optional footpad and/or DC Adapter are sold separately and can be purchased at www.tekkytoys.com.

Requires 3 "AA" Batteries

Create your own Halloween scene with all of Tekky Toys' animated products!

www.tekkytoys.com

ALL NEW MATERIALS: PLASTIC, POLYESTER, POLYESTER FIBER
Surface washable only.
WITCH'S BREW! is a trademark of Tekky Toys.
Copyright © 2007 Tekky Toys. All rights reserved.
MADE IN CHINA



DO NOT RETURN THIS ITEM TO THE STORE!
If experiencing technical difficulties, please go to www.tekkytoys.com.

