HAUNTED LIVING™

HAUNTED LIVING and logo design are trademarks
or registered trademarks of LF, LLC. All rights reserved.

ITEM #5748064
MODEL #61095

BLUETOOTH® REAPER WITH KEYBOARD

ATTACH YOUR RECEIPT HERE



TEKKY™

Serial Number _____

Purchase Date _____

Thank you for purchasing this HAUNTED LIVING product.
Questions, problems or missing parts?
Before returning, contact us on:
888-251-1006, 8 a.m. - 8 p.m., EST, Monday - Sunday or **ascs@lowes.com.**

SG24198

TABLE OF CONTENTS

Package Contents..... 3

Safety Information..... 4

Preparation..... 4

Assembly Instructions..... 5

Care and Maintenance..... 10

Troubleshooting..... 10

PACKAGE CONTENTS

















PART	DESCRIPTION	QUANTITY
1	Metal Base	1
2	Lower Poles with Control Box, 6V 2A Adapter, and Input Output Wire	2
3	Spine Frame	1
4	Keyboard Pole	1
5	Keyboard Frame	1
6	Fabric	1
7	Head & Body	1
8	Back Frame	1
9	Arms	2
10	Keyboard and Webbing	1
11	Snap Lock Removal Tool	1
12	AA Batteries	4









⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

BATTERY INSTRUCTIONS:

1. Includes (4) AA 1.5-volt batteries. Batteries are not rechargeable.
2. Battery installation and removal should be performed by an adult. Batteries are harmful if swallowed. Keep away from young children.
3. Remove batteries when not in use.
4. Do not mix new and used batteries.
5. Do not mix alkaline, carbon-zinc, nickel-cadmium, rechargeable or different types of batteries.
6. Be mindful to insert batteries with the correct polarity (+/-) as indicated.
7. Remove all exhausted batteries.
8. Rechargeable batteries are only to be charged under adult supervision.
9. Rechargeable batteries are to be removed from the item before being charged.
10. Non-rechargeable batteries are not to be recharged.
11. The supply terminals are not to be short-circuited.
12. Always dispose exhausted batteries properly.
13. DO NOT dispose of batteries in fire, they may leak or explode.

⚠ WARNING

• Warning: Risk of injury to persons. Read and understand instruction manual before use.
• Warning: CHOKING HAZARD! Small parts. This item is not a toy. For decoration only.
• Do not turn item on until you have completely finished assembly.
• Intended for indoor use only.
• Stay clear of item while operating.
• Do not place item on uneven ground.
• Do not place weight on item while in operation, except on the metal base.

PREPARATION

ADULT ASSEMBLY REQUIRED

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part are missing or damaged, do not attempt to assemble the product.


A small crosshead/Phillips screwdriver is required to remove the battery compartment cover on the control box.

Estimated Assembly Time: 6 minutes

ASSEMBLY INSTRUCTIONS

1. Insert and snap lock the LOWER POLES WITH CONTROL BOX into the METAL BASE.

   (Match A to A), (Match B to B)

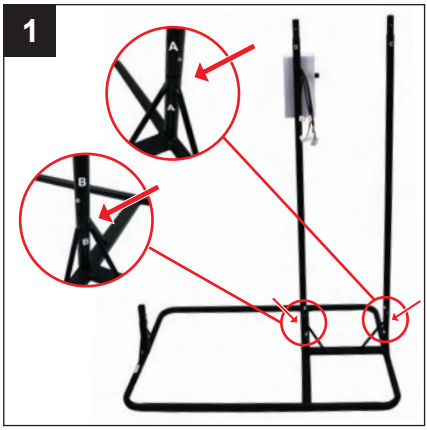

2. Insert and snap lock the SPINE FRAME into the LOWER POLES WITH CONTROL BOX.

   (Match C to C), (Match D to D)



3. Insert and snap lock the KEYBOARD POLE into the METAL BASE.

   (Match E to E)



ASSEMBLY INSTRUCTIONS

4. Insert and snap lock the KEYBOARD FRAME onto the KEYBOARD POLE.


   (Match F to F)

   From the front, hook the FABRIC's elastic onto the KEYBOARD FRAME. Adjust the FABRIC over the hooks as seen in diagram.



5. Insert the two posts on the WIRE BACK FRAME into the SPINE FRAME.

   (Match Yellow to Yellow), (Match Blue to Blue)

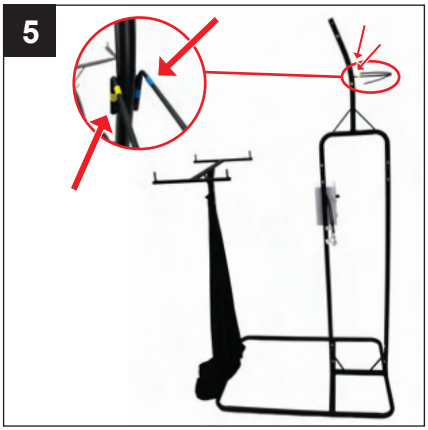

6. Snap lock the HEAD & BODY to the SPINE FRAME.

   (Match G to G)



7. Slide the LEFT ARM and its wire up the left sleeve and insert and snap lock it into HEAD & BODY shoulder frame.

   (Match H to H)

   Hook and loop fasten the left sleeve to the left hand.



8a. Slide the RIGHT ARM up the right sleeve and insert and snap lock it into the HEAD & BODY shoulder frame.


   (Match I to I)

   Hook and loop fasten the right sleeve to the right hand.



8b. For storage: Disassemble the RIGHT ARM pole from the right hand with the SNAP LOCK REMOVAL TOOL.

   (Disconnect J to J)

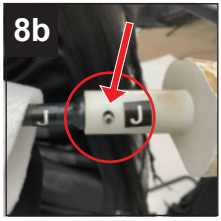

9. Insert the four posts located on the KEYBOARD FRAME into the holes located on the bottom of the KEYBOARD.

   Adjust the FABRIC over the METAL BASE. Adjust the WEBBING over the front of the KEYBOARD and KEYBOARD POLE.



10. Connect the wires located on the HEAD & BODY to the CONTROL BOX.

    (Connect K to K), (Connect L to L)

    Connect the wire located on the LEFT ARM to the CONTROL BOX.

    (Connect M to M)

    Connect the wire located on the KEYBOARD to the CONTROL BOX.


    (Connect N to N)



11. Check that the 6V 2A ADAPTER located on the CONTROL BOX is plugged in, or unplug the 6V 2A ADAPTER and insert 4 AA BATTERIES (included) into the battery compartment located on the CONTROL BOX.

    Move in front of the item or make a loud sound (clap) to activate the item. This mode will play the Reaper Band song and also send a signal to a follower device/additional band member when wired together on the control box. (Additional band member sold separately)

    Turn item to DEMO/OFF position when not in use.

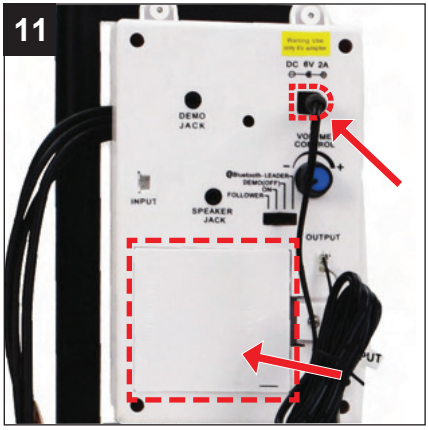

12. Adjust the HEAD & BODY's clothing over the WIRE BACK FRAME and METAL BASE.




OPERATING/BLUETOOTH PAIRING INSTRUCTIONS

ON SWITCH POSITION

Move the switch to the ON position located on the control box.

Move in front of the item or make a loud sound (clap) to activate the item. This mode will play the Reaper Band song and also send a signal to a follower device/additional band member when wired together on the control box.

Turn item to DEMO/OFF position when not in use.

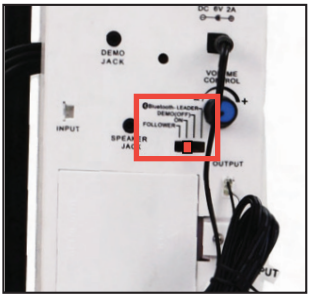


BLUETOOTH® LEADER SWITCH POSITION

Move the switch to the BLUETOOTH® LEADER position on the control box to play your own music/playlist. Locate the name REAPER BAND on your phone/device and pair.

When your music is playing the item will automatically activate.

FOLLOWER SWITCH ONLY USED WITH ADDITIONAL ITEM.
FORGET/UNPAIR YOUR DEVICE TO CONNECT TO A NEW DEVICE.

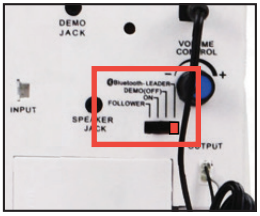



LEADER SWITCH POSITION **FOLLOWER SWITCH POSITION**

OPTIONAL MULTIPLE ITEM BAND SETUP

1. Insert the INPUT/OUTPUT WIRE into the OUTPUT jack.
2. Move the switch into the BLUETOOTH® LEADER postion.
3. Insert the INPUT/OUTPUT WIRE into the INPUT jack on the second band member.
4. Move the switch on the second band member to FOLLOWER.

LEADER



FOLLOWER






LEADER SWITCH POSITION **FOLLOWER SWITCH POSITION**

OPTIONAL DEMO AND EXTERNAL SPEAKER SET UP

OPTIONAL DEMO SET UP

FOOTPAD IS NOT INCLUDED. MUST BE PURCHASED SEPARATELY.


1. Insert the cable from optional footpad into the jack labeled DEMO JACK on the CONTROL BOX.
2. Place the switch in the DEMO (OFF) position to enable DEMO activation.
3. Step on the footpad or external switch to activate the scary sequence!

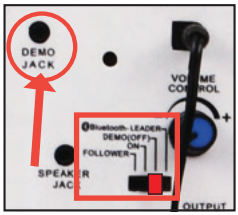

OPTIONAL EXTERNAL SPEAKER SET UP

EXTERNAL SPEAKER IS NOT INCLUDED.
MUST BE PURCHASED SEPARATELY.

1. Plug speaker cord into the jack labeled SPEAKER JACK located on the CONTROL BOX.
2. Use volume knob on external speaker to control volume levels.

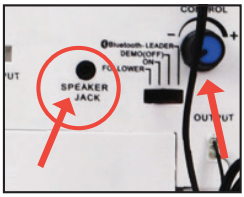

CARE AND MAINTENANCE

- STORE IN A COOL AND DRY ENVIRONMENT.
- INTENDED FOR INDOOR USE ONLY.
- SURFACE WASHABLE ONLY. DO NOT USE ANY HARSH OR ABRASIVE CLEANING AGENTS.
- REMOVE BATTERIES WHEN STORING ITEM FOR LONG PERIOD OF TIME.
- DESIGNED FOR SEASONAL OPERATION ONLY.
- NOT INTENDED FOR CONSTANT OR LONG-TERM USE.
- PROPER STORAGE AND USE ARE ESSENTIAL TO THIS ITEM'S LONGEVITY.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Item will not activate.	• 6V 2A adapter is not plugged in. • Batteries are not inserted correctly.	• Check 6V 2A adapter is plugged in and securely inserted into the control box. • Install batteries with positive and negative in the correct positions.
You only hear item sound but no item activation.	• Control Box wires to the left arm and head are not connected correctly.	• Make sure the control box wires labeled L, M , and K are securely connected.
You cannot connect to Bluetooth® on NEW device.	• Prior device is still connected to REAPER BAND Bluetooth®.	• Unpair/forget prior Bluetooth® device.
Item has no sound while operating.	• Volume knob is turned all the way down.	• Adjust volume knob to desired volume.

FCC REGULATION

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID: 2AAAI-REAPER-BAND

To comply with FCC's RF radiation exposure limits for general population/uncontrolled exposure, this device must be installed to provide a separation distance of at least 20cm from all persons.
WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Printed in China